

FLIGHT MANUAL

EC 120 B

TRANSPORT CANADA TYPE APPROVAL No H-102


REGISTRATION No

SERIAL No

APPROVED BY
LA DIRECTION GÉNÉRALE DE
L'AVIATION CIVILE

BY

DATE 13 DEC. 1996

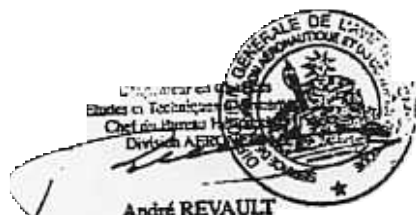

THE EFFECTIVITY OF THIS MANUAL AT THE LATEST REVISION IS SPECIFIED ON THE EFFECTIVE PAGES.

IT IS THE OPERATOR'S RESPONSIBILITY TO MAINTAIN THIS MANUAL IN A CURRENT IN ACCORDANCE WITH THE LIST OF EFFECTIVE PAGES.

THIS ROTORCRAFT FLIGHT MANUAL IS APPROVED FOR CANADIAN REGISTERED AIRCRAFT IN ACCORDANCE WITH THE CANADIAN AIRWORTHINESS MANUAL. THE TRANSPORT CANADA FLIGHT MANUAL CONSISTS OF ALL UNCODED AND CODED PAGES MARKED "DGAC APPROVED".

THIS DOCUMENT SHALL BE CARRIED IN AIRCRAFT AT ALL TIMES.



EUROCOPTER Direction Technique Support
Aéroport International Mirabel-Provence 13775 Marguèrite Cedex - France

DGAC APPROVED
ORIGINAL ISSUE : JUNE 1997



TITLE

LIST OF CONDITIONAL REVISIONS (CR) EFFECTIVE PAGES

This manual assigned to the helicopter mentioned on the title page, contains the following pink pages except those cancelled when the conditions are complied with.

CAUTION

If a normal revision (NR) modifies the page number for any information concerned below, the reader will have to change the number of the pink page by hand, so that the information remains in accordance with the paragraph concerned.

No	PAGE	DATE	REMARKS / EFFECTIVITY

LIST OF INTERMEDIATE TEMPORARY REVISIONS (ITR) EFFECTIVE PAGES

The manual contains the following additional yellow pages.

No	PAGE	DATE		No	PAGE	DATE

Replace page A1 by the following :

LIST OF APPLICABLE CONDITIONAL REVISIONS (RC) PAGES

This manual assigned to the helicopter mentioned on the title page, contains the following pink pages except those canceled when the conditions are complied with.



If a normal revision (NR) modifies the page number for any information concerned below, the reader will have to change the number of the pink page by hand, so that the information remains in accordance with the paragraph concerned.

No	PAGE	DATE	APPLICABLE BEFORE CONDITION IS MET :
RC 1	2 - 5	SEPT.99	SB N°32-001 (Skid blades landing gear) and Mod. N° A 00075 (installation of tail skid)
RC 1	5 - 7	NOV.00	SB N°32-001 (Skid blades landing gear) and Mod. N° A 00075 (installation of tail skid)
RC 1	5 - 8	NOV.00	SB N°32-001 (Skid blades landing gear) and Mod. N° A 00075 (installation of tail skid)
RC 2	2 - 1	SEPT.99	SB N°34-001 (Cabin adaptation for night VFR)
RC 2	2 - 14	SEPT.99	SB N°34-001 (Cabin adaptation for night VFR)
RC 2	2 - 15	SEPT.99	SB N°34-001 (Cabin adaptation for night VFR)
RC 3	4 - 5	SEPT.99	SB N°76-002 (Engine controls)
RC 3	4 - 6	SEPT.99	SB N°76-002 (Engine controls)
RC 4	2 - 10	JULY 00	SB N°28-007 (Use of IP 4 and JET B)
RC 4	2 - 18	JULY 00	SB N°28-007 (Use of IP 4 and JET B)

LIST OF APPLICABLE CONDITIONAL REVISIONS (RC) PAGES

This manual assigned to the helicopter mentioned on the title page, contains the following pink pages except those canceled when the conditions are complied with.

CAUTION

If a normal revision (NR) modifies the page number for any information concerned below, the reader will have to change the number of the pink page by hand, so that the information remains in accordance with the paragraph concerned.

No	PAGE	DATE	APPLICABLE BEFORE CONDITION IS MET :
RC 1	2 - 5	SEPT.99	SB N°32-001 (Skid blades landing gear) and Mod. N° A 00075 (installation of tail skid)
	5 - 7	NOV.00	SB N°32-001 (Skid blades landing gear) and Mod. N° A 00075 (installation of tail skid)
	5 - 8	NOV.00	SB N°32-001 (Skid blades landing gear) and Mod. N° A 00075 (installation of tail skid)
RC 2	2 - 1	SEPT.99	SB N°34-001 (Cabin adaptation for night VFR)
	2 - 14	SEPT.99	SB N°34-001 (Cabin adaptation for night VFR)
	2 - 15	SEPT.99	SB N°34-001 (Cabin adaptation for night VFR)
RC 3	4 - 5	OCT.01	SB N°76-002 (Engine controls)
	4 - 6	SEPT.99	SB N°76-002 (Engine controls)
RC 4	2 - 10	JULY 01	SB N°28-007 (Use of JP 4 and JET B)
	2 - 18	JULY 00	SB N°28-007 (Use of JP 4 and JET B)

**LIST OF APPLICABLE CONDITIONAL REVISIONS (RC)
PAGES (CONT'D)**

No	PAGE	DATE	APPLICABLE BEFORE CONDITION IS MET :
RC 5	3 - 20	OCT 01	SB N° 21.008 (P2 TEMP warning light)

LIST OF VALID CONDITIONAL REVISIONS (RC) PAGES

This manual assigned to the helicopter mentioned on the title page, contains the following conditional revisions printed on pink pages after the last indicated date.

CAUTION

If a normal revision (NR) modifies the page number for any information concerned below, the reader will have to change the number of the pink page by hand, so that the information remains in accordance with the paragraph concerned.

DATE	NAME	SB N°	Embodiment of SB		VALID RC N°	VISA
			Yes	No		
	<i>J</i>	32-001 and A 00075	<i>X</i>		RC 1	<i>J. K. 9.7.207</i>
		34-001			RC 2	
		76-002			RC 3	

EXAMPLE
OF A LIST OF VALID CONDITIONAL REVISIONS (RC)
PAGES

This page must not be included in Flight Manual.

Suppose SB 34-001 and SB 76-002 are embodied.

The corresponding RC are crossed-out by the user and removed from the Flight Manual.

DATE	NAME	SB N°	Embodiment of SB		VALID RC N°	VISA
			Yes	No		
01.09.99	USER	32-001 and A 00075		X	RC 1	@
01.09.99	USER	34-001	X		RC 2	@
01.09.99	USER	76-002	X		RC 3	@

**LIST OF VALID CONDITIONAL REVISIONS (RC)
PAGES (CONT'D)**

DATE	NAME	SB N°	Embodiment of SB		VALID RC N°	VISA
			Yes	No		

LIST OF INTERMEDIATE TEMPORARY REVISIONS (ITR) EFFECTIVE PAGES

The manual contains the following additional yellow pages.

No	PAGE	DATE	No	PAGE	DATE
5 A	C	FEB 00			
5 A	4 - 6	FEB 00			
5 B	C	JUN 00			
5 B	2 - 11	JUN 00			
5 C	A 1	JUL 00			
5 C	C	JUL 00			
5 C	1 - 3	JUL 00			
5 C	2 - 10	JUL 00			
5 C	2 - 11	JUL 00			
5 C	2 - 18	JUL 00			

LIST OF INTERMEDIATE TEMPORARY REVISIONS (ITR) EFFECTIVE PAGES

The manual contains the following additional yellow pages :

N°	PAGE	DATE	N°	PAGE	DATE
5 A	4 - 6	FEV 00			
5 C	1 - 3	JUL 00			
5 C	2 - 10	JUL 00			
5 C	2 - 11	JUL 00			
5 C	2 - 18	JUL 00			
RR 5C supersedes RR 5B					
5 D	A B	NOV 00			
5 D	C	NOV 00			
5 D	2 - 5	NOV 00			
5 D	2 - 13	NOV 00			
5 D	2 - 19	NOV 00			
5 D	5 - 7	NOV 00			
5 D	5 - 8	NOV 00			
5 D	5 - 9	NOV 00			
5 D	5 - 11	NOV 00			



LIST OF INTERMEDIATE TEMPORARY REVISIONS (ITR) EFFECTIVE PAGES

The manual contains the following additional yellow pages

No	PAGE	DATE	No	PAGE	DATE

**LIST OF INTERMEDIATE TEMPORARY REVISIONS
 (ITR) REQUIRING NO APPROVAL**

The manual contains the following additional yellow pages

No	PAGE	DATE	No	PAGE	DATE

LIST OF INTERMEDIATE TEMPORARY REVISIONS (ITR) REQUIRING NO APPROVAL

The manual contains the following additional yellow pages

No	PAGE	DATE	No	PAGE	DATE
5A	10 - 8	NOV 99			
5A	10 - 9	NOV 99			
5A	10 - 10	NOV 99			
5A	10 - 11	NOV 99			

LIST OF APPROVED EFFECTIVE PAGES

PAGE	REV No	REMARKS	PAGE	REV No	REMARKS
Title	0		2-7	5	
A1	5		2-8	5	
A2	5		2-9	5	
C	4		2-10	5	
E	5		2-10A	5	added
F	5		2-10B	5	added
G	5		2-11	5	
M	5		2-12	5	
i	0		2-13	5	
ii	0		2-13A	5	added
iii	0		2-13B	5	added
iv	4		2-14	3	
v	4		2-15	3	
vi	4	added	2-16	3	
			2-17	3	
			2-18	5	
			2-19	5	
			2-20	3	
	SECTION 1				
1-i	0				
1-1	5				
1-2	0				
1-3	5				
1-4	5				
1-5	3				
1-6	5				
	SECTION 2				
2-i	5		3-1	0	
2-ii	0		3-ii	3	
2-1	5		3-1	5	
2-2	5		3-2	3	
2-3	5		3-3	5	
2-4	5		3-4	5	
2-5	5		3-5	0	
2-6	4		3-6	0	
			3-7	5	
			3-8	0	
			3-9	5	
			3-10	4	
			3-11	4	

LIST OF APPROVED EFFECTIVE PAGES (CONT'D)

PAGE	REV No	REMARKS	PAGE	REV No	REMARKS
3-12	5		5-1A	4	added
3-13	5		5-1B	5	
3-14	5		5-2	4	
3-15	5		5-3	4	
3-16	5		5-4	5	
3-17	5		5-5	4	
3-18	5		5-6	3	
3-19	5		5-7	5	
3-20	5		5-8	5	
3-21	0		5-9	5	
	SECTION 4		5-10	4	
4-i	5		5-11	5	
4-ii	0		5-12	5	
4-1	0				
4-2	5				
4-3	5				
4-3A	5				
4-3B	2	blank			
4-4	5				
4-5	5				
4-6	5				
4-7	5				
4-8	5				
4-9	5				
4-10	5				
4-11	0				
4-12	5				
	SECTION 5				
5-i	5				
5-ii	5				
5-1	5	added			

LOG OF APPROVED NORMAL REVISIONS

ORIGINAL	0	JUNE 1997
REVISION	1	SEPTEMBER 1997
REVISION	2	MARCH 1998
REVISION	3	JANUARY 1999
REVISION	4	SEPTEMBER 1999
REVISION	5	NOVEMBER 2001

NORMAL REVISION 5
DATE : 21 NOV 2001

APPROVED BY : DGAC

LC.T.
Mathieu HENRY



DGAC APPROVED
REVISION 5

G

RECORD OF APPROVED REVISIONS

Rev. No	Date Approved	Inserted		Rev. No	Date Approved	Inserted	
		Date	Initials			Date	Initials
5	21/11/01	21/11/01	JDK				

LIST OF EFFECTIVE PAGES REQUIRING NO APPROVAL

PAGE	REV No	REMARKS	PAGE	REV No	REMARKS
B1	4		6-13	0	
B2	4		6-14	5	
D	4		6-15	4	
H	4				
I	5				
J	5				
K	5				
L	4				
N	5				
	SECTION 5				
5-13	5	added	7-1	3	
5-14	5	added	7-ii	1	
5-15	5	added	7-iii	3	
5-16	5	added	7-1	5	
5-17	5	added	7-2	5	
5-18	5	added	7-3	5	
	SECTION 6		7-4	3	
6-i	0		7-5	3	
6-ii	0		7-6	1	
6-1	0		7-7	3	
6-2	4		7-8	1	
6-3	5		7-9	1	
6-4	5		7-10	1	
6-5	0		7-11	5	
6-6	0		7-12	5	
6-7	0		7-13	5	
6-8	5		7-14	5	
6-9	5		7-15	1	
6-10	5		7-16	5	
6-11	5		7-17	1	
6-12	0		7-18	5	
			7-19	5	
			7-20	1	
			7-21	4	
			7-22	5	
			7-23	1	blank
			7-24	1	

LIST OF EFFECTIVE PAGES REQUIRING NO APPROVAL (CONT'D)

PAGE	REV No	REMARKS	PAGE	REV No	REMARKS
7-25	3		8-19	5	
7-26	5		8-20	2	
7-27	5		8-21	2	
7-28	3		8-22	4	
7-29	5		8-23	2	
7-30	3		8-24	5	
7-31	3		8-25	5	
7-32	3		8-26	5	
7-33	1		8-27	5	
7-34	3		8-28	5	
	SECTION 8		8-29	5	
8-i	2		8-30	5	
8-ii	2		8-31	5	
8-1	5		8-32	5	
8-2	5		8-33	5	
8-3	5			SECTION 10	
8-4	2		10-i	5	
8-5	2		10-ii	5	added
8-6	2		10-1	2	
8-7	5		10-2	2	
8-8	5		10-3	2	
8-9	2		10-4	2	
8-10	2		10-5	2	
8-11	2		10-6	2	
8-12	2		10-7	2	
8-13	2		10-8	5	added
8-14	2		10-9	5	added
8-15	2		10-10	5	added
8-16	3		10-11	5	added
8-17	2		10-12	5	added
8-18	2		10-13	5	added

**LOG OF NORMAL REVISIONS REQUIRING NO
APPROVAL**

ORIGINAL	0	JUNE 1997
REVISION	1	JANUARY 1998
REVISION	2	JULY 1998
REVISION	3	FEBRUARY 1999
REVISION	4	SEPTEMBER 1999
REVISION	5	NOVEMBER 2001

RECORD OF REVISIONS REQUIRING NO APPROVAL

Rev. No	Date	Inserted		Rev. No	Date	Inserted	
		Date	Initials			Date	Initials

CUSTOMIZATION

A/C : EC 120B - S/N :

LIST OF ADDITIONAL APPROVED PAGES

PAGE	REV N°	REMARKS	PAGE	REV N°	REMARKS

CUSTOMIZATION

A/C : EC 120B - S/N :

LIST OF ADDITIONAL APPROVED PAGES

PAGE	REV N°	REMARKS	PAGE	REV N°	REMARKS

MAIN TABLE OF CONTENTS

GENERAL	2
LIMITATIONS	3
EMERGENCY PROCEDURES	3
NORMAL PROCEDURES	3
PERFORMANCE DATA (APPROVED PART / NON APPROVED PART)	3
WEIGHT AND BALANCE	6
SYSTEMS DESCRIPTION	7
HANDLING, SERVICING, MAINTENANCE	8
FLIGHT MANUAL SUPPLEMENTS (SPECIAL OPERATIONS / OPTIONAL EQUIPMENT)	8
OPERATIONAL TIPS	10
APPENDIX	11

ORGANIZATION OF THE MANUAL

1 GENERAL

To achieve the required degree of safety, this manual must be used in conjunction with the relevant regulations covering aircraft operation, such as aerial navigation laws in the operator's country. It is essential for the crew to become familiar with the contents of this manual, special certification requirements and any information specific to customized configurations, and to check all revisions and related requirements.

2 PAGE NUMBERING

The numbering of pages within each section consists of the section number or designation, a dash and the consecutive number of the page beginning with "1"; e.g. for SECTION 3: 3-1, 3-2, etc.

Figures are likewise numbered consecutively by section, such as Fig. 3-1, Fig. 3-2, etc.

Exceptions :

- The numbering of the TABLE OF CONTENTS pages preceding each section in this manual consists of the section number, a dash and the consecutive roman numeral (lower case) of the page, beginning with "i"; e.g. for SECTION 3: 3-i, 3-ii, etc.
- The page numbers of the FLIGHT MANUAL SUPPLEMENTS (FMS) and APPENDICES consist of the section number, a dash, the number of the SUPPLEMENT/APPENDIX, a dash and the consecutive number of the page; e.g. for FMS 9-17 : 9-17-1, 9-17-2, etc.
- Figures within a FMS and APPENDIX are numbered consecutively, such as Fig. 1, Fig. 2, etc.

The number of a blank page within a page block is printed on the preceding or following page by using dual page numbering, e.g. 3-9/(3-10 blank) or (3-9 blank)/3-10.

If, at a later date, pages have to be added to the initial printing, the new pages may carry the number of the preceding page plus a letter suffix; e.g. 2-6A, 2-6B, etc.

3 FLIGHT MANUAL SUPPLEMENTS (FMS)

Information concerning optional equipment systems and operational procedures is covered by FMS.

Each FMS is self-contained and corresponds in its general arrangement to the basic FLIGHT MANUAL, but only additional information or different data will be the subject of an FMS.

Each FMS, although complete in nature, shall therefore be used in conjunction with the basic FLIGHT MANUAL.

A LOG OF SUPPLEMENTS is provided in SUPPLEMENT 9.0 as an index listing the current supplements.

The manufacturer retains the right to convert optional equipment to standard equipment at any time as a product improvement program. FLM coverage of the converted optional equipment, however, will remain as an FMS in SECTION 9 and also as an optional equipment item entry in the EQUIPMENT LIST.

4 REVISION SERVICE

This manual is kept up-to-date by normal revisions and intermediate temporary revisions.

4.1 REVISIONS

Normal revisions are issued periodically. They are printed on white paper and incorporated into the manual in accordance with a "CHANGE INSTRUCTIONS" sheet which does not need to be inserted in the manual. Revisions are numbered consecutively beginning with the No. 1.

4.2 INTERMEDIATE TEMPORARY REVISIONS (ITR)

ITRs are provided to transmit information between revisions. They are printed on yellow paper and are accompanied by an updated list of intermediate temporary revision effective pages.

The modified page is filed in the manual facing the existing page which is to be kept.

ITRs are identified by the number of the next normal revision and a letter suffix in normal alphabetical order. Several ITRs may be issued between two normal revisions. All ITRs are canceled when the normal revision bearing the same number is issued. If certain ITR provisions remain after the subsequent normal revision, they are confirmed by a new ITR with another identification code.

4.3 CONDITIONAL REVISIONS (RC)

The revised manual is issued on white pages and corresponds to the latest recommended standard.

The conditional revisions, corresponding to the previous standard, are issued on pink pages.

The list of pink pages corresponding to the modification applicable to the helicopter is given on white pages A1/A2 and/or 9-0-A1/9-0-A2.

This list of pink pages is subjected to approval and is updated by EUROCOPTER.

The list of valid conditional revisions that must remain in the FLM because the corresponding modification or SB has not been embodied to the aircraft, is given on pink pages B1/B2 and/or 9-0-B1/9-0-B2. This list of conditional revisions is not subjected to approval and must be updated by the user.

The conditional revisions must not be removed from the FLM until the modification or SB has been embodied to the aircraft.

When the user embodies/removes a modification or SB, the corresponding pages of the conditional revision (pink pages) must be removed from/incorporated in FLM. The list of valid conditional revisions (pages B1/B2 and/or 9-0-B1/9-0-B2) must be up-dated accordingly and validated by a visa.

From the present revision onward, at the delivery of the aircraft, the list of the valid modifications or SBs will be specified by EUROCOPTER on the pink pages B1/B2 and for 9-0-B1/9-0-B2, according to the configuration of the aircraft delivered. The valid conditional revisions are those validated by the visas.

NOTE

The RC are unaffected by normal and intermediate temporary revisions or by customization.

4.4 IDENTIFYING REVISED MATERIAL

Changes (except as noted below) to the text and tables (including new material on added pages) are indicated by a vertical line in the outer margin.

Change symbols will not be shown for :

- Introductory material.
- Blank space resulting from the deletion of text, or an illustration or a part of an illustration, or table.
- Correction of minor inaccuracies, such as spelling, punctuation, relocation of material, etc., unless such correction changes the meaning of instructive information and procedures.

Changes to illustrations may be indicated by a miniature pointing hand. A vertical line next to changed text and call-outs on illustrations may be used in lieu of a pointing hand. Shading and screening may be used for diagrams and schematics to highlight the area containing the changed information. Extensively changed presentations may be indicated by a screen border around the affected area.



4.5 "ERRATUM" PROCEDURE

In the case of minor errors (typing errors, bad printing) likely to affect the understanding of the text, the "ERRATUM" procedure is used to make quick corrections between revisions.

In this case, the pages affected by the procedure are re-issued completely and the page number is underlined for identification.

These pages are summarized on an accompanying sheet which is not identified.

5 CUSTOMIZATION OF MANUAL (PRINTED ON GREEN PAPER)

Special features of a particular aircraft may justify the incorporations, on certain pages, of information differing from that of the basic manual and Supplements. These pages, printed on green paper, are filed in the manual over the corresponding white pages.

The information contained in the green pages supersedes or supplements the information covered by the relevant white page. No white page is deleted.

SECTION 1 GENERAL

	Page
1.1 TERMINOLOGY	1 - 1
1.2 MAIN AIRCRAFT DIMENSIONS	1 - 2
1.3 DESCRIPTIVE DATA	1 - 3
1.3.1 ENGINE	1 - 3
1.3.2 ROTOR	1 - 3
1.3.3 TAIL ROTOR	1 - 3
1.3.4 FUEL	1 - 3
1.3.5 OIL	1 - 3
1.4 SYMBOLS AND ABBREVIATIONS	1 - 4
1.5 CONVERSION FACTORS	1 - 6
1.5.1 METRIC UNITS TO ANGLO-SAXON UNITS	1 - 6
1.5.2 ANGLO-SAXON UNITS TO METRIC UNITS	1 - 6

LIST OF FIGURES

	Page
FIGURE 1-1 : THREE-VIEW DRAWING	1 - 2

1.1 TERMINOLOGY

- Unless otherwise specified in the text, altitudes are pressure-altitudes.
- Warnings, Cautions and Notes are used throughout this manual to emphasize important and critical instructions and are used as follows:

WARNING

AN OPERATING PROCEDURE, PRACTICE, ETC., WHICH, IF NOT CORRECTLY FOLLOWED, COULD RESULT IN PERSONAL INJURY OR LOSS OF LIFE.

CAUTION

An operating procedure, practice, etc., which, if not strictly observed, could result in damage to, or destruction of equipment.

NOTE


An operating procedure, condition, etc., which is essential to highlight.

USE OF PROCEDURAL WORDS

The concept of procedural word usage and intended meaning which has been adhered to in preparing this manual is as follows:

- "Shall" has been used only when application of a procedure is mandatory.
- "Should" has been used only when application of a procedure is recommended.
- "May" and "need not" have been used only when application of a procedure is optional.
- "Will" has been used only to indicate future event or action, never to indicate a mandatory procedure.

1.2 MAIN AIRCRAFT DIMENSIONS

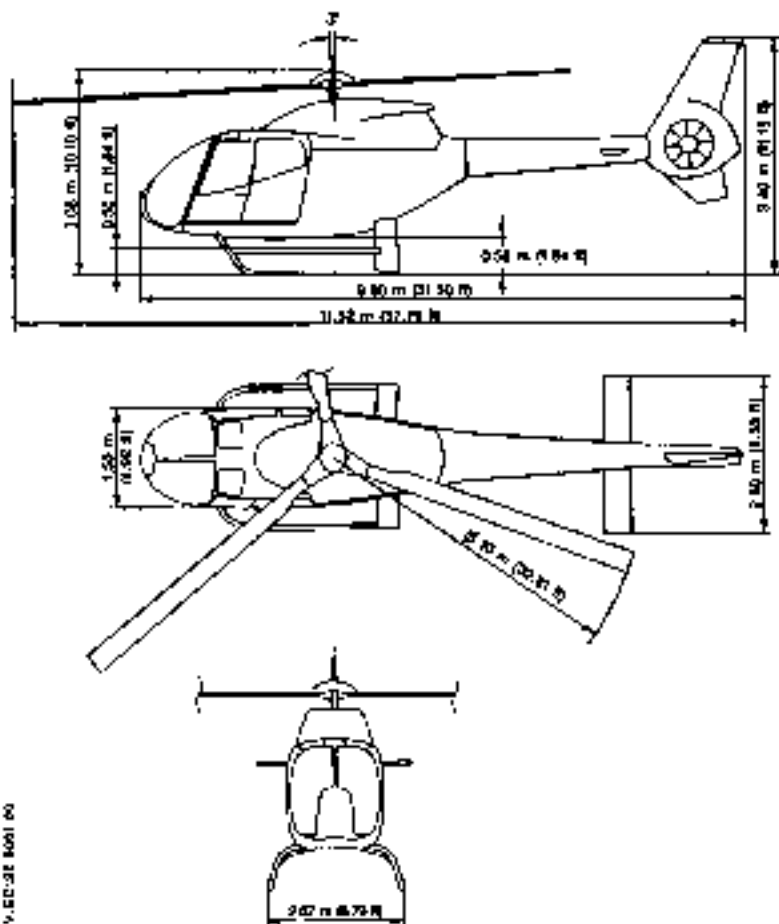

W. EC-DE 8001 00

NOTE

The values which vary according to weight are given at the maximum weight.

Figure 1-1 : three-view drawing

1.3 DESCRIPTIVE DATA

1.3.1 ENGINE

- | | |
|---|---|
| <ul style="list-style-type: none"> - Number : 1 - Manufacturer : TURHOMECA - Model : ARRJUS - Type : 2F | <ul style="list-style-type: none"> - Power with engine torque limit (ISA, at sea level): <ul style="list-style-type: none"> . Takeoff : 322 kW (432 SHP) . Max. continuous : 322 kW (432 SHP) - Power without engine torque limit (ISA at sea level): <ul style="list-style-type: none"> . Takeoff : 376 kW (504 SHP) . Max continuous : 335 kW (449 SHP) |
|---|---|

1.3.2 ROTOR

- | | |
|---|---|
| <ul style="list-style-type: none"> - Type : SPHERIFLEX - Number of blades : 3 | <ul style="list-style-type: none"> - Diameter : 10 m (32.81 ft) - Nominal rotor speed : 406 rpm |
|---|---|

1.3.3 TAIL ROTOR

- | | |
|---|---|
| <ul style="list-style-type: none"> - Type : FENESTRON - Diameter : 0.75 m (2.46 ft) | <ul style="list-style-type: none"> - Number of blades : 8 - Nominal tail rotor speed : 4567 rpm |
|---|---|

1.3.4 FUEL

- | | |
|---|--|
| <ul style="list-style-type: none"> - Total capacity : 410.5 liters (326.3 kg) (108.5 US gal) | <ul style="list-style-type: none"> - Usable fuel : 406 liters (323 kg) (107.3 US gal) |
|---|--|

1.3.5 OIL

- | | |
|---|---|
| <ul style="list-style-type: none"> - MGB oil capacity including filter : 4 l - TGB oil capacity : 0.2 l | <ul style="list-style-type: none"> - Engine oil capacity : 2.5 l min. (0.66 US gal) : 4.6 l max. (1.22 US gal) |
|---|---|

1.4 SYMBOLS AND ABBREVIATIONS

DESIGNATION	SYMBOL OR ABBREVIATION
<u>SPEEDS</u>	
Calibrated airspeed	CAS
Indicated airspeed	IAS
True airspeed	TAS
Never exceed speed	V _{ne}
Best rate of climb speed	V _y
Rate of climb	R/C
<u>METEOROLOGY</u>	
International standard atmosphere	ISA
Outside air temperature	OAT
Outside air pressure	P
Relative air density	σ
Wind velocity	V _w
<u>ALTITUDE / HEIGHT</u>	
Geometric altitude	H
Pressure altitude	H _p
Density altitude	H _d
Radio altimeter height	HRA
Height	h
<u>POWER / ENGINE PARAMETERS</u>	
Maximum continuous power	MCP
Maximum takeoff power (5 min.)	MTOP
Power	PWR
Engine power check	EPC
Rotor speed	NR
Engine generator speed	N _g
Engine generator deviation indication	ΔN_g
Free turbine speed	N _f
Torque	T _q
Power turbine inlet temperature	T ₄
Fuel limitation indicator	FLI

DESIGNATION	SYMBOL OR ABBREVIATION
<u>HOVER / TAKEOFF / LANDING</u>	
Hover in ground effect	HIGE
Hover out of ground effect	HOGE
<u>WEIGHT AND BALANCE</u>	
Center of gravity	CG
Empty weight	EW
Equipped empty weight	EEW
Operating empty weight	OEW
Useful load	UL
Payload	P/L
All-up weight	AUW
Maximum takeoff weight	MTOW
<u>MISCELLANEOUS</u>	
Automatic direction finder	ADF
Automatic flight control system	AFCS
Ancillary system unit	ASU
Battery contactor	BATC
Cockpit circuit breaker panel	CCBP
Caution and warning panel	CWP
Direct current	DC
Emergency locator transmitter	ELT
Electrical master box	EMB
Engine	ENG
Equivalent	≅
Essential contactor	ESSC
External power line contactor	EPLC
External power unit	EPU
Hall effect sensors	HECS
Generator line contactor	GLC
Global positioning system	GPS
High load contactor	HLC
Horizontal situation indicator	HSI
Height-Velocity	HV

DESIGNATION	SYMBOL OR ABBREVIATION
MISCELLANEOUS (cont'd)	
Intercommunication system	ICS
Light and auxiliary control unit	LACU
Main gear box	MGB
Radio magnetic indicator	RMI
Shed bus contactor	SBC
Starting contactor	SC
To be defined	TBD
Tail gear box	TGB
Vehicle and engine management display	VEMD
Flight-related check	V.I.V

1.5 CONVERSION FACTORS

1.5.1 METRIC UNITS TO ANGLO-SAXON UNITS

1 cm	= 0.3937 in	cm - centimeter
1 m	= 3.2808 ft	m - meter
1 km	= 0.5400 NM	km - kilometer
1 l	= 0.2642 US gal	l - liter
1 l	= 0.2200 UK gal	l - liter
1 kg	= 2.2046 lb	kg - kilogram
1 bar	= 14.5040 psi	bar - bar

1.5.2 ANGLO-SAXON UNITS TO METRIC UNITS

1 in	= 2.5400 cm	in - inch
1 ft	= 0.3048 m	ft - foot
1 NM	= 1.8520 km	NM - nautical mile
1 US gal	= 3.7850 l	US gal - US gallon
1 UK gal	= 4.5460 l	UK gal - UK gallon
1 lb	= 0.4536 kg	lb - pound
1 psi	= 0.0689 bar	psi - pound per square inch
1,013 Hpa	= 29.92 in hg	in.hg - inches of mercury

SECTION 2

LIMITATIONS

	Page
2.1 GENERAL	2-1
2.1.1 TYPE OF OPERATION	2-1
2.1.2 OCCUPANTS	2-1
2.1.3 INSTRUMENT MARKINGS	2-1
2.2 WEIGHT AND BALANCE LIMITATIONS	2-2
2.2.1 WEIGHT LIMITATION	2-2
2.2.2 LONGITUDINAL CG	2-2
2.2.3 LATERAL CG	2-3
2.3 FLIGHT ENVELOPE LIMITATIONS	2-4
2.3.1 AIRSPEED LIMITATIONS	2-4
2.3.2 ALTITUDE LIMITATION	2-5
2.3.3 TEMPERATURE LIMITATION	2-5
2.3.4 LANDING AND STOPPING LIMITATIONS ON SLOPE	2-5
2.3.5 MANEUVERING LIMITATIONS	2-5
2.4 VEHICLE LIMITATIONS	2-6
2.4.1 MAIN ROTOR LIMITATIONS	2-6
2.4.2 FIRST LIMITATION INSTRUMENT	2-7
2.4.3 MAIN TRANSMISSION LIMITATIONS	2-7
2.4.4 ENGINE LIMITATIONS	2-8
2.4.5 GENERATOR LOAD LIMITATIONS	2-10
2.4.6 BATTERY TEMPERATURE LIMITATION	2-10
2.5 MISCELLANEOUS LIMITATIONS	2-10
2.5.1 FUEL	2-10
2.5.2 APPROVED LUBRICANTS	2-14
2.5.3 ANTICRASH SYSTEM ON REAR SEATS	2-13
2.5.4 BAGGAGE COMPARTMENT LOAD LIMITATIONS	2-13
2.5.5 CABIN COMPARTMENT LOAD LIMITATIONS	2-15
2.5.6 MANDATORY MINIMUM EQUIPMENT	2-13A
2.5.7 OPTIONAL EQUIPMENT	2-13A
2.6 PLACARDS	2-14

LIST OF FIGURES

	Page
FIGURE 2-1 : LONGITUDINAL CG CHART	2-2
FIGURE 2-2 : LATERAL CG CHART	2-3

Replace the paragraph 2.1 by the following paragraph :

2.1 GENERAL

The helicopter is approved in compliance with JAR part 27 issue 1.
The helicopter shall be operated in compliance with the limitations of this section.

2.1.1 TYPE OF OPERATION

The helicopter is approved to operate by day in VFR.

The following are forbidden :

- Night flight
 - Flight in freezing rain
 - Flight in icing conditions.
 - Aerobatics maneuvers.
- (visible moisture and temperatures conducive to producing ice).









2.1.2 OCCUPANTS

The helicopter in its basic configuration is approved as a 5-seat rotorcraft.

Minimum crew One pilot in right or left seat.

2.1.3 INSTRUMENT MARKINGS

Limitations are marked on instruments with the following color code:

Red		: Safety limit or takeoff limitation
Red with white hatching		: Vne, power off
Yellow or amber	 or 	: Caution range or takeoff rating range
Green		: Normal operating range
White mark	 or 	: Equipment operating limit
Red triangle		: Transient limit

100-123-99-01

CAUTION

THIS PAGE MUST NOT BE REMOVED FROM THE MANUAL UNTIL MODIFICATION
SB N° 34.001 HAS BEEN EMBODIED TO THE AIRCRAFT.

2.1 GENERAL

The helicopter is approved in compliance with JAR part 27 issue 1.

The helicopter shall be operated in compliance with the limitations of this section.

2.1.1 TYPE OF OPERATION

The helicopter is approved to operate :

- by day in VFR.
- by night in VFR, when the equipment required by operational regulations are installed and serviceable.

The following are forbidden :









- Aerobatic maneuvers
- Flight in freezing rain.
- Flight in icing conditions
(visible moisture and temperatures conducive to producing ice).

2.1.2 OCCUPANTS

- Minimum flight crew : One pilot in right or left seat.
- Maximum number of seats : 5
(including flight crew)

2.1.3 INSTRUMENT MARKINGS

Limitations are marked on instruments with the following color code:

	Red		: Safety limit or takeoff limitation
	Red with white hatching		: Vire, power off
	Yellow or amber	 or 	: Caution range or takeoff rating range
	Green		: Normal operating range
	White mark	 or 	: Equipment operating limit
	Red triangle		: Transient limit

see EC120B limits 21

On the VEMD, related numerical value of parameters underlined :
 - in yellow when the parameter is in caution or takeoff range,
 - in red when at or above safety limit or maximum takeoff power.
 Moreover, to enforce safety, red underlining flashes

2.2 WEIGHT AND BALANCE LIMITATIONS

2.2.1 WEIGHT LIMITATION

Maximum permissible weight in flight : 1715 kg (3780 lb)

Maximum permissible weight for IGE, takeoff and landing : 1715 kg (3780 lb).

Minimum permissible weight in flight : 1033 kg (2284 lb).

2.2.2 LONGITUDINAL CG

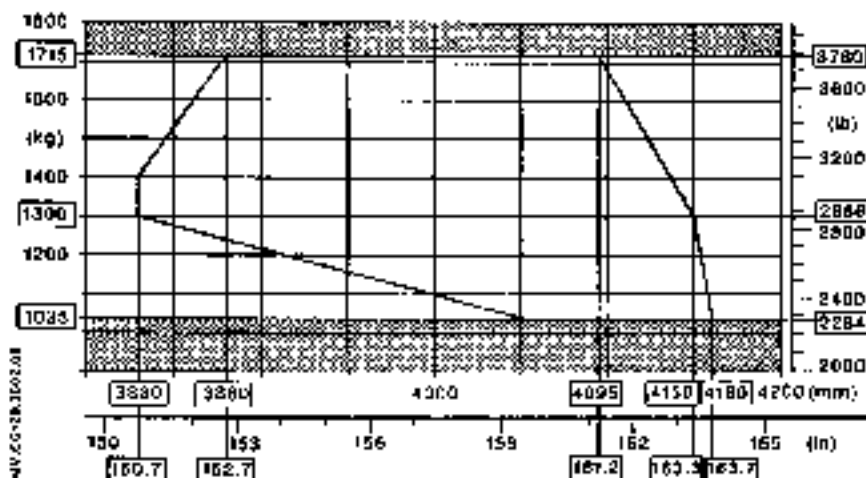


Figure 2-1 : Longitudinal CG Chart


NOTE

The datum is located 4 m forward of the main rotor head center line.

2.2.3 LATERAL CG

Maximum left CG : 0.09 m (3.54 in)

Maximum right CG : 0.08 m (3.15 in)

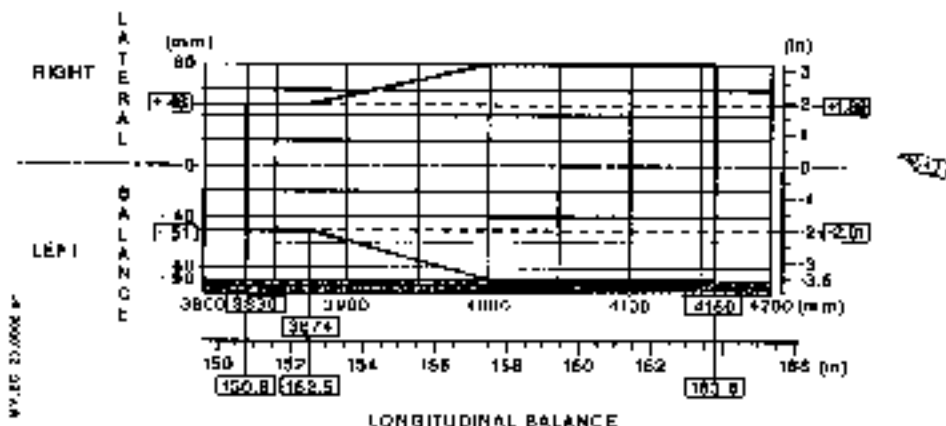
Figure 2-2 : Lateral CG Chart
NOTE


The datum is located in the plane of symmetry of the helicopter.


2.3 FLIGHT ENVELOPE LIMITATIONS

2.3.1 AIRSPEED LIMITATIONS

- Doors closed




 V_{ne} power off 120 kt at Hp = 0
less 3 kt / 1000 ft

 V_{ne} power on 150 kt at Hp = 0
less 3 kt / 1000 ft

- Doors open

The V_{ne} to be taken into account is the lowest value given either on the drawing hereafter (adapted to the doors configuration) or in the above « doors closed » paragraph.

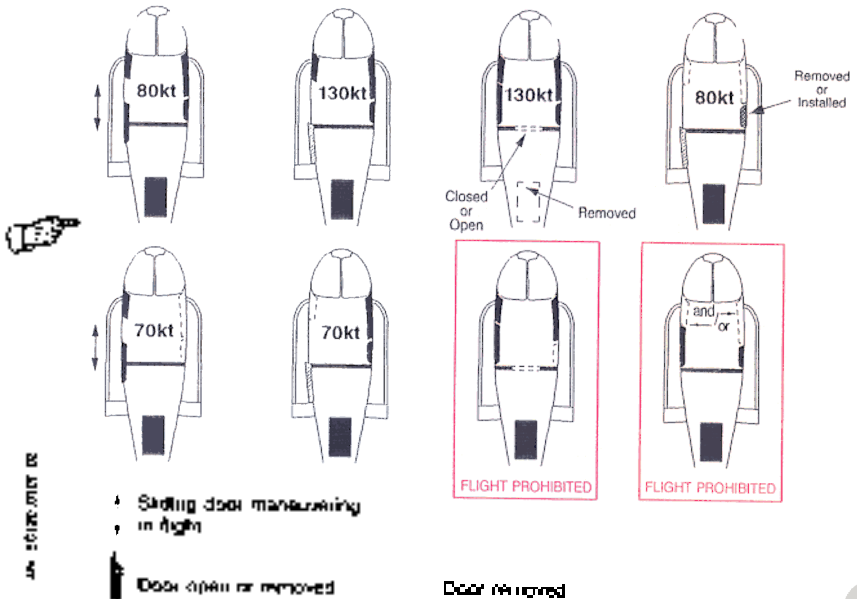

Replace the paragraph 2.3.2 by the following paragraph .

2.3.2 ALTITUDE LIMITATION

Maximum operating altitude in flight

H_p = 20 000 ft

Maximum operating altitude for HIGE, takeoff
and landing

H_p = 2 000 ft

CAUTION

THIS PAGE MUST NOT BE REMOVED FROM THE MANUAL UNTIL MODIFICATIONS
N° A 00675 AND SB N° 52.001 HAVE BEEN EMBODIED TO THE AIRCRAFT

2.3.2 ALTITUDE LIMITATION

Maximum operating altitude in flight Hp = 20000 ft

2.3.3 TEMPERATURE LIMITATION

Minimum temperature : - 30°C
 Maximum temperature : ISA + 35°C
 limited to + 50°C

NOTE

The use at $-40^{\circ}\text{C} \leq \text{OAT} \leq -30^{\circ}\text{C}$ forms the subject of the supplement 9 - 4 (see SECTION 9).

2.3.4 LANDING AND ROTOR STOPPING LIMITATIONS ON SLOPE

- Nose up..... : 10°
- Nose down..... : 6°
- Sideways..... : 8°

2.3.5 MANEUVERING LIMITATIONS

Maximum load factor is determined by the servo-control reversibility limit. This phenomenon is smooth and presents no danger.


Maximum load factor is a combination of TAS / Hp / Weight.







This servocontrol reversibility limit may be reached in a turn or in a pull-up or when maneuvering near VNE. In this case reduce collective pitch and airspeed.

2.4 VEHICLE LIMITATIONS

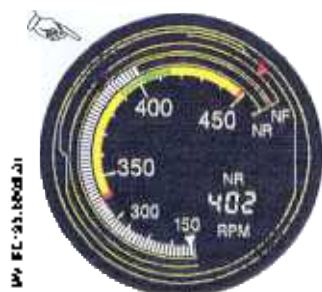2.4.1 MAIN ROTOR LIMITATIONS

It is prohibited to use the rotor brake prior to engine shutdown.
Minimum time between two consecutive brakings : 5 min.




-  · 150 rpm Rotor brake operation max. speed
-  · 340 rpm Minimum power-off
-  · 340 to 390 rpm Caution range
-  · 390 to 415 Normal operating range
-  · 415 to 447 rpm Caution range
-  · 447 rpm Maximum power-off

NOTE

Low NR aural warning ≤ 370 rpm

High NR aural warning ≥ 420 rpm

2.4.2 FIRST LIMITATION INSTRUMENT

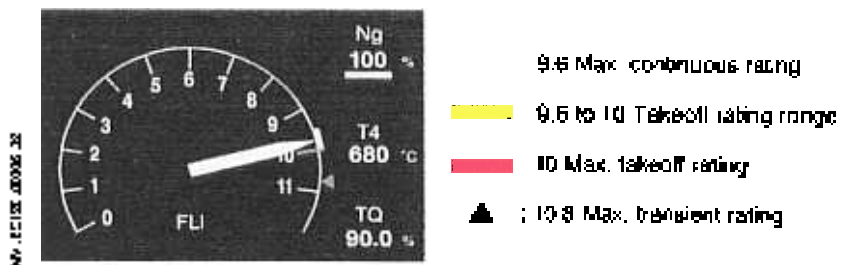

NOTE

The values (Ng = 100%, T4 = 680°C, Tq = 90%) are given as examples.

Use of P2 air bleeds is forbidden above the maximum continuous rating (Ng or T4).

2.4.3 MAIN TRANSMISSION LIMITATIONS

• TORQUE LIMITATIONS



NOTE


In hover flight, maximum takeoff torque has no time limit.






2.4.4 ENGINE LIMITATIONS

• STARTER LIMITATIONS

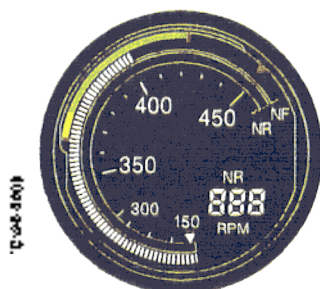Starter shall not be energized more than 3 consecutive times. After the 3rd attempt wait 30 minutes.






• NR LIMITATIONS



-  365 rpm Minimum
-  365 to 373 rpm Caution range (5 s)
-  373 to 422 rpm Normal operating range
-  422 rpm Maximum continuous
-  447 rpm Transient limit (5 s)

• Ng LIMITATIONS



-  Ng 68 % : Minimum stabilized speed
-  $\Delta Ng = -1,5$ % Max. continuous rating (Ng = 99,5 %, Hp = 0, ISA)
-  $\Delta Ng = -1,5$ % à 0 % Takeoff power rating range
-  $\Delta Ng = 0$ % Maximum takeoff rating (Ng = 101 %, Hp = 0, ISA)
-  $\Delta Ng = +2$ % Max. transient rating (5 s) (Ng = 103,6 % Hp = 0, ISA)

• **T4 LIMITATIONS**


Starting limitations



— : 830 °C Maximum continuous

▲ : 870 °C Transient (5 s)

Flight limitations

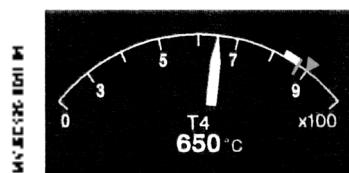

830 °C Max. continuous rating

— 830 °C to 870 °C Takeoff rating range

— 870 °C Max. takeoff rating

▲ 900 °C Max. transient rating (5 s)

• **OIL TEMPERATURE LIMITATIONS**



-10 °C to +10 °C Caution range

— 110 °C Maximum temperature

Minimum oil temperature before power application :
0°C (Oil 3 cSt) or 10°C (Oil 5 cSt)

• **OIL PRESSURE LIMITATIONS**



— 1.7 bar (24.66 psi) minimum
for Ng ≥ 70 %

— : 15 bar Maximum pressure

2.4.5 GENERATOR LOAD LIMITATIONS

Maximum continuous	: 150 A
Maximum transient	: 240 A (2 min.)

2.4.6 BATTERY TEMPERATURE LIMITATION

Caution temperature	: 60 °C
Maximum temperature	: 75 °C

2.5 MISCELLANEOUS LIMITATIONS

2.5.1 APPROVED FUEL

- NORMAL FUELS

USE FOR: -30°C ≤ OAT ≤ +50°C					
Type of fuel	NATO code	Specifications			Anti-ice additive included
		FRANCE	USA	UK	
Kerosene - 50 (AVTUR-FSL) (JP8)	F 34	AJR 3405 F 34	MIL-T-83133 (JP8)	D.ENG. RD 2453	Yes
Kerosene - 50 (AVTUR) (JP1)	F 35	AJR 3405 F 35	ASTM-D- 1655 JET A1	D.ENG. RD 2494	No
Kerosene	—	—	ASTM-D- 1655 JET A	—	No
High flash point (JP5) (AVCAT)	F 43	AJR 3404 F 43	—	D.ENG. RD 2498	No
High flash point (JP5) (AVCAT S1)	F 44	AJR 3404 F 44	MIL-T-5624 (JP5)	D.ENG. RD 2452	Yes

• REPLACEMENT FUELS

USE FOR: $-30^{\circ}\text{C} \leq \text{OAT} \leq +30^{\circ}\text{C}$ AND FOR $H_p \leq 9842\text{ft}$ (3000 m) ONLY					
Type of fuel	NATO code	Specifications			Anti-ice additive included
		FRANCE	USA	UK	
Wide cut (AVTAG FSII) (JP 4)	F 40	AIR 3407	MIL-T-5624 (JP 4)	D.ENG. RD 2454	Yes
Wide cut	—	—	ASTM-D-1655 (JET B)	—	No

NOTE 1

The use of an anti-icing additive is compulsory for $\text{OAT} \leq +0^{\circ}\text{C}$ and for all approved fuels.

NOTE 2

All specifications are effective at latest issue or amendment for all approved fuels.

* ADDITIVES


Anti-ice additive : If the fuel does not contain a freezing inhibitor and if the OAT is below or equal to 0°C, the use of an anti-icing additive is compulsory. The additive shall comply with French specification AIR 3652 (equivalent to : MIL-I 27686, D-ENG-RD 2451,S 748, PHILIPS PFA/55 MB).

NOTE

Concentration shall be between 0.10 % and 0.15 % by volume.

Anti-static additive : SHELL ASA 3, maximum concentration 0.0001 % by volume.

* FUEL GAUGE

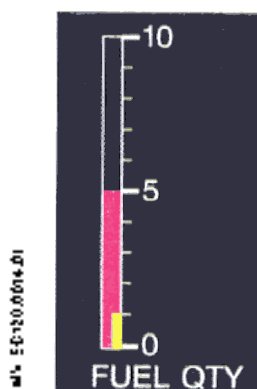

 : 15 min of flight time remains at MCP

NOTE

10 = 406 litres (323 kg) (107.3 US gal) = usable fuel quantity.

The unusable fuel quantity is reached when zero is indicated on the fuel gauge.

2.5.2 APPROVED LUBRICANTS

• ENGINE LUBRICANTS

NORMAL USE (-30°C ≤ OAT ≤ +50°C)					
Oil type	NATO Code	Specification			Approved oil grades
		FRENCH	USA	UK	
Synthetic 5 cSt at 98.9° C	0.156	-	MIL-L-23699	-	AEROSHELL OIL/S00/S60 CASTROL/S000/A PROJET 4 ELF TURBOJET II ESSO TURBO OIL/T/2380/2197 MOBIL JET OIL/T/254/291 TURBONYCOIL 600

OTHER OILS (-30°C ≤ OAT ≤ +50°C)					
Oil type	NATO Code	Specification			Approved oil grades
		FRENCH	USA	UK	
Synthetic 3 to 3.5 cSt at 98.9° C	0.148	-	MIL-L-7808	-	ESSO TURBO OIL 2389 MOBIL OIL AVREX 256 TURBONYCOIL 160
	0.150	AIR 3514	-	-	ELF JET SYNTHETIC OIL 15 TOTAL AERO TURBINE 312 TURBONYCOIL 13B
Synthetic 3.9 cSt at 98.9° C	-	-	-	DEF STAN 91-94	AEROSHELL TURBINE OIL 390

NOTE 1

When the oil specification or grade differs from the approved one, the engine manufacturer's approval shall be obtained before using this oil.

NOTE 2

In the event of a change in oil grade or specification, the oil system shall be flushed as prescribed in TURBOMECA Maintenance Manual.

NOTE 3

All specifications are effective at latest issue or amendment.

• MAIN GEARBOX LUBRICANTS

NORMAL USE (- 25°C ≤ OAT ≤ + 50°C)					
Oil type	NATO Code	Specifications			Approved lubricants
		FRANCE	USA	UK	
Mineral	0.155	AIR 3523	MIL-L-6086		ESSO GEAR OIL MEDIUM NYCOLUBE 3523 TOTAL AEROGEAR 823
THE  SHELL  TRADEMARK IS PROHIBITED					

COLD WEATHER USE (- 30°C ≤ OAT ≤ + 0°C)					
Oil type	NATO Code	Specifications			Approved lubricants
		FRANCE	USA	UK	
Synthetic	0.148	AIR 3513	MIL-L-7808		ESSO TURBO OIL 2389 MOBIL OIL AVREX 256 TURBONYCOIL 160
	0.150	Air 3514			ELF JET SYNTHETIC OIL 15 TOTAL AERO TURBINE 312 TURBONYCOIL 13B

• TAIL GEARBOX LUBRICANTS

Same as MGB.

• SERVO CONTROL LUBRICANT

Hydraulic fluid NATO H 537 or MIL-H-83282

2.5.3 ANTICRASH SYSTEM ON REAR SEATS

When the rear seats are unoccupied, check that unused safety belts are not fastened and the button on the shoulder straps is not visible.

2.5.4 BAGGAGE COMPARTMENT LOAD LIMITATIONSMaximum unit load : 300 kg/m² (62.5 pounds/sq feet)**2.5.5 CABIN COMPARTMENT LOAD LIMITATIONS**Maximum unit load : 300 kg/m² (62.5 pounds/sq feet)


2.5.6 MANDATORY MINIMUM EQUIPMENT

A minimum of two adequate radio / ICS audio headsets shall be onboard the helicopter, one worn by the pilot at the controls and one in stand-by to monitor the audio warnings delivered through the ICS system.

2.5.7 OPTIONAL EQUIPMENT

When optional equipment is installed, refer to supplements (SECTION 9) for additional limitations, procedures and performance data.

2.6 PLACARDS



V.N.E. POWER ON	
IAS (ft)	VI (kts)
0	150
2 000	144
4 000	138
6 000	132
8 000	126
10 000	120
12 000	114
14 000	108
16 000	102
18 000	96
20 000	90
+ V.N.E. POWER OFF LESS 30 kts	

BY EC120 0024 00

Location : Inside cabin, on center post, above standby compass.

Replace the V.N.E. placard by the following

V.N.E. ↓ HP	POWER ON
0	150
1000	147
2000	144
3000	141
4000	138
5000	135
6000	132
7000	129
8000	126
9000	123
10000	120
11000	117
12000	114
13000	111
14000	108
15000	105
16000	102
17000	99
18000	96
19000	93
20000	90
*V.N.E POWER OFF : LESS 30 KTS	

Location Inside cabin, instrument panel RH side.

CAUTION

THIS PAGE MUST NOT BE REMOVED FROM THE MANUAL UNTIL MODIFICATION SB N° 34.001 HAS BEEN EMBODIED TO THE AIRCRAFT

Replace the page 2-15 by the following page:

Placard :

MS 80128 0001 00

THE HELICOPTER IS APPROVED TO OPERATE BY DAY IN VFR
THE WARNINGS AND PLACARDS INSTALLED ON THIS HELICOPTER CONCERN OPERATING LIMITATIONS WHICH MUST
BE COMPLIED WITH WHEN OPERATING THIS ROTORCRAFT. OTHER OPERATING LIMITATIONS WHICH MUST BE COMPLIED
WITH WHEN OPERATING THIS ROTORCRAFT ARE CONTAINED IN THE ROTORCRAFT FLIGHT MANUAL. THE "APPROPRIATE
LIMITATIONS" SECTION OF THE ROTORCRAFT MAINTENANCE MANUAL MUST BE COMPLIED WITH.

Location : Inside cabin, aft of overhead control quadrant.

Placard

MS 80128 0001 00

PULL UP	○	TO OPEN
PUSH DOWN		TO LOCK

Location : Inside RH door

Placard

MS 80128 0001 00

PULL UP	○	TO OPEN
PUSH DOWN		TO LOCK

Location : Inside LH door

CAUTION

THIS PAGE MUST NOT BE REMOVED FROM THE MANUAL UNTIL MODIFICATION
SB N° 34.001 HAS BEEN EMBODIED TO THE AIRCRAFT.

Placard :




MV.EC120.0067.01

THE HELICOPTER IS APPROVED TO OPERATE BY DAY AND NIGHT IN VFR. THE MARKINGS AND PLACARDS INSTALLED ON THIS HELICOPTER CONTAIN OPERATING LIMITATIONS WHICH MUST BE COMPLIED WITH WHEN OPERATING THIS ROTORCRAFT. OTHER OPERATING LIMITATIONS WHICH MUST BE COMPLIED WITH WHEN OPERATING THIS ROTORCRAFT ARE CONTAINED IN THE ROTORCRAFT FLIGHT MANUAL. THE "AIRWORTHINESS LIMITATIONS" SECTION OF THE ROTORCRAFT MAINTENANCE MANUAL MUST BE COMPLIED WITH.

Location : Inside cabin, aft of overhead control quadrant.

Placard :


MV.EC120.0068.00

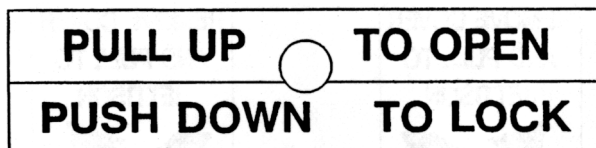

Location : Inside RH door


Placard :

MV.EC120.0069.00

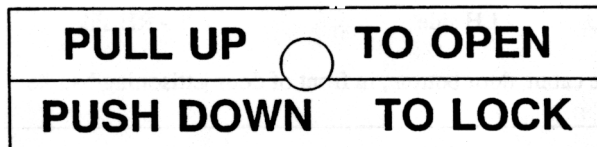


Location : Inside LH door

Placard :

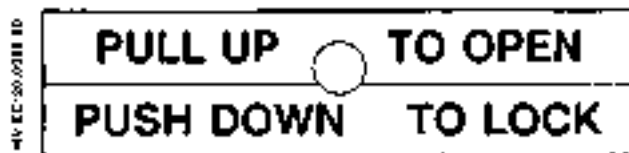


Location : Sliding door, inside LH side.

Placard :

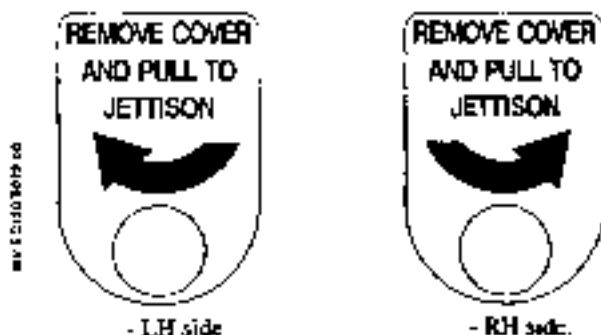

Location : Inside cabin, door bottom, in front of door jettisoning handle

Placard :



Location : - RH forward seat, at bottom RH side;
- LH forward seat, at bottom LH side ; Bench seat, LH side.

Placard :

M.U. EC120.008 r.00

A/C SERIAL N° :
WEIGHT :
C. OF G. :
DATE :

Location : Console RH side.

Placard :

M.U. EC120.0463.01

<u>DISTRIBUTED LOADS MAX)</u> ON FLOOR 62.5 POUNDS/SQ FEET - 300 kg/m²
MAX WEIGHT 970 lb - 441 kg

Location : Console LH side, cargo hold, RH side.

Placard :

M.U. EC120.0463.01

EC120 B DATE	
ACFT	
WEIGHT	CG
1000	1000
2000	2000
3000	3000
4000	4000
5000	5000

Location : Inside cabin, on center post, under standby compass.

Placard :

REV. 01/05 (PAGE 02)



Location : LH filler neck, LH side.

Placard :

REV. 01/05 (PAGE 03)

CARBURANT : JP1-JP4-JP5-JP8 JET A1-JET A-JET B
FUEL : F34-F35-F40-F43-F44
CAPACITE / CAPACITY :
108,5 U.S. GALLONS
90,4 IMP. GALLONS
410,5 LITRES / LITERS
926,9 KG

Location : RH of filler neck, LH side.

Placard :

REV. 01/05 (PAGE 04)

ENGINE OIL CAPACITY 3L MAX 4L MAX
REFILLING OIL : NATO D.156 / MIL-PRF-8088
REPLACEMENT OIL : NATO D.156 / MIL-PRF-8088 NATO D.156 / MIL-PRF-8088
MINERAL OIL USE IS FORBIDDEN FOR HELICOPTER ENGINE

Location : RH of engine oil filler cap.

Replace Fuel placard by the following.

AVIATION

CARBURANT : JP1-JP5-JP8	
JET A1-JET A	
FUEL : F34-F36-F43-F44	
CAPACITE / CAPACITY .	
108,9	U.S. GALLONS
91,6	IMP. GALLONS
418	LITRES / LITERS
324	KG


NOTE

The total fuel capacities to be taken into account are those shown in page 1 - 3.

CAUTION


THIS PAGE MUST NOT BE REMOVED FROM THE FLIGHT MANUAL UNTIL MODIFICATION SB N° 28 007 HAS BEEN EMBODIED TO THE AIRCRAFT

Placard :

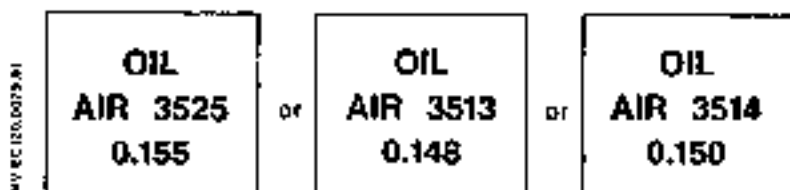

Location : Near TGB and MGB filler neck RH side.

Placard :

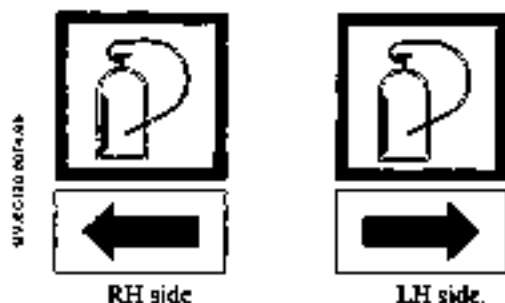

Location : Inside cabin, on console lateral side

Placard :



Location : Inside cabin, near reading light.

Placard :



Location : LH side of aircraft, above grounding point.

Placard (if fitted)



Location : RH side, on ground power receptacle cover.

SECTION 3

EMERGENCY PROCEDURES

	Page
3.1 GENERAL	3 - 1
3.1.1 AUDIO WARNINGS	3 - 1
3.2 ENGINE FLAME-OUT	3 - 2
3.2.1 CRUISE FLIGHT	3 - 2
3.2.2 HOVER-IGE	3 - 3
3.2.3 HOVER-OGC	3 - 4
3.3 ENGINE GOVERNOR FAILURE	3 - 4
3.3.1 NR DROP	3 - 4
3.3.2 NR INCREASE	3 - 5
3.4 TAIL ROTOR CONTROL FAILURE	3 - 6
3.4.1 HOVER-IGE	3 - 6
3.4.2 HOVER-OGC	3 - 6
3.4.3 IN CRUISE FLIGHT	3 - 6
3.5 SMOKE IN THE COCKPIT/CARGO	3 - 7
3.5.1 SOURCE NOT IDENTIFIED	3 - 7
3.5.2 SOURCE IDENTIFIED	3 - 7
3.6 VEMD FAILURE	3 - 8
3.6.1 VEMD SCREEN FAILURE	3 - 8
3.6.2 CAUTION MESSAGES ON VEMD	3 - 8
3.6.3 ABNORMAL NR/M INDICATION	3 - 10
3.6.4 ABNORMAL ENGINE PARAMETER INDICATION	3 - 10
3.7 CAUTION AND WARNING PANEL	3 - 12
3.7.1 ENGINE EMERGENCY	3 - 12
3.7.2 TRANSMISSION EMERGENCY	3 - 14
3.7.3 HYDRAULIC EMERGENCY	3 - 15
3.7.4 ELECTRICAL EMERGENCY	3 - 16
3.7.5 FUEL EMERGENCY	3 - 18
3.7.6 MISCELLANEOUS	3 - 20

	Page
3.8 VARIOUS FAILURES AND INCIDENTS NOT INDICATED ON THE CWP	3 - 21

3.1 GENERAL

Emergency procedures describe the actions that the pilot must take relative to the various possible failures that can occur.

Meanwhile, depending on the many variable external environment, such as the type of terrain flown over, the pilot may have to adapt to the situation according to his experience.

To help the pilot in his decision process, four recommendations are used :

· LAND IMMEDIATELY

Self explanatory.

· LAND AS SOON AS POSSIBLE

Emergency conditions are urgent and require landing at the nearest landing site at which a safe landing can be made.

· LAND AS SOON AS PRACTICABLE

Emergency conditions are less urgent and in the pilot's judgement, he may proceed to the nearest airfield where he can expect appropriate assistance.

· CONTINUE FLIGHT

Continue flight as planned. Repair at the destination according to the maintenance manual.

NOTE

Immediate actions that the pilot shall take are written in bold characters.

3.1.1 AUDIO WARNINGS

On the LACTI, a pushbutton is used to activate the audio warning.

When pressed in, the **HORN** light on the warning panel goes out.

NOTE

The pilot at the controls shall wear an adequate radio / ICS audio headset to monitor the audio warnings delivered through the ICS system.

• **GONG**

A gong is generated each time a red warning appears on the warning panel.

• **CONTINUOUS TONE**

Two continuous tones can be heard :

- When NR is below 370 rpm (310 Hz tone).

When maximum take-off limitations are exceeded for more than 3,5 seconds (285 Hz tone)

1. Collective pitch.....**REDUCE** to maintain NR in green arc or power within limitations
2. Engine parameters.....**CHECK**

• **INTERMITTENT TONE**

An intermittent tone (310 Hz) is heard when the NR is above 420 rpm.

- Collective pitch.....**INCREASE** to maintain NR in green arc

Apply applicable procedure according to the situation.

3.2 ENGINE FLAME-OUT

3.2.1 CRUISE FLIGHT

AUTOROTATION PROCEDURE OVER LAND

1. Collective pitch **REDUCE**
to maintain NR in green arc.

2. IAS..... **Yy**

3. Twist Grip..... **SHUT OFF** position

4. Maneuver the aircraft into the wind on final approach.

• At height \geq 70 ft

5. Cyclic..... **FLARE**

• At 20 - 25 ft and at constant attitude

6. Collective pitch..... **GRADUALLY INCREASE**
to reduce the rate of descent and forward speed.

7. Cyclic..... **FORWARD** slightly
to adopt landing attitude.

8. Pedal **ADJUST**
to cancel any side-slip tendency.

9. Collective pitch **INCREASE**
to cushion touch-down
- After touch-down
10. Cyclic, collective, pedal **ADJUST**
to control ground run.
- Once the aircraft has stopped
11. Collective pitch **FULLY DOWN**
12. Rotor brake **APPLY** below 150 rpm.

AUTOROTATION PROCEDURE OVER WATER

Apply same procedure as over land, except items 10, 11 and 12, but maneuver to head the aircraft equally between the wind and wave direction on final approach. Ditch with minimum forward and vertical speed. Then apply following check list for items 10, 11 and 12.

- At touch-down
10. Collective pitch **MAINTAIN**
11. Door emergency handles **PULL-UP**
12. Rotor brake **APPLY**
Evacuate aircraft once the rotor has stopped.

RELIGHTING

When Ng is less than 10%, according to available height and cause of flame-out, try to relight using starting procedure. At least 1000 ft are necessary to complete restarting procedure after flame-out.

3.2.2 HOVER-IGE

1. Collective **MAINTAIN**
2. Pedals **CONTROL YAW**
3. Collective **INCREASE** as needed to cushion touch-down.

3.2.3 HOVER-OGE

1. Collective pitch **PULLY DOWN**
 - When NR stops decreasing
2. Cyclic **FORWARD**
to gain airspeed according to available height.
3. Autorotation procedure **APPLY**

SAFE AUTOROTATIVE LANDING CAN NOT BE WARRANTED IN CASE OF A FAILURE IN HOGE BELOW THE TOP POINT OF THE HV DIAGRAM (REFER TO SECTION 5).

3.3 ENGINE GOVERNOR FAILURE


Engine governor failure leads either to NR drop, or to NR increase

3.3.1 NR DROP

- **IN CRUISE FLIGHT**

Simultaneously to maintain NR in green arc:

1. Collective **REDUCE**
2. Twist grip **CHECK in Flight Position**

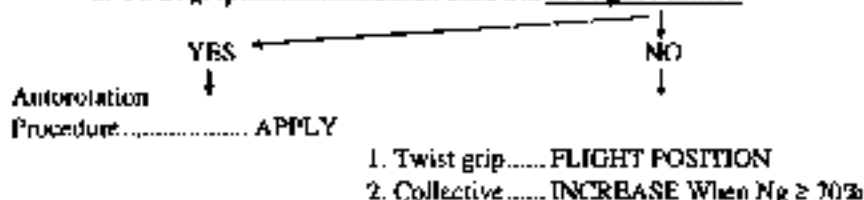

- **HOVER-IGE**


LAND IMMEDIATELY

1. Collective **MAINTAIN**
2. Yaw **CONTROL**
3. Collective **INCREASE** to cushion touch down

• HOVER-OGÉ

Simultaneously

1. Collective **FULLY DOWN**
2. Twist grip **CHECK in Flight Position**

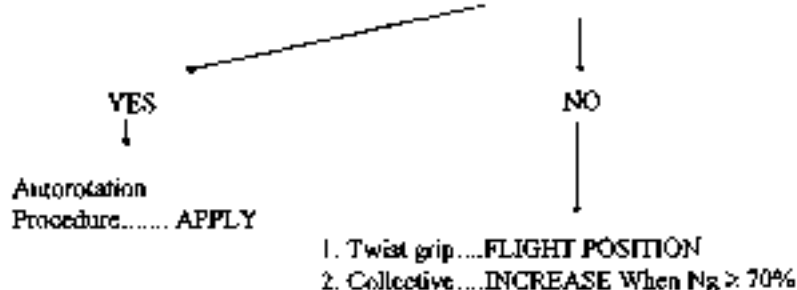
3.3.2 NR INCREASE

Simultaneously to maintain NR in green arc .

1. Collective **INCREASE**
 2. Twist Grip **SLIGHTLY REDUCE**
- LAND AS SOON AS POSSIBLE**

NOTE

During flight, the pilot shall control NR using the twist grip.

APPROACH AND LANDING

 Initiate a shallow approach at V_y .

On final approach reduce speed slowly and adjust collective pitch to set torque at around 30%.

Reduce forward speed and increase collective to cushion landing at low speed (ground speed below 10 kt).

After touch down, reduce throttle before lowering collective pitch.

3.4 TAIL ROTOR CONTROL FAILURE

Symptom the helicopter will yaw to the left with a rotational speed depending on the amount of power and the forward speed set at the time of the failure

3.4.1 HOVER-IGE

LAND IMMEDIATELY

1. Twist Grip **IDLE STOP POSITION**
2. Collective **INCREASE** to cushion touch-down

3.4.2 HOVER-OGE

Simultaneously

1. Collective **REDUCE** depending on available height
2. Cyclic **FORWARD** to gain speed
3. Cyclic **ADJUST** to set IAS to V_y and control yaw

LAND AS SOON AS POSSIBLE

Carry out an autorotative landing

3.4.3 IN CRUISE FLIGHT

1. Cyclic **ADJUST** to set IAS to V_y and control yaw
2. Collective **REDUCE** to maintain flight level

LAND AS SOON AS POSSIBLE


APPROACH AND LANDING

Carry out an autorotative landing

3.5 SMOKE IN THE COCKPIT/CARGO

3.5.1 SOURCE NOT IDENTIFIED

Heating, Demisting..... OFF

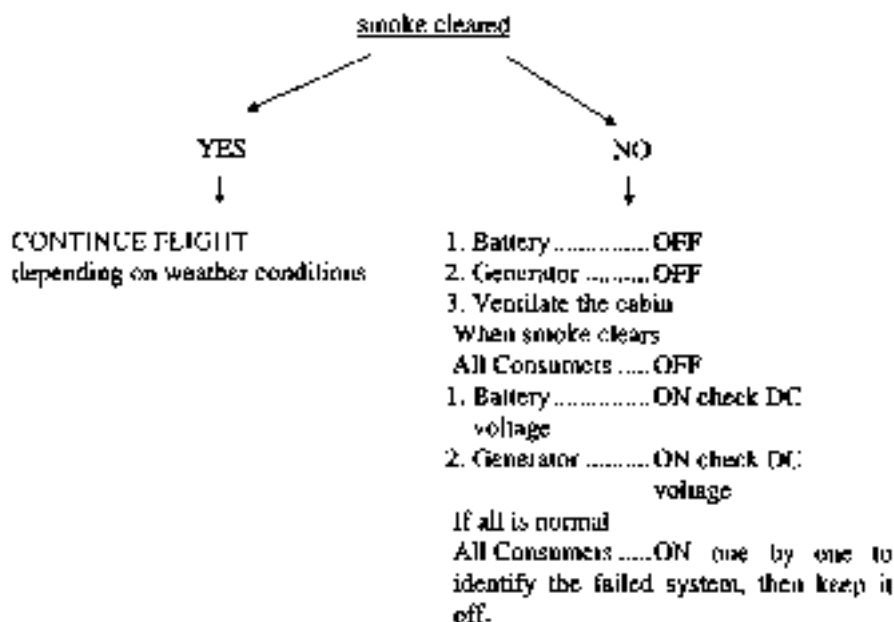

When battery and generator are off line the VEMD goes out and only the analog NR remains. Apply both screen failure procedure (§ VEMD SCREEN FAILURE SECTION 3).

3.5.2 SOURCE IDENTIFIED

1. Corresponding system..... OFF
2. Ventilate the cabin

3.6 VEMD FAILURE

3.6.1 VEMD SCREEN FAILURE

- Failure of one screen

Failed Screen.....OFF.

Read all information on the other screen.

All information is available using the SCROLL pushbutton either on the VEMD or on the collective pitch lever.

- Failure of both screens

Can be a single failure when battery and DC generator are in "OFF" position (fire and smoke detection procedure).

Set maximum power to establish level straight flight with the following law :

$$IAS_{kt} = 100 \text{ kt at sea level} - (2 \text{ kt} / 1000 \text{ ft})$$

For landing carry out a no hover landing.

3.6.2 CAUTION MESSAGES ON VEMD

When a parameter is off line, the parameter value is not displayed on the VEMD upper screen and the parameter scale symbology is displayed in yellow. Caution messages are self explanatory and the pilot shall comply with the action requested. If no light is lit on the caution and warning panel, no other action is required from the pilot.

- LANE 1 (or 2) FAILED
- - - > PRESS OFF 1 (or 2) : Self explanatory
- VEH PARAM OVER LIMIT : Vehicle parameter over limit
ENG PARAM OVER LIMIT : Engine parameter over limit

These messages appear when a parameter usually displayed on this page reaches a limitation, as the relevant (vehicle or engine) pages are not displayed.

- SCROLL..... : DEPRESS to reach the relevant page and check the parameter.

- **CROSS TALK FAILED**
 ---> **PRESS OFF ?** : Self explanatory
- **BRT CNTRL FAILED** : Brightness control has failed
- **PLI FAILED** : One parameter (Ng, T4, torque) is not consistent
 ---> **CHECK PARAM**
 - Parameter consistency: **CHECKED**
 - Relevant procedures in § **ABNORMAL ENGINE PARAMETER INDICATION (SECTION 3)**: **APPLY**
- **GENE PARAM OVER LIMIT** : Generator parameter over limit
- **BAT PARAM OVER LIMIT** : Battery parameter over limit

These messages appear when the relevant parameter is not displayed on the vehicle page and when a limitation is reached.

- | |
|-------------|
| V/A
SEL. |
|-------------|

 LACU pushbutton: **ACTUATE**
- **BAT.T** : This message appears when battery temperature is off line.

3.6.3 ABNORMAL NR/Nf INDICATION

- NR Indication Failure

Maintain the torque above 20%

LAND AS SOON AS PRACTICABLE

- Nf Indication Failure

CONTINUE FLIGHT

Avoid abrupt collective reduction.

NOTE

Failure of the NR/Nf indicator DC power supply switches off the Nf indication and the digital NR indication.

After the failure of the Nf indicator, the FLI is replaced by the 3 data symbology (Ng/ Δ Ng, t4 and torque) and a failure message is displayed.

3.6.4 ABNORMAL ENGINE PARAMETER INDICATION

- Engine Oil Temperature Over 110° C

Set IAS to Vy kt, temperature reduces.

YES
↓

LAND AS SOON AS PRACTICABLE

NO
↓

LAND AS SOON AS POSSIBLE

- Loss of OAT, Ng, Torque or t4 parameters

When a parameter is off line, the parameter value is not displayed on the VEMD upper screen and the parameter scale symbology (if applicable) is displayed in yellow.

The FLI is replaced by the 3-data symbology (Ng/ Δ Ng, t4 and torque) and a failure message is displayed.

CONTINUE FLIGHT

- OAT Indicator Failure

OAT : appears in lower right corner of upper screen when OAT is off line with ΔNg gauge in yellow.

Respect the maximum Ng values given below :

- Maximum take off power (MTOF) Ng = 100 %
- Maximum continuous power (MCP) Ng = 98.5 %

- Ng Indicator Failure

Respect the maximum t_4 values below :


- OAT > - 10°C t_4 limited to 760°C
- OAT < - 10°C t_4 limited to 750°C

NOTE

t_4 limitations displayed are starting limitations

- Torquemeter Failure

Respect the Ng given in the following table :

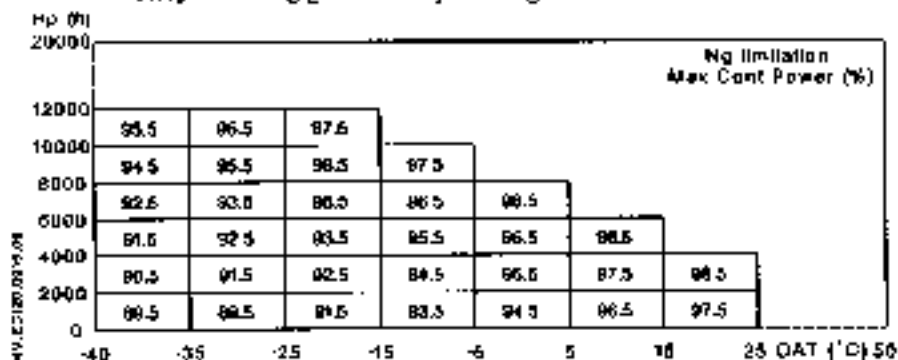
- t_4 Indicator Failure

Respect Ng and torque limitations.

Do not try to start the engine.

3.7 CAUTION AND WARNING PANEL

3.7.1 ENGINE EMERGENCY

WARNING PANEL	CORRECTIVE ACTIONS
<div data-bbox="113 368 225 467" style="background-color: black; color: white; padding: 5px; text-align: center; font-weight: bold; font-size: 1.2em;"> ENG FIRE </div> <p data-bbox="87 512 236 568">Fire in engine bay</p>	<ul style="list-style-type: none"> <li data-bbox="283 355 460 379">• At start-up : <ol style="list-style-type: none"> <li data-bbox="316 384 941 411">1. Twist grip..... SHUT-OFF position <li data-bbox="316 416 762 475">2. Emergency fuel shut-off handle..... AFT <li data-bbox="316 480 759 507">3. Booster pump..... OFF <li data-bbox="316 512 893 539">4. Crank pushbutton..... DEPRESS (10 s) <li data-bbox="316 544 759 571">5. Battery pushbutton..... OFF <li data-bbox="316 576 930 603">6. Rotor brake APPLY (≤ 150 rpm) <li data-bbox="316 608 826 635">7. Evacuate aircraft and fight fire from outside. <li data-bbox="283 663 572 691">• Hover, Takeoff, Final : <p data-bbox="479 724 762 751" style="text-align: center;">LAND IMMEDIATELY</p> <p data-bbox="288 778 908 837">Carry out a no hover powered landing then, after landing, apply same procedure as above.</p> <li data-bbox="283 866 426 893">• In Flight : <p data-bbox="479 919 762 946" style="text-align: center;">LAND IMMEDIATELY</p> <ol style="list-style-type: none"> <li data-bbox="316 975 826 1002">1. Collective pitch..... REDUCE <li data-bbox="316 1007 748 1034">2. IAS..... Vy <li data-bbox="316 1038 941 1066">3. Twist grip..... SHUT-OFF position <li data-bbox="316 1070 762 1129">4. Emergency fuel shut-off handle..... AFT <li data-bbox="316 1134 796 1161">5. Autorotation procedure..... APPLY <li data-bbox="283 1166 524 1193">• When on ground : <ol style="list-style-type: none"> <li data-bbox="316 1198 759 1225">6. Battery pushbutton..... OFF <li data-bbox="316 1230 930 1257">7. Rotor brake APPLY (≤ 150 rpm) <li data-bbox="316 1262 826 1289">8. Evacuate aircraft and fight fire from outside.

WARNING PANEL	CORRECTIVE ACTIONS
<div data-bbox="146 331 259 432" style="background-color: black; color: white; padding: 5px; text-align: center; font-weight: bold; font-size: 1.2em;"> ENG P </div> <p data-bbox="121 475 235 579">Engine oil pressure < 1,7 bar.</p>	<p data-bbox="317 304 699 331">Oil pressure..... CHECK</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p data-bbox="317 371 476 399">LOW OR NIL</p> <p data-bbox="419 416 432 464">↓</p> <p data-bbox="317 475 626 533">1. Autorotation Procedure..... APPLY</p> <p data-bbox="419 576 432 624">↓</p> <p data-bbox="347 635 632 662">LAND IMMEDIATELY</p> </div> <div style="text-align: center;"> <p data-bbox="768 371 885 399">NORMAL</p> <p data-bbox="823 416 836 464">↓</p> <p data-bbox="729 475 969 533">LAND AS SOON AS PRACTICABLE</p> </div> </div>
<div data-bbox="150 687 259 788" style="background-color: black; color: white; padding: 5px; text-align: center; font-weight: bold; font-size: 1.2em;"> TWT GRIP </div> <p data-bbox="121 807 268 895">Twist grip outside flight position</p>	<p data-bbox="317 708 910 767">Twist grip INCREASE to flight position</p>
<div data-bbox="150 938 259 1038" style="background-color: black; color: white; padding: 5px; text-align: center; font-weight: bold; font-size: 1.2em;"> ENG CHIP </div> <p data-bbox="121 1058 310 1145">Metal particles in engine oil circuit.</p>	<p data-bbox="484 959 845 986" style="text-align: center;">LAND AS SOON AS POSSIBLE</p> <p data-bbox="317 999 978 1058">Execute a minimum power approach landing and be prepared in case of an engine flame-out.</p>

3.7.2 TRANSMISSION EMERGENCY

WARNING PANEL	CORRECTIVE ACTIONS		
<p>MGB P</p> <p>Main Gear Box low oil pressure</p>	<p>Set Torque < 45%</p> <p>LAND AS SOON AS POSSIBLE</p> <p>[REDACTED]</p> <p>AT LOW POWER ($T_q < 45\%$) MAXIMUM 30 MN OF FLIGHT TIME REMAINS</p>		
<p>MGB TEMP</p> <p>Main Gear Box oil overheating</p>	<p>IAS SET TO V_y</p> <table border="0" style="width: 100%;"> <tr> <td style="text-align: center; width: 50%;"> <p>MGB TEMP</p> <p>Goes out</p> <p>↓</p> <p>LAND AS SOON AS PRACTICABLE</p> </td> <td style="text-align: center; width: 50%;"> <p>MGB TEMP</p> <p>Remains on</p> <p>↓</p> <p>LAND AS SOON AS POSSIBLE</p> </td> </tr> </table>	<p>MGB TEMP</p> <p>Goes out</p> <p>↓</p> <p>LAND AS SOON AS PRACTICABLE</p>	<p>MGB TEMP</p> <p>Remains on</p> <p>↓</p> <p>LAND AS SOON AS POSSIBLE</p>
<p>MGB TEMP</p> <p>Goes out</p> <p>↓</p> <p>LAND AS SOON AS PRACTICABLE</p>	<p>MGB TEMP</p> <p>Remains on</p> <p>↓</p> <p>LAND AS SOON AS POSSIBLE</p>		
<p>GB CHIP</p> <p>Metal particles in MGB or TGB oil circuit.</p>	<p>LAND AS SOON AS POSSIBLE</p>		

3.7.3 HYDRAULIC EMERGENCY

WARNING PANEL	CORRECTIVE ACTIONS
<div data-bbox="180 283 292 377" style="background-color: black; color: white; padding: 5px; text-align: center; font-weight: bold; font-size: 1.2em;">HYDR</div> <p data-bbox="151 471 263 558">Hydraulic pressure < 20 bar</p>	<p data-bbox="647 268 725 291" style="text-align: center;">NOTE</p> <p data-bbox="356 299 1016 354">Pressure in accumulator allows enough time to secure the flight.</p> <ul style="list-style-type: none"> <li data-bbox="348 362 505 385">• On ground : <ol style="list-style-type: none"> <li data-bbox="370 393 880 417">1. Collective LOCK <li data-bbox="370 424 848 448">2. HYD switch (on Collective lever) OFF <div data-bbox="575 471 796 511" style="background-color: black; color: white; padding: 2px; text-align: center; font-weight: bold; font-size: 0.8em;">CAUTION</div> <p data-bbox="348 519 953 573">If not locked, the collective pitch will pull up when HYD switch is in "OFF" position.</p> <ul style="list-style-type: none"> <li data-bbox="348 581 477 605">• In flight : <p data-bbox="370 613 544 636">Simultaneously</p> <ol style="list-style-type: none"> <li data-bbox="370 644 913 667">1. Collective REDUCE <li data-bbox="370 675 969 699">2. Cyclic..... SET IAS at Vy <li data-bbox="370 707 857 730">3. HYD switch (on Collective lever) OFF. <p data-bbox="370 738 555 762">To counter effort</p> <ol style="list-style-type: none"> <li data-bbox="370 769 1009 793">4. Cyclic..... PUSH FORWARD <li data-bbox="370 801 902 824">5. Collective..... ADJUST <div data-bbox="575 840 796 879" style="background-color: black; color: white; padding: 2px; text-align: center; font-weight: bold; font-size: 0.8em;">CAUTION</div> <p data-bbox="393 895 992 950">If HYD switch is not switched off on the collective lever, collective pitch may increase.</p> <p data-bbox="647 973 725 997" style="text-align: center;">NOTE</p> <p data-bbox="432 1005 751 1028" style="text-align: center;">Efforts increase with speed.</p> <p data-bbox="348 1036 471 1059">Approach :</p> <p data-bbox="348 1067 1009 1091">perform a shallow approach and terminate to a hover landing.</p> <ul style="list-style-type: none"> <li data-bbox="348 1099 477 1122">• In hover : <p data-bbox="370 1130 577 1154">Landing possible :</p> <p data-bbox="370 1161 745 1185">LAND AS SOON AS POSSIBLE</p> <p data-bbox="370 1193 544 1216">Normal landing.</p> <div data-bbox="553 1224 801 1271" style="background-color: black; color: white; padding: 2px; text-align: center; font-weight: bold; font-size: 0.8em;">CAUTION</div> <p data-bbox="370 1287 1009 1342" style="text-align: center;">WHEN ON THE GROUND SHUT DOWN THE ENGINE, THEN LOCK THE COLLECTIVE PITCH.</p>

3.7.4 ELECTRICAL EMERGENCY

WARNING PANEL	CORRECTIVE ACTIONS
<p>TEMP</p> <p>Maximum battery temperature.</p> <ul style="list-style-type: none"> Above 60° C, AMBER alarm is displayed on VEMD. Above 75° C, RED alarm is displayed on VEMD and warning panel. 	<p>Battery temperature and voltage CHECK If overheating confined:</p> <ol style="list-style-type: none"> Battery pushbutton OFF Generator Voltage CHECK <pre> graph TD A[Generator Voltage CHECK] --> B[NORMAL] A --> C[ABOVE U max 32V] B --> D[Battery temp CHECK] D --> E[STEADY] D --> F[DECREASES] E --> G[LAND AS SOON AS PRACTICABLE] F --> H[CONTINUE FLIGHT] C --> I["1. Battery ON 2. Generator OFF 3. Unnecessary equipment OFF"] I --> J[LAND AS SOON AS PRACTICABLE] H --> K["When bat temp < 65 °C Battery ON"] </pre>
<p>BATT</p> <p>Battery off line</p>	<pre> graph TD A["[BAT] pushbutton CHECK ON"] --> B[YES] A --> C[NO] B --> D["[ELECT RESST] pushbutton"] D --> E["BATT"] E --> F[Goes out] F --> G[CONTINUE FLIGHT] C --> H["[BAT] ON pushbutton"] H --> I["BATT"] I --> J[Remains on] J --> K[LAND AS SOON AS PRACTICABLE] </pre>

WARNING PANEL	CORRECTIVE ACTIONS
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">BATT FUSE</div> <p>Battery fuse has blown. Battery is off line.</p>	<p>LAND AS SOON AS PRACTICABLE</p>
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">GENE</div> <p>DC Generator off line</p>	<p>[GENE] pushbutton CHECK ON</p> <pre> graph TD A["[GENE] pushbutton CHECK ON"] -- YES --> B["[ELECT RESET] ON pushbutton"] A -- NO --> C["[GENE] pushbutton ON"] B --> D["GENE Goes out"] B --> E["GENE Remains on"] D --> F["CONTINUE FLIGHT"] E --> G["Unnecessary equipment OFF"] G --> H["LAND AS SOON AS PRACTICABLE"] H --> I["CAUTION"] </pre> <p>If the battery fails, the VEMD will go out and only analog NR information will remain. Before battery failure, No audio alarm will come on (U < 18V).</p>

3.7.5 FUEL EMERGENCY

WARNING PANEL	CORRECTIVE ACTIONS
<div style="border: 1px solid black; background-color: black; color: white; padding: 5px; display: inline-block; margin-bottom: 10px;">FUEL</div> <p>Fuel quantity < 30 kg</p>	<p style="text-align: center;">LAND AS SOON AS POSSIBLE</p> <p style="text-align: center;">NOTE</p> <p style="text-align: center;">15 mn of flight time remain at MCP</p> <div style="background-color: black; width: 100px; height: 15px; margin: 0 auto;"></div> <p style="text-align: center;">AVOID MAINTAINING SIDESLIP OVER 15°</p>
<div style="border: 1px solid black; background-color: black; color: white; padding: 5px; display: inline-block; margin-bottom: 10px;">FUEL P</div> <p>Low fuel pressure</p>	<ul style="list-style-type: none"> • At engine start up : Booster pump ON <div style="text-align: center;">↓</div> <div style="border: 1px solid black; background-color: black; color: white; padding: 5px; display: inline-block; margin: 0 auto; text-align: center;"> FUEL P </div> Goes Out • In flight : <ol style="list-style-type: none"> 1. Collective pitch REDUCE POWER 2. Booster pump ON <p style="margin-top: 10px;">Be prepared in case of an engine flame-out.</p> <p style="text-align: center;">LAND AS SOON AS POSSIBLE</p> <p style="text-align: center;">Execute a minimum power approach and landing.</p>

WARNING PANEL	CORRECTIVE ACTIONS
<div data-bbox="184 310 296 407" style="border: 1px solid black; padding: 5px; text-align: center; font-weight: bold;"> FUEL FILT </div> <p data-bbox="156 451 268 509">Fuel filter clogged</p>	<div data-bbox="571 297 823 344" style="background-color: black; width: 100px; height: 30px; margin: 0 auto;"></div> <p data-bbox="375 360 1013 486" style="text-align: center;">FUEL FILTER BY-PASS OPENING DRIVES POLLUTION INTO THE FUEL LINE, AND THE GOVERNOR, INTRODUCING OSCILLATIONS, LIMITED POWER OR EVENTUALLY FLAME-OUT.</p> <p data-bbox="352 501 823 540">Collective pitch..... REDUCE POWER</p> <div style="display: flex; justify-content: space-around; margin: 20px 0;"> <div data-bbox="436 603 548 705" style="border: 1px solid black; padding: 5px; text-align: center; font-weight: bold;"> FUEL FILT </div> <div data-bbox="716 603 828 705" style="background-color: black; color: white; padding: 5px; text-align: center; font-weight: bold;"> FUEL FILT </div> </div> <p data-bbox="431 760 537 791" style="text-align: center;">Goes out</p> <p data-bbox="705 760 834 791" style="text-align: center;">Remains lit</p> <p data-bbox="352 831 716 870" style="text-align: center;">Continue flight at reduced power.</p> <div style="display: flex; justify-content: space-around; margin: 20px 0;"> <p data-bbox="386 901 632 964">LAND AS SOON AS PRACTICABLE</p> <p data-bbox="655 901 1024 948">LAND AS SOON AS POSSIBLE</p> </div> <p data-bbox="604 1011 778 1042" style="text-align: center;">MONITOR Ng</p> <p data-bbox="576 1050 812 1081" style="text-align: center;">Ng oscillations occur</p> <p data-bbox="397 1121 1024 1160" style="text-align: center;">Twist grip MANUAL GOVERNING</p> <p data-bbox="548 1168 834 1199" style="text-align: center;">LAND IMMEDIATELY</p> <p data-bbox="571 1238 817 1270" style="text-align: center;">Ng oscillations persist</p> <p data-bbox="470 1309 879 1340" style="text-align: center;">Autorotation procedure APPLY</p>

3.7.6 MISCELLANEOUS

WARNING PANEL	CORRECTIVE ACTIONS
<p>PITOT</p> <p>Pitot heating not operative</p>	<p>[PITOT] push-button ON</p> <pre> graph TD A["[PITOT] push-button ON"] --> B[YES] A --> C[NO] B --> D["Monitor airspeed indicator"] C --> E["[PITOT] push-button ON"] </pre>
<p>HORN</p> <p>Horn not operative</p>	<p>[HORN] push-button ON</p> <pre> graph TD A["[HORN] push-button ON"] --> B[YES] A --> C[NO] B --> D["Aural warning failure"] C --> E["[HORN] push-button ON"] </pre>
<p>P2 TEMP</p> <p>Maximum temperature in demisting heating duct exceeded</p>	<p>Cabin outlet nozzles ... Check</p> <pre> graph TD A["Cabin outlet nozzles ... Check"] --> B[Air flow] A --> C[No air flow] B --> D["Heating control Reduce until P2 TEMP light goes out"] C --> E["Heating control close"] </pre>

Replace the table by the following:

WARNING PANEL	CORRECTIVE ACTIONS
<div style="text-align: center; border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">PITOT</div> <p>Réchauffage Pitot non opérant</p>	<p style="text-align: center;">[PITOT] push-button ON</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>YES</p> <p>↓</p> <p>Monitor airspeed indicator</p> </div> <div style="text-align: center;"> <p>NO</p> <p>↓</p> <p>[PITOT] push-button ON</p> </div> </div>
<div style="text-align: center; border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">HORN</div> <p>Klaxon inopérant</p>	<p style="text-align: center;">[HORN] push-button ON</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>YES</p> <p>↓</p> <p>Aural warning failure</p> </div> <div style="text-align: center;"> <p>NO</p> <p>↓</p> <p>[HORN] push-button ON</p> </div> </div>

CAUTION

THIS PAGE MUST NOT BE REMOVED FROM THE MANUAL UNTIL MODIFICATIONS SB N° 21.008 HAVE BEEN EMBODIED TO THE AIRCRAFT

3.8 VARIOUS FAILURES AND INCIDENTS NOT INDICATED ON THE CWP

- Flight control hardover or servojam

Hardover is manifested by uncommanded movements of one or two flight controls.

Servojam is manifested by a higher than normal force to move the control.

1. Attitude..... MAINTAIN
2. HYD switch OFF
(on collective lever)
3. IAS..... Vy

LAND AS SOON AS POSSIBLE

SECTION 4

NORMAL PROCEDURES

	Page
4.1 GENERAL	4 - 1
4.1.1 OPERATING LIMITATIONS	4 - 1
4.1.2 FLIGHT PLANNING	4 - 1
4.1.3 TAKEOFF AND LANDING DATA	4 - 1
4.1.4 WEIGHT AND BALANCE DATA	4 - 1
4.2 PREFLIGHT CHECK	4 - 2
4.2.1 EXTERIOR CHECK	4 - 2
4.2.2 INTERIOR CHECK	4 - 4A
4.2.3 TURNAROUND CHECK	4 - 3A
4.3 START UP	4 - 4
4.3.1 ENGINE PRESTART CHECK	4 - 4
4.3.2 ENGINE STARTING	4 - 5
4.3.3 RUN-UP CHECK	4 - 6
4.4 TAKEOFF	4 - 8
4.4.1 BEFORE TAKEOFF CHECK	4 - 8
4.4.2 TAKEOFF CHECK AND PROCEDURE	4 - 8
4.5 CLIMB	4 - 9
4.6 CRUISE	4 - 9
4.7 APPROACH AND LANDING	4 - 9
4.7.1 APPROACH	4 - 9
4.7.2 LANDING	4 - 9
4.8 ENGINE AND ROTOR SHUTDOWN	4 - 10
4.9 EXTREME WEATHER OPERATIONS	4 - 11
4.9.1 HIGH WIND OPERATION (WIND ABOVE 30 KT)	4 - 11
4.9.2 COLD WEATHER OPERATION	4 - 12

LIST OF FIGURES

	Page
FIGURE 4-1 : SEQUENCE OF CHECKS.....	4 - 2
FIGURE 4-2 : TAKEOFF PROCEDURE.....	4 - 8

4.1 GENERAL

This section contains instructions and procedures for operating the helicopter from the planning stage, through actual flight conditions, to securing the helicopter after landing.

Normal and standard conditions are assumed in these procedures. Pertinent data in other sections is referenced when applicable.

The instructions and procedures contained herein are written for the purpose of standardization and are not applicable to all situations.

4.1.1 OPERATING LIMITATIONS

For minimum and maximum limits, refer to SECTION 2.

Each time an operating limitation is exceeded, an appropriate entry shall be made in the logbook (helicopter, engine, etc.). The entry shall state which limit was exceeded, the duration of time, the extreme value obtained, and any additional information essential in determining the maintenance action required.

4.1.2 FLIGHT PLANNING

Each flight should be planned adequately to ensure safe operations and to provide the pilot with the data to be used during flight.

Flight planning must comply with helicopter limitations and performances (Refer to SECTIONS 2, 5, 6 and 9).

4.1.3 TAKEOFF AND LANDING DATA

Refer to SECTION 2 - LIMITATIONS and
SECTION 5 - PERFORMANCE DATA.

4.1.4 WEIGHT AND BALANCE DATA

Ascertain proper weight and balance of the helicopter as follows

- Consult SECTION 6 - WEIGHT AND BALANCE.
- Ascertain weight of fuel, oil, payload, etc.
- Compute takeoff and anticipated landing gross weights.
- Check helicopter centre of gravity (CG) locations.
- Check that the weight and CG limitations in SECTION 2 are not exceeded.

4.2 PREFLIGHT CHECK

- Make sure that the Flight-Related Checks (VLV) after the last flight of the previous day or before the first flight of the day have been performed either by a pilot suitably trained to perform VLV and referring to present Flight Manual (see SECTION 8) or by a qualified mechanic complying with the Aircraft Maintenance Manual.
- Check that the aircraft area is clean and unobstructed.
- Carry out the following checks :

4.2.1 EXTERIOR CHECK

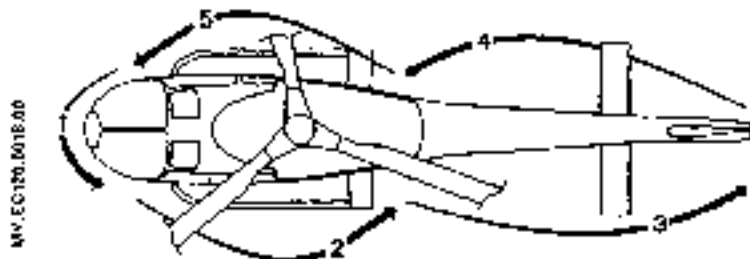


Figure 4-1 : Sequence of Checks

Station 1

- Pitot tube Cover removed - check condition.
- Landing gear (crossmembers, skids, wear restrain plates) Secure - visual check.
- Engine air intake Clear (water, snow, foreign matter)

Station 2

- Doors Closed.
- Fuel tank and system Filler plug closed.
- MGB cowl MGB and engine oil levels. Cowl closed.
- All lower and upper fairing panels Closed

- Main rotor head Visual inspection, rotor head, sleeves, spherical thrust bearing, adapters, bonding braids
 - Hydraulic unit/system Check hydraulic reservoir fluid level.
 - Main rotor blades Secure, visual inspection from ground.
 - Static port Clear.
 - Exhaust pipe Condition - Cover removed.
 - Rear door cargo compartment Check for snow in the tail boom - Closed.
 - Tail boom Condition, condition of antennas.
- Station 3
- Stabilizer General condition.
 - Tail rotor blades No impact.
 - Tail rotor hub fairing No rotation (paint marks).
- Station 4
- Yaw control rod Secured.
 - TGB Oil level.
 - Stabilizer General condition.
 - Tail boom Condition, condition of antennas.
- Station 5
- Static port Clear.
 - Starboard cargo door Door opening action. No loose objects. Electrical panel. Closing, latching.
 - Landing gear (crossmembers, skids, wear resistant plates) Secure, visual inspection.
 - All lower fairing panels Closed.
 - EPU door Closed.
 - MGB cowl No foreign object on transmission deck. Deck wiped clean. Cowl closed.

4.2.2 INTERIOR CHECK

- CabinClean.
- Blanking plate of pedal unitInstalled (if single pilot configuration).
- Fire extinguisherFitted and checked.
- BreakersAll set.
- Objects carried Stowed.
- FreightStowed.
- Door jettisonChecked, lockwired.

4.2.3 TURNAROUND CHECK

- Overall aspectcondition, cleanliness.
- Engine / MOH oil level.
- Main and tail rotor blades condition.
(from ground)
- Loads secured.
- All doors and cowlingslocked.

NOTE 1

If the aircraft is to be parked some time between flights, temporary picketing is recommended by fitting blanks, covers, and blade socks. In this case, perform a complete exterior check.

NOTE 2

Perform a complete exterior check if the aircraft is to be parked under snow precipitations.

4.3 START UP

4.3.1 ENGINE PRESTART CHECK

- Seats and control pedals ADJUSTED.
- Seat belts FASTENED.

NOTE 1

Copilot seat belts shall be fastened in all cases.

NOTA 2

When the rear seats are unoccupied, check that the unused safety belts are not fastened and the button on the shoulder straps is not visible.

NOTE 3

Check that, when flying with doors open there are no loose objects in the cabin, and the belts of unoccupied rear seats are stowed between the backrest foam and the backrest.

1. Heating, demisting, an conditioner..... OFF.
2. Rotor brake..... FORWARD.
3. Fuel shut-off lever FORWARD, LOCKWIRED.
4. Battery and Generator ON.
5. Light test..... COMPLETE.
6. Engine fire test COMPLETE.
7. Warning panel remaining lights CHECK
 - With battery power.....

GENE	PITOT	ENG
FUEL	HORN	MGB
TWT GRP	HYDR	

 illuminated.
 - With EPU power..... Same lights as above +

BATT

 illuminated
8. VHMD Engine page DISPLAYED.
9. Control pedals Freedom of travel, then NEUTRAL.
10. Collective pitch LOCKED.
11. Twist grip SHUT OFF position.
12. Hydraulic switch (both collective levers) ON.

Replace the paragraph 4.3.2 by the following paragraph :

4.3.2 ENGINE STARTING

1. Booster pump ON
FUEL P goes out
2. Anticollision light ON
- After 30 s
3. Starter **DEPRESS**
4. Twist grip **GROUND IDLE** position

NOTE

If remaining T4 is above 150°C, wait until 10% Ng before actuating twist grip.

5. Twist grip **MONITOR T4**
depending upon T4 rate of increase.
- When Ng = 50%
6. Starter **RELEASED**
7. Twist grip **FLIGHT POSITION**
Maintain Tq < 40%

Check that **ENG P**, **HYDR** and **MGB P** lights go out on the warning panel.

- When NR ≥ 350 rpm
 Switch ON the aural warning and check that **HORN** light goes out on the warning panel
- When Twist Grip is in flight position
 Check that NR indication is in the lower part of the green arc and that **TWT GRIP** light is out.

CAUTION

THIS PAGE MUST NOT BE REMOVED FROM THE MANUAL UNTIL MODIFICATION SB N° 76.007 HAS BEEN EMBODIED TO THE AIRCRAFT.

4.3.2 ENGINE STARTING

1. Booster pump ON

FUEL P goes out

2. Anticollision light ON

• After 30 s

3. Twist grip , on START position

4. Starter DEPRESS

5. Twist grip MONITOR T4

depending upon T4 rate of increase.

• When Ng > 50%

6. Starter RELEASED

7. Twist grip FLIGHT POSITION

Maintain Tq < 40%

Check that **ENG P** , **HYDR** and **MGB P** lights go out on the warning panel

• When NR ≥ 350 rpm.

Switch ON the aural warning and check that **HORN** light goes out on the warning panel.

• When Twist Grip is in flight position.

Check that NR indication is in the lower part of the green arc and that **TWT GRIP** light is out.

NOTE

↓ At Ng > 60 % the VENT upper screen automatically switches to FLI display.

• If EPU is used :

EPU DISCONNECTED

Check that **GENE** and **BATT** are not illuminated on the caution and warning panel.

NOTE

- In case of an aborted start, keep the starter button depressed, set twist grip to shut off position, release the starter button, then switch off the booster pump and the generator.
- In case of T4 higher than 200°C or aborted start due to excessively high T4, check the battery voltage :
 - Normal voltage :
 - Crank (LACU pushbutton) during 10 s.
 - Apply Normal start procedure.
 - Voltage under 15 Vdc when starting :
No start possible.

4.3.3 RUN-UP CHECK

1. Pitot heat ON.
PITOT goes out
2. Booster pump OFF.
3. Check :
 - . No warning light illuminated.
 - . Electrical system voltage and current.
 - . Engine oil pressure
4. All necessary systems ON. TESTED
(Radio, radio navigation, lights, windshield wiper* etc.).

NOTE

Do not use the wiper on a dry windshield or in light rain.

* Optional

Replace the paragraph 4.3.2 by the following paragraph (cont'd):

NOTE

At $N_g > 60\%$ the VEMD upper screen automatically switches to FLI display.

- If EPU is used:

EPU.....DISCONNECTED

Check that **GENE** and **BATT** are not illuminated on the warning panel.

NOTE 1

- In case of an aborted start, keep the starter button depressed, set twist grip to shut off position, release the starter button, then switch off the booster pump and the generator.
- In case of aborted start due to excessively high T4, check the battery voltage :
 - Normal voltage :
Try to restart, wait until $N_g \approx 10\%$ before actuating twist grip, then gradually increase the fuel flow without N_g drop.
 - Voltage under 15 Vdc when starting :
No start possible.

NOTE 2

After a failed start or if T4 is higher than 200°C, crank the engine before actuating the starter button, then control T4 with twist grip.

CAUTION

THIS PAGE MUST NOT BE REMOVED FROM THE MANUAL UNTIL MODIFICATION
SI N° 76 002 HAS BEEN EMBODIED TO THE AIRCRAFT

• Hydraulic accumulator test :

1. Collective pitch LOCKED.
2. Hydraulic LACU pushbutton, OFF.

HYDR comes on

. Move the cyclic stick 2 or 3 times along both axes separately $\pm 10\%$ of total travel (± 2.5 cm). Check hydraulic assistance for absence of control load.

3. Hydraulic LACU pushbutton, ON

HYDR goes out



If not locked, the collective pitch will increase when HYD switch is in "OFF" position.

• Hydraulic shut-off test :

1. Collective pitch LOCKED.
2. Hydraulic collective switch, OFF.

HYDR Comes on.

Control loads are immediately felt.

3. Hydraulic collective switch, ON

HYDR goes out immediately.

4.4 TAKEOFF

4.4.1 BEFORE TAKEOFF CHECK

1. Doors.....CLOSED.
2. Collective, cyclic friction locks.....AS REQUIRED
3. Landing light.....AS REQUIRED
4. Pressures and temperatures.....NORMAL RANGE.
5. Warning panel.....All lights OFF.
6. Collective pitch.....UNLOCKED.

NOTE

Adjust collective and cyclic friction locks so that friction forces are felt by the pilot when moving the flight controls.

4.4.2 TAKEOFF CHECK AND PROCEDURE

CAUTION

Use of P2 air levels are forbidden above the maximum continuous rating (Ng or T4)

- Gradually increase collective pitch to hover at 5 ft. Check engine and mechanical control instruments, no warning light.
- Increase airspeed with the FFICE power until IAS = 40 kt, then begin to climb so as to clear 20 ft at IAS = 65 kt.

44-0100-REV 02

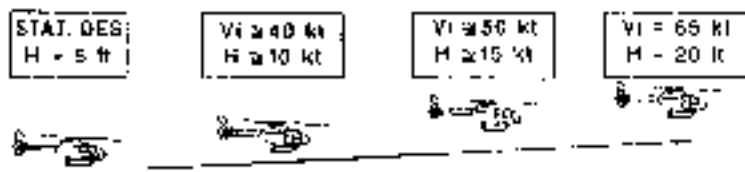


Figure 4-2: Takeoff Procedure

CAUTION

For safe operation, takeoff path should comply with HV diagram (refer to SECTION 5)

4.5 CLIMB

Above 100 ft (30 m) select Maximum Continuous Power and optimum climbing speed of (Vy) : IAS = 65 kt (120 km/h) - 1 kt per 1000 ft.

4.6 CRUISE

Fast cruise is obtained by the first limitation reached corresponding to the beginning of the FLI amber area :

Corresponding mechanical limit Tq or Ng are pointed out with underlined numerical value.

Economic cruise : set Tq to 10% less than MCP Tq.

Reduce indicated airspeed in turbulence.

4.7 APPROACH AND LANDING

4.7.1 APPROACH

- Perform approach at a minimum rate of descent and at v_{y_0} .
- At approximately 100 ft, reduce airspeed down to HIGE at 5 ft.
- Approach check :
 1. Landing light.....**AS REQUIRED.**
 2. All parameters.....**CHECK.**

4.7.2 LANDING

In hover, gradually reduce collective pitch until touch-down, then fully reduce collective pitch.



Use of P2 air bleeds are forbidden above the maximum continuous rating (Ng or T4)

4.8 ENGINE AND ROTOR SHUTDOWN

1. Cyclic stick NEUTRAL
 2. Collective pitch LOCK
 3. Pitot, Horn, Landing light OFF
 4. Twist grip GROUND IDLE position
63 % \leq Ng \leq 68 %, wait 30 s. for temperature stabilization.
 5. Generator and all systems OFF
 6. Twist grip SHUT OFF position
Cancel the idle stop by briefly pressing the starter button.
- For NR \leq 150 rpm
 - 7. Rotor brake APPLY
 - 8. Anticollision light OFF

• BEFORE LEAVING HELICOPTER

- VCMD CHECK flight report page information.
- Ng and Nf cycles written in white characters and above 0.
- Switch off the battery.
- Pitot, intake, exhaust covers, blade socks as required.

4.9 EXTREME WEATHER OPERATIONS

4.9.1 HIGH WIND OPERATION (WIND ABOVE 30 KT)

• Parking

- Park the helicopter head into the wind. Maintain rotor brake applied with one blade at 12 o'clock. Keep blade socks until start up.
- For wind above 50 kt the helicopter must be tied down.

• Start up

- When the rotor begins to turn, push the cyclic stick slightly forward and accelerate the engine as soon as possible until NR = 320 rpm within T4 limitation.
- Then carry out the normal procedure.

NOTE

Start up and shut down have been demonstrated up to 55 kt of wind from all directions.

4.9.2 COLD WEATHER OPERATION

NOTE

Use of 3 cSt synthetic oil is recommended for low temperature operation.

- **Operation in Snow**

- Clean the helicopter before takeoff; blades, rotor head, windshield...
- Do not stay in HIGE with snow recirculation.
- Replace the turnaround check by a complete exterior check.

SECTION 5

PERFORMANCE DATA

(APPROVED PART / NON APPROVED PART)

	Page
5.1 INTRODUCTION	5 - 1
5.2 STARTING AND STOPPING THE ROTOR ENVELOPE	5 - 1
5.3 ENGINE CHECK PROCEDURE	5 - 1
5.3.1 BEFORE TAKEOFF	5 - 1
5.3.2 IN FLIGHT	5 - 1A
5.3.3 MANUAL ENGINE POWER CHECK	5 - 1B
5.4 AIR DATA SYSTEM CALIBRATION	5 - 4
5.5 HEIGHT - VELOCITY DIAGRAM	5 - 6
5.6 HOVER IN GROUND EFFECT	5 - 8
5.7 HOVER OUT OF GROUND EFFECT	5 - 9
5.8 CORRECTED WEIGHT	5 - 20
5.9 RATE OF CLIMB	5 - 11
5.10 GLIDE DISTANCE IN AUTOROTATION	5 - 12
5.11 NOISE LEVEL	5 - 12

LIST OF FIGURES

	Page
FIGURE 5 - 1a : ENGINE POWER CHECK.....	5 - 2
FIGURE 5 - 1b : ENGINE POWER CHECK.....	5 - 3
FIGURE 5 - 2 : T4 CHECK.....	5 - 4
FIGURE 5 - 3 : AIR DATA SYSTEM CALIBRATION.....	5 - 5
FIGURE 5 - 4 : HEIGHT - VELOCITY DIAGRAM.....	5 - 7
FIGURE 5 - 5 : HOVER IN GROUND EFFECT.....	5 - 8
FIGURE 5 - 6 : HOVER OUT OF GROUND EFFECT.....	5 - 9
FIGURE 5 - 7 : CORRECTED WEIGHT.....	5 - 10
FIGURE 5 - 8 : RATE OF CLIMB.....	5 - 11
FIGURE 5 - 9 : TAS/CAS IN RECOMMENDED CRUISE.....	5 - 13
FIGURE 5 - 10 : FUEL CONSUMPTION-ENDURANCE IN RECOMMENDED CRUISE.....	5 - 14
FIGURE 5 - 11 : RANGE IN RECOMMENDED CRUISE.....	5 - 15
FIGURE 5 - 12 : TAS/CAS IN FAST CRUISE.....	5 - 16
FIGURE 5 - 13 : FUEL CONSUMPTION-RANGE IN FAST CRUISE.....	5 - 17
FIGURE 5 - 14 : ENDURANCE IN CRUISE AT MINIMUM HOURLY FUEL CONSUMPTION.....	5 - 18

5.1 INTRODUCTION

The following performance curves apply to the basic version of the aircraft. Refer to SECTION 9 when optional equipment is fitted.

NOTE

Values obtained on **VEMD PERFORMANCE** and **ENGINE POWER CHECK** pages can be checked with the **ENGINE POWER CHECK, T4 CHECK, HOVER IN GROUND EFFECT, and HOVER OUT OF GROUND EFFECT** curves.

For AUV over 1680 kg, the performances have to be checked manually with the figures 5-5, 5-6 and 5-7.

CAUTION

Pilot shall limit the flight envelope and weight displayed on **VEMD PERFORMANCE** pages to the relevant limitations of SECTION 2.

5.2 STARTING AND STOPPING THE ROTOR ENVELOPE

Maximum wind velocity from any direction for starting and stopping the rotor is 35 kt.

5.3 ENGINE CHECK PROCEDURE

5.3.1 BEFORE TAKEOFF

In HIGE at 5ft and before initiating forward flight, pull the collective pitch lever slightly to ensure that the N_{ig} can increase by at least 1%.

5.3.2 IN FLIGHT

Perform a VEMD engine check (Pressure Altitude - Hp - less than 12000 ft (3657 m) and heater and demister OFF).

Apply to the "TRQ MARGIN" given by the VEMD, the correction factor of the following table :

Pressure altitude (ft)	0	1000	2000	3000	4000	5000
TRQ (%)	+1.7	+1.3	+1	+0.7	+0.4	0

Example :

OAT = 20 °C
Ng = 98.7 %
TORQUE = 97 %

Hp = 1000 ft
NR = 411 tr/min

"TRQ MARGIN" (VEMD)	=	+1	%
"TRQ (%) Correction	=	+1.3	%
<hr/>			
"TRQ MARGIN" Real	=	+2.3	%

5.3.3 MANUAL ENGINE POWER CHECK

In stabilized level flight at the maximum Ng displayed, note the following parameters : torque, Ng, NR, Hp, OAT and T4. Read the figures ENGINE POWER CHECK and T4 CHECK in the direction indicated by the arrows. Engine power check is OK if point "P" is located in the area marked "CORRECT". T4 check is OK if point "T" is located in the area marked "CORRECT".

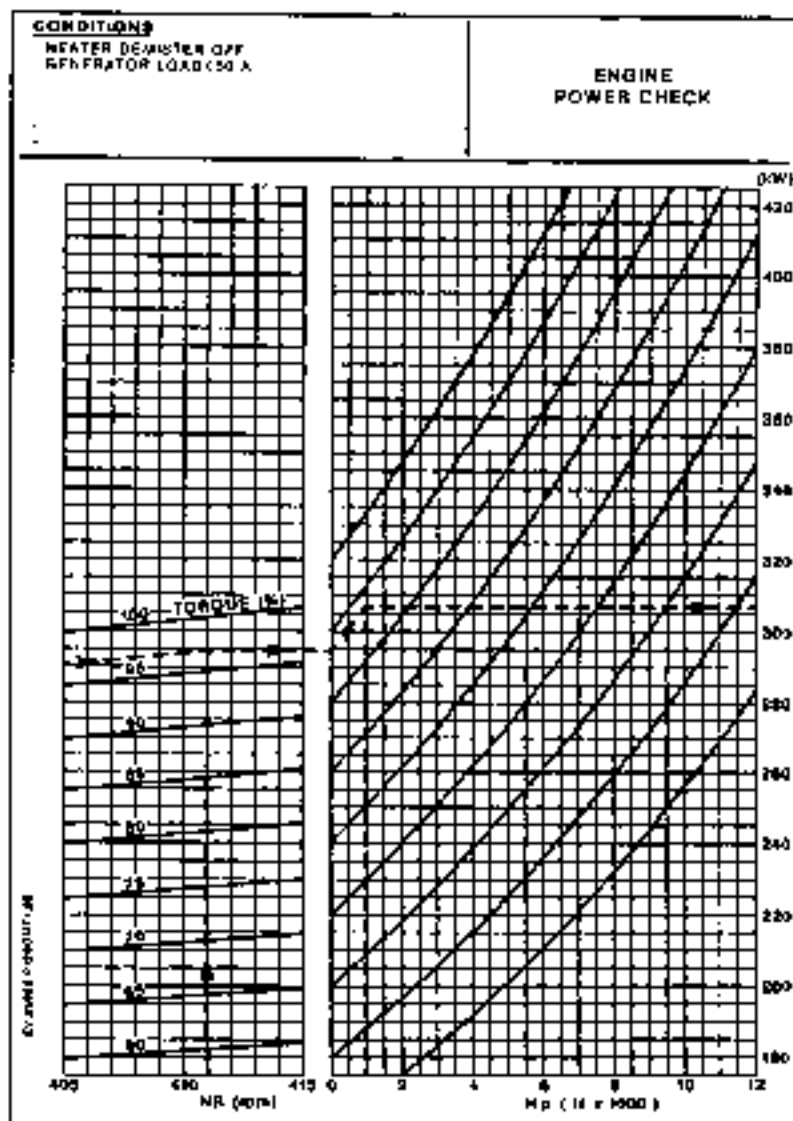


Figure 5-1a

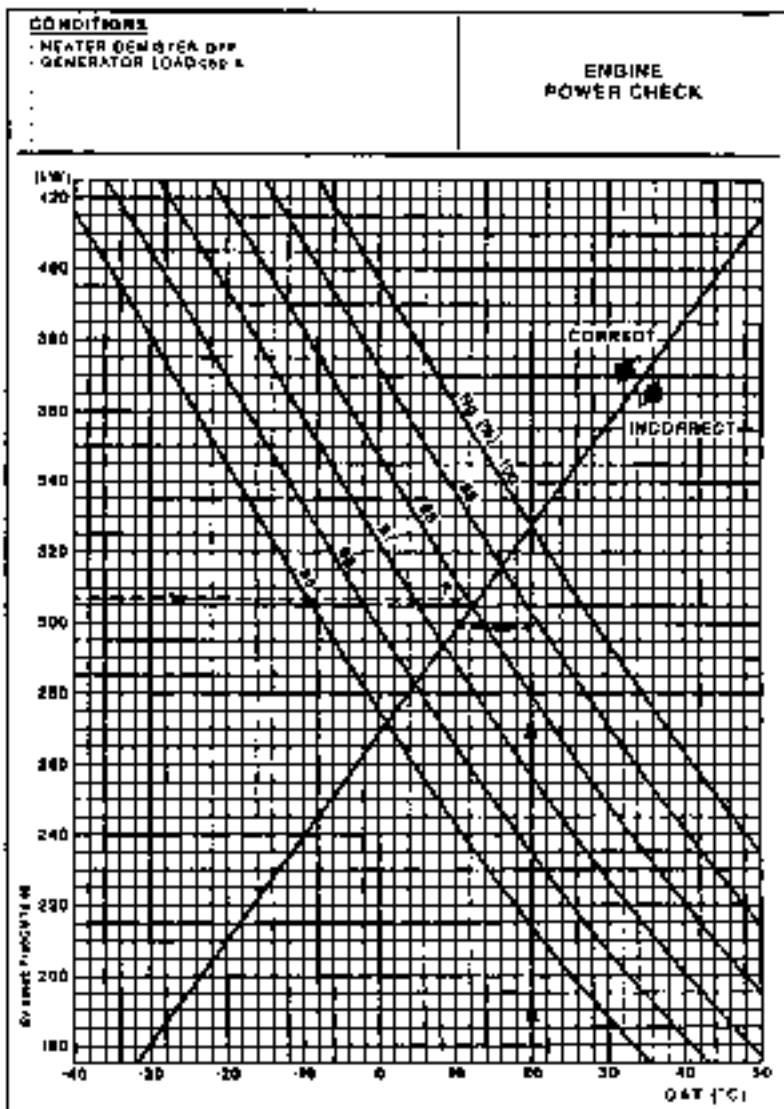


Figure 5 - 1b

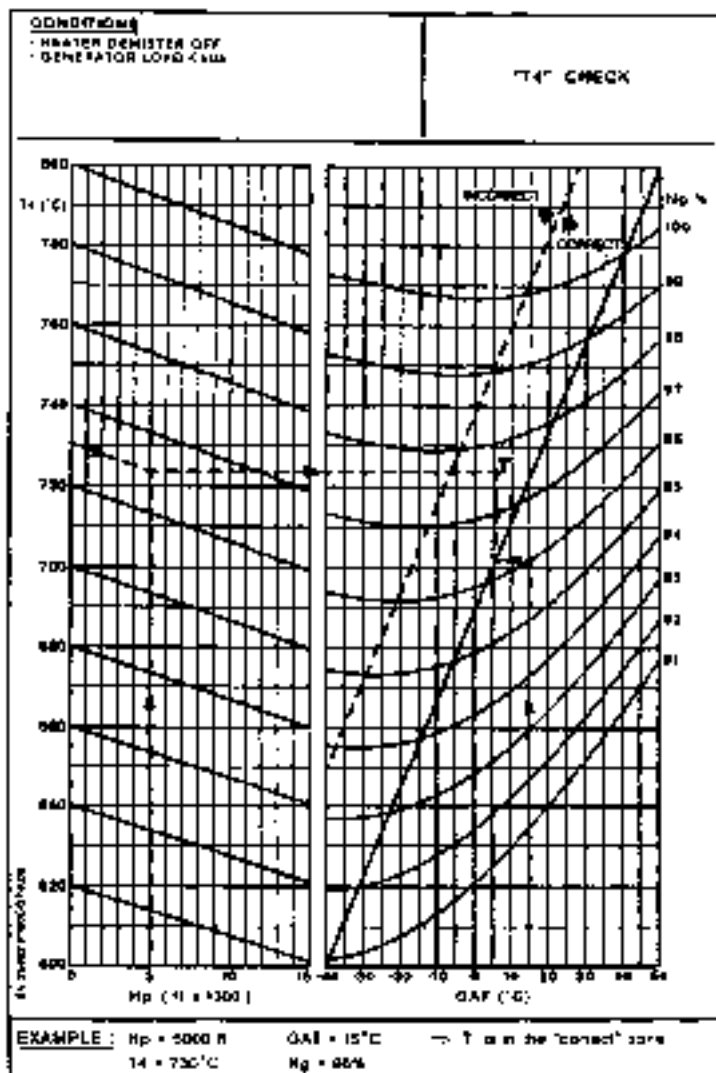


Figure 5 - 2

5.4 AIR DATA SYSTEM CALIBRATION

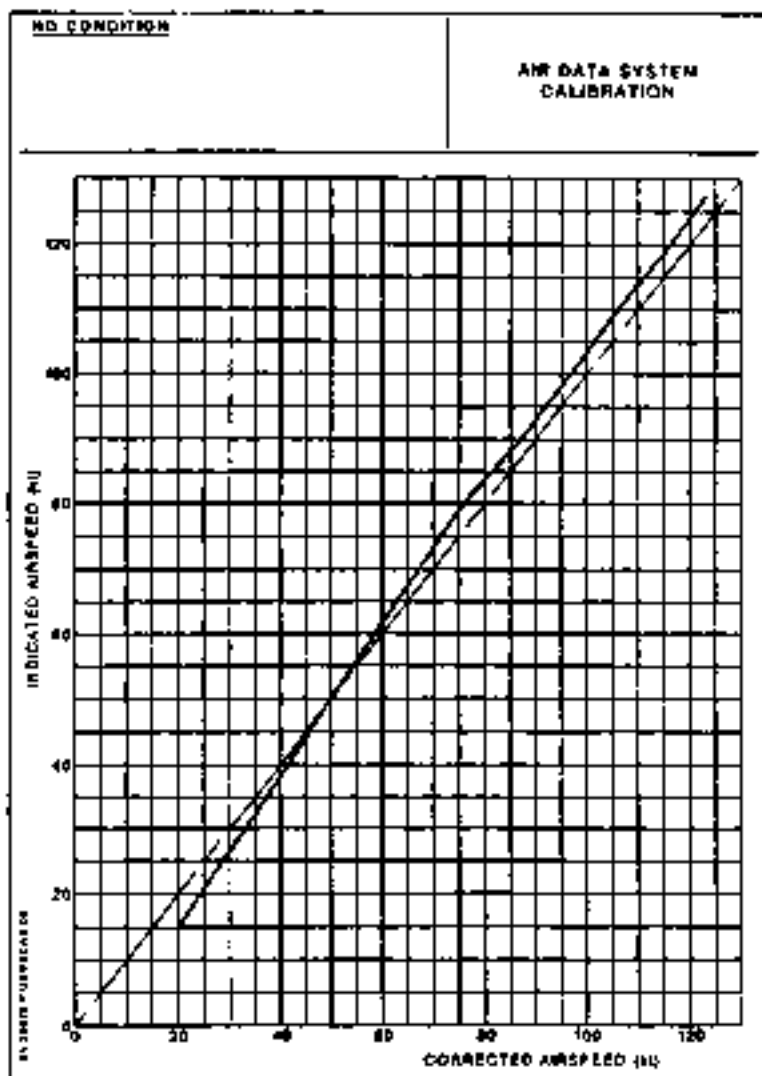


Figure 5-2

5.5 HEIGHT - VELOCITY DIAGRAM

The avoidance zone is defined by 4 points : A, B, C, D

- Point A : low hover point

Point A is at 6 ft (1.80 m) skid height at zero airspeed.

- Point B

Point B is defined by :

- a variable height (18 ft \leq height \leq 24 ft) depending on the altitude and on the aircraft weight as determined by line (C),
- a variable airspeed (50 kt \leq LAS \leq 60 kt) depending on the altitude and on the aircraft weight as determined by line (C)

- Point C


Point C is defined by :

- a constant height of 50 ft (15 m),
- a variable airspeed (50 kt \leq LAS \leq 60 kt) depending on the altitude and on the aircraft weight as determined by line (C).

- Point D

Point D is defined by :

- a variable height (500 ft \leq height \leq 800 ft) depending on the altitude and on the aircraft weight as determined by line (D),
- a constant zero airspeed

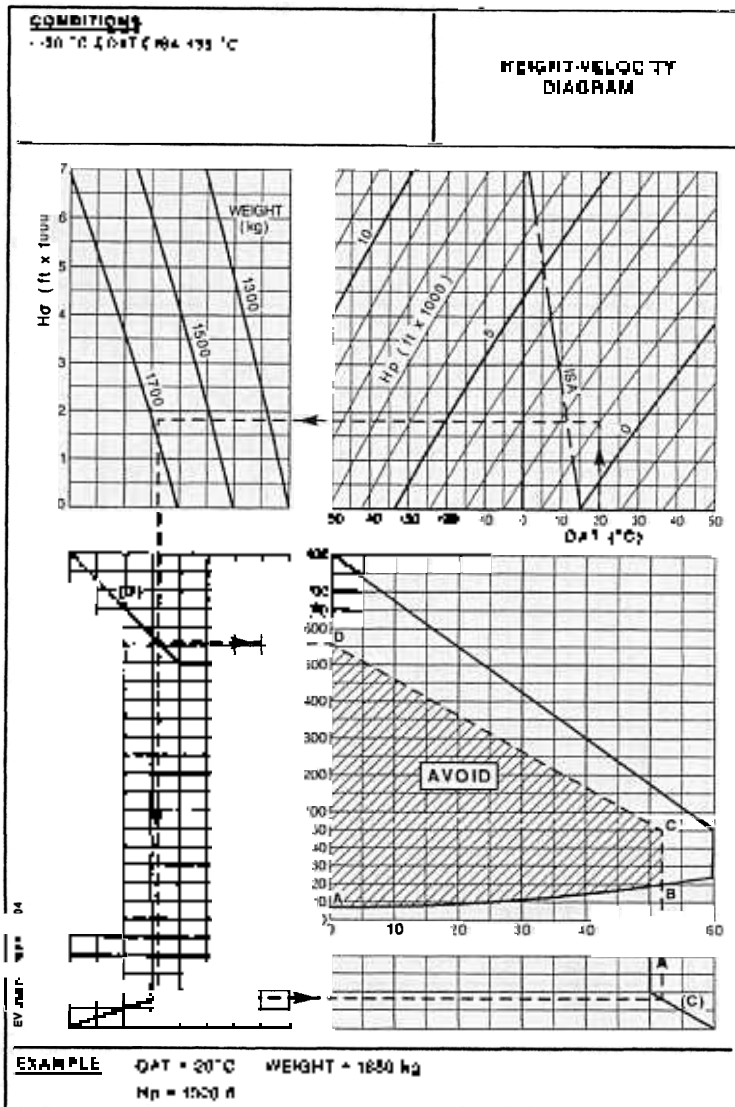
Figure 5 - 4

5.6 HOVER IN GROUND EFFECT

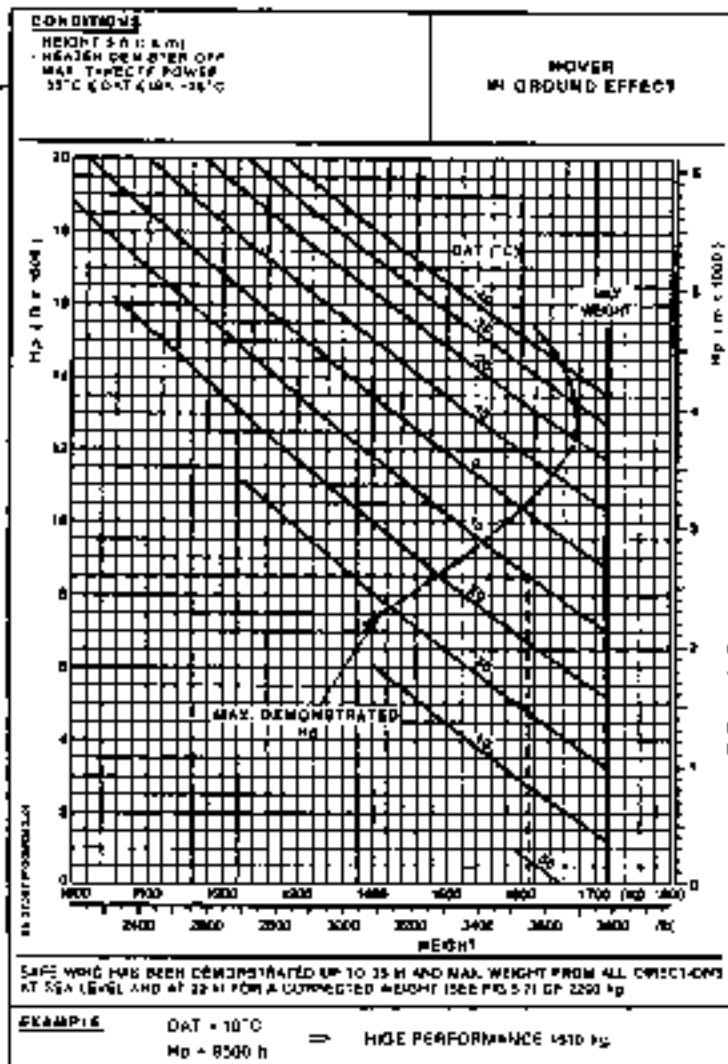


Figure 5-5

Replace figure 5-5 by the following :

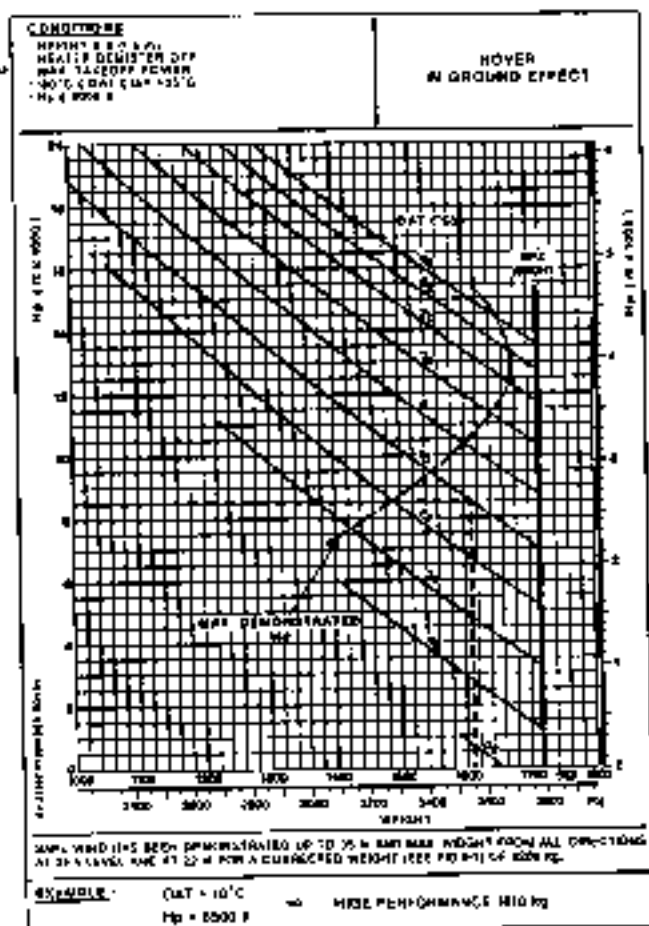


Figure 5 - 5

CAUTION

THIS PAGE MUST NOT BE REMOVED FROM THE MANUAL UNTIL MODIFICATIONS N° A 00075 AND SB N° 32.001 HAVE BEEN EMBODIED TO THE AIRCRAFT.

5.7 HOVER OUT OF GROUND EFFECT

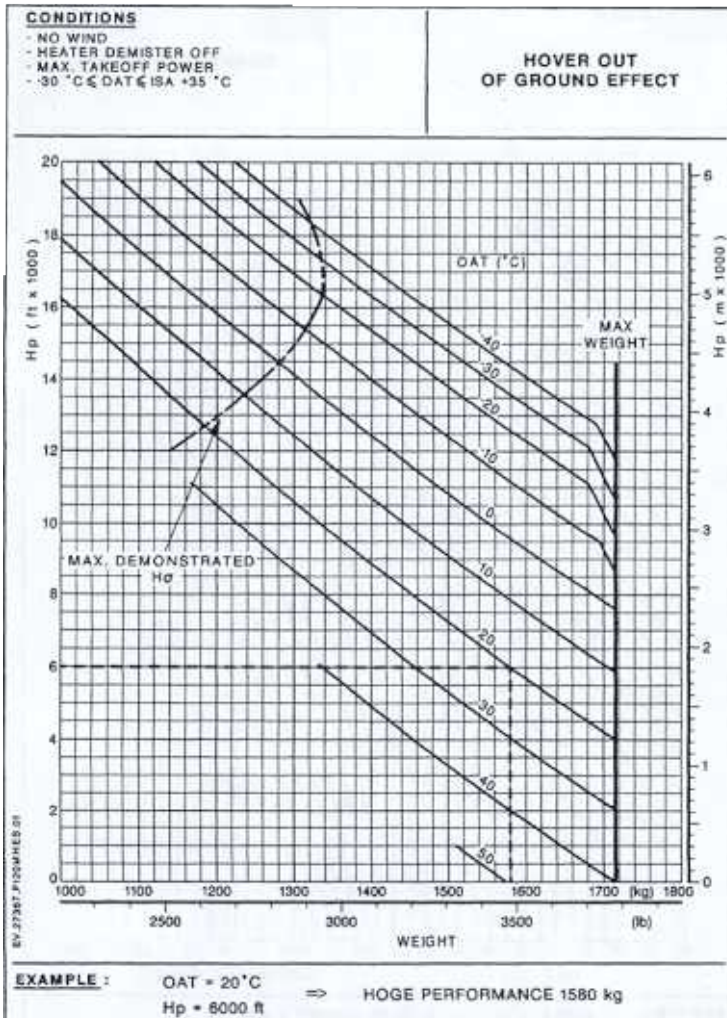


Figure 5 - 6

5.8 CORRECTED WEIGHT

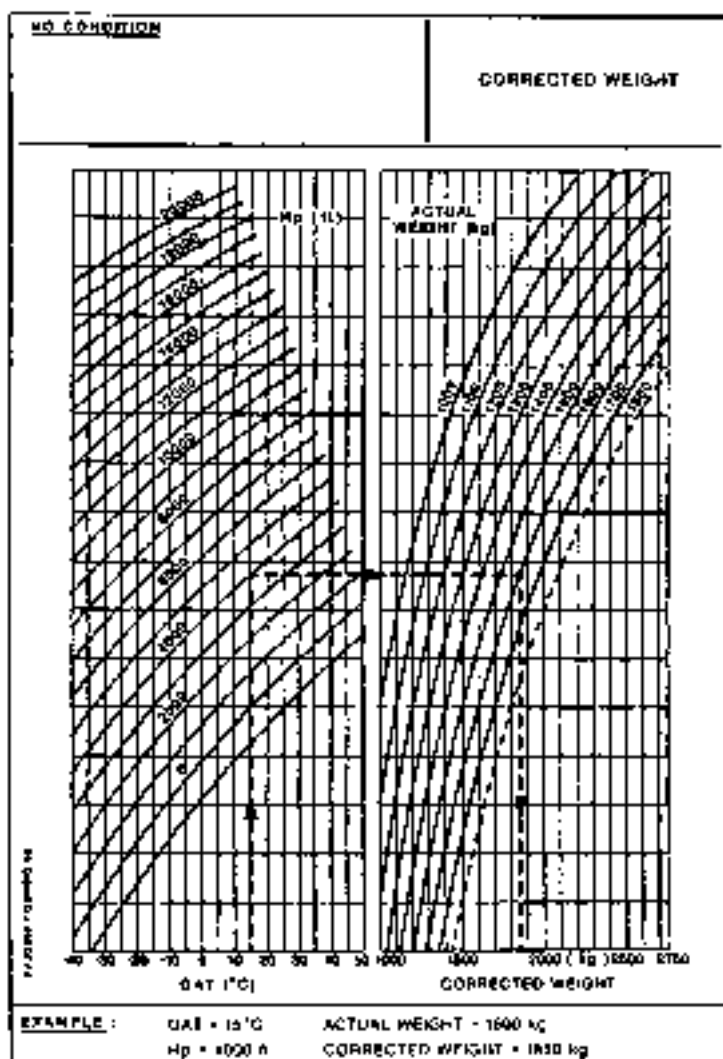


Figure 5 - 7

5.9 RATE OF CLIMB

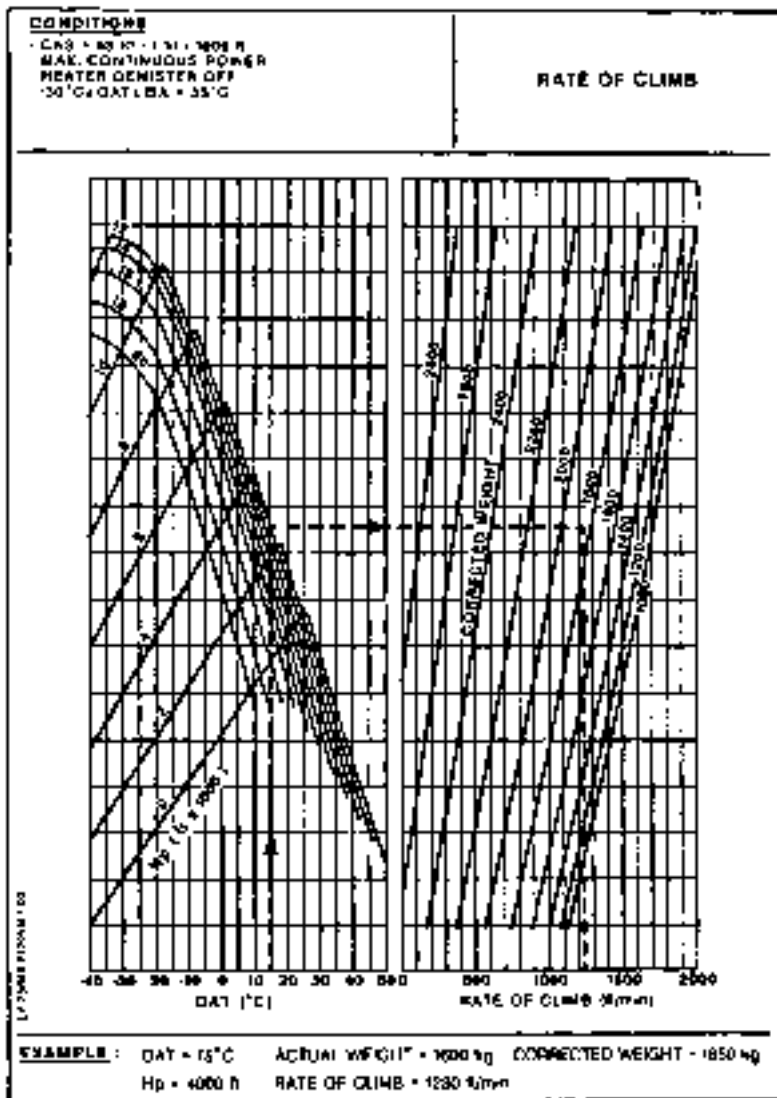


Figure 5 - 8

5.10 GLIDE DISTANCE IN AUTOROTATION


The distance flown in autorotation is :

0.7 Nm (1300 m)/1000 ft at V_y and NR \equiv 410 rpm

5.11 NOISE LEVEL

Noise characteristics defined by chapter 11 and appendix 4 of the ICAO annex 16 are as follows :

Measurement	Noise Level	ICAO Noise Limits
Reference Point	SEL (dBA)	SEL (dBA)
Overflight (at Max. gross weight)	78.7	85.4

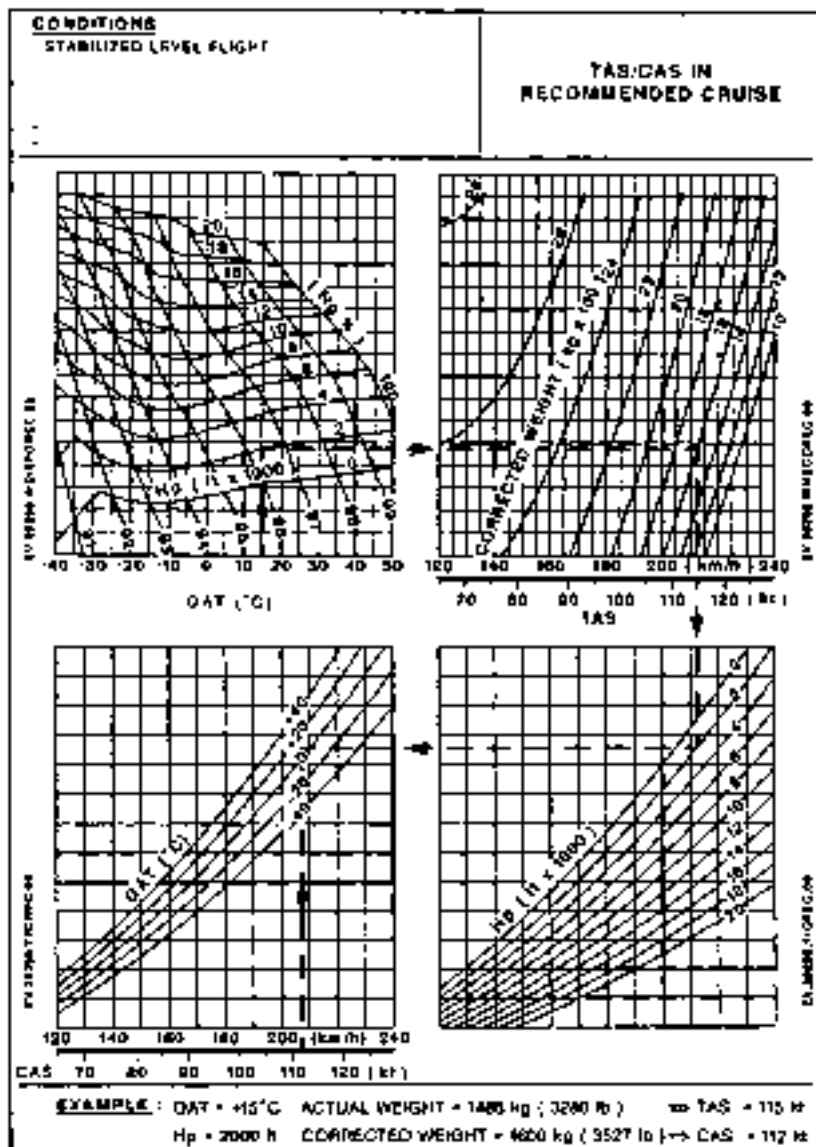
Figure 5-9

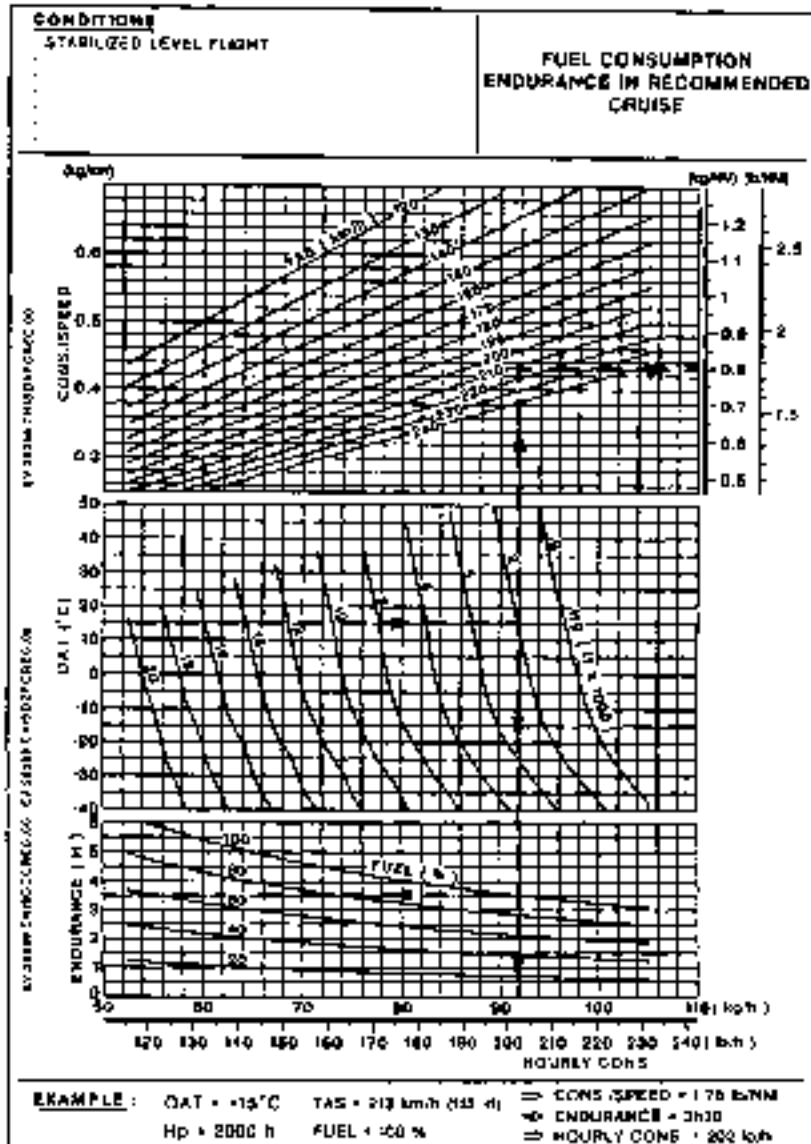
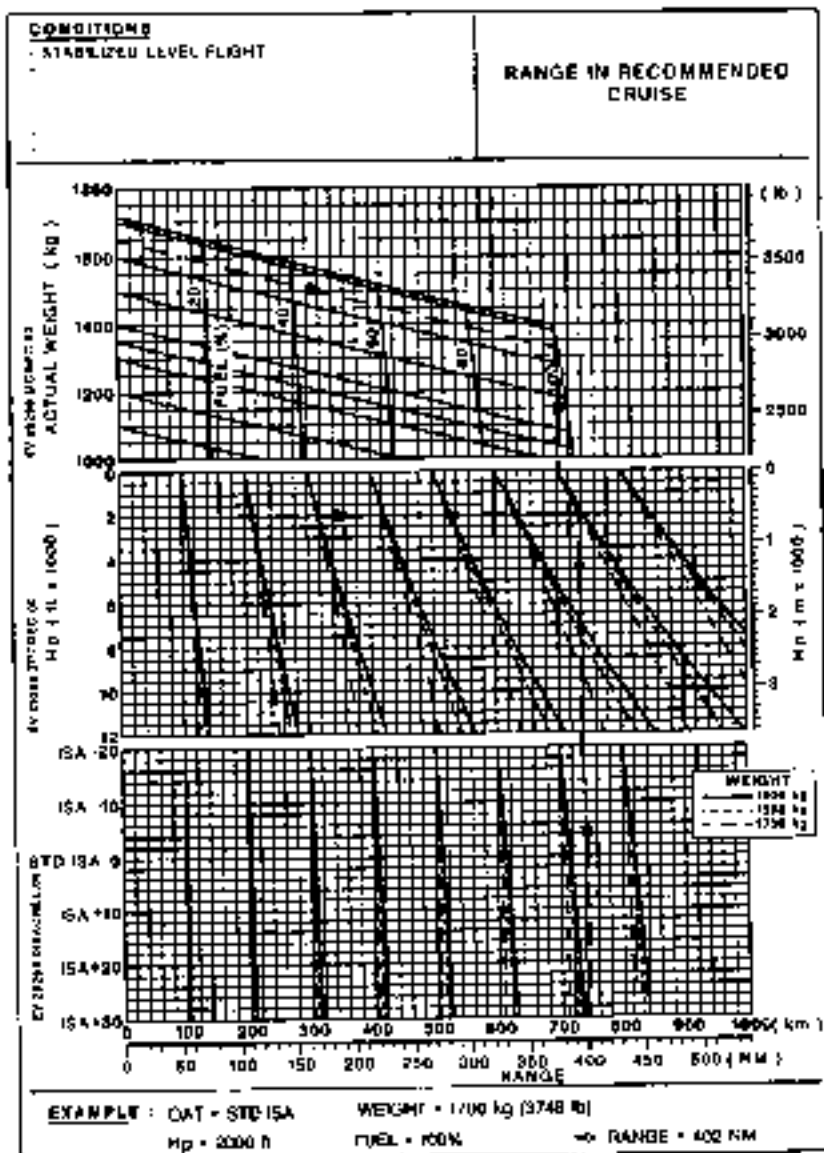


Figure 5 - 10


Figure 5-11

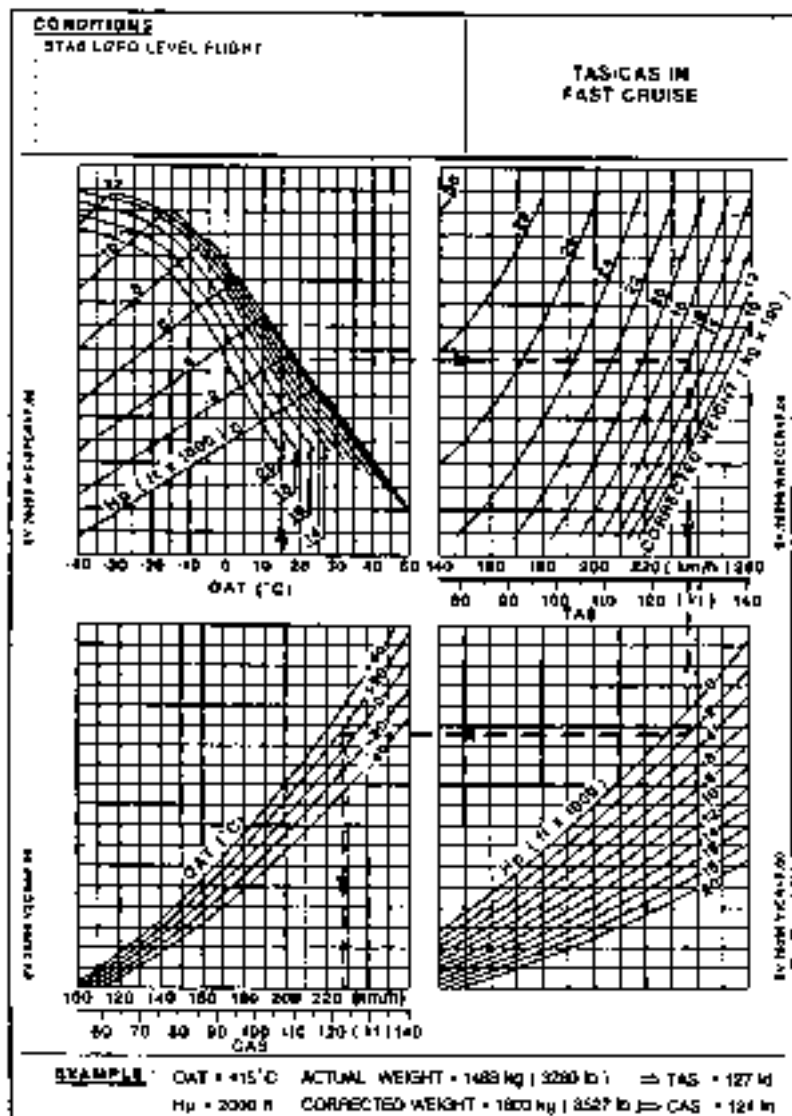
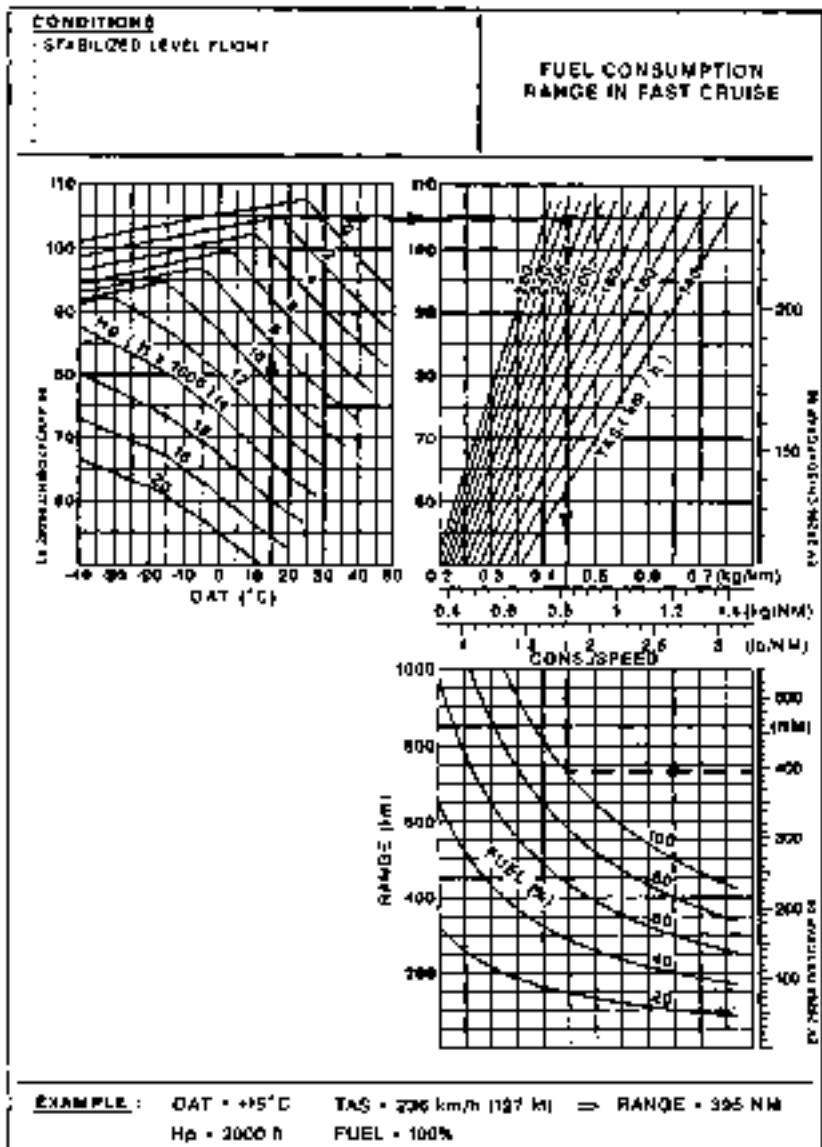


Figure S - 12


Figure 5 - 13

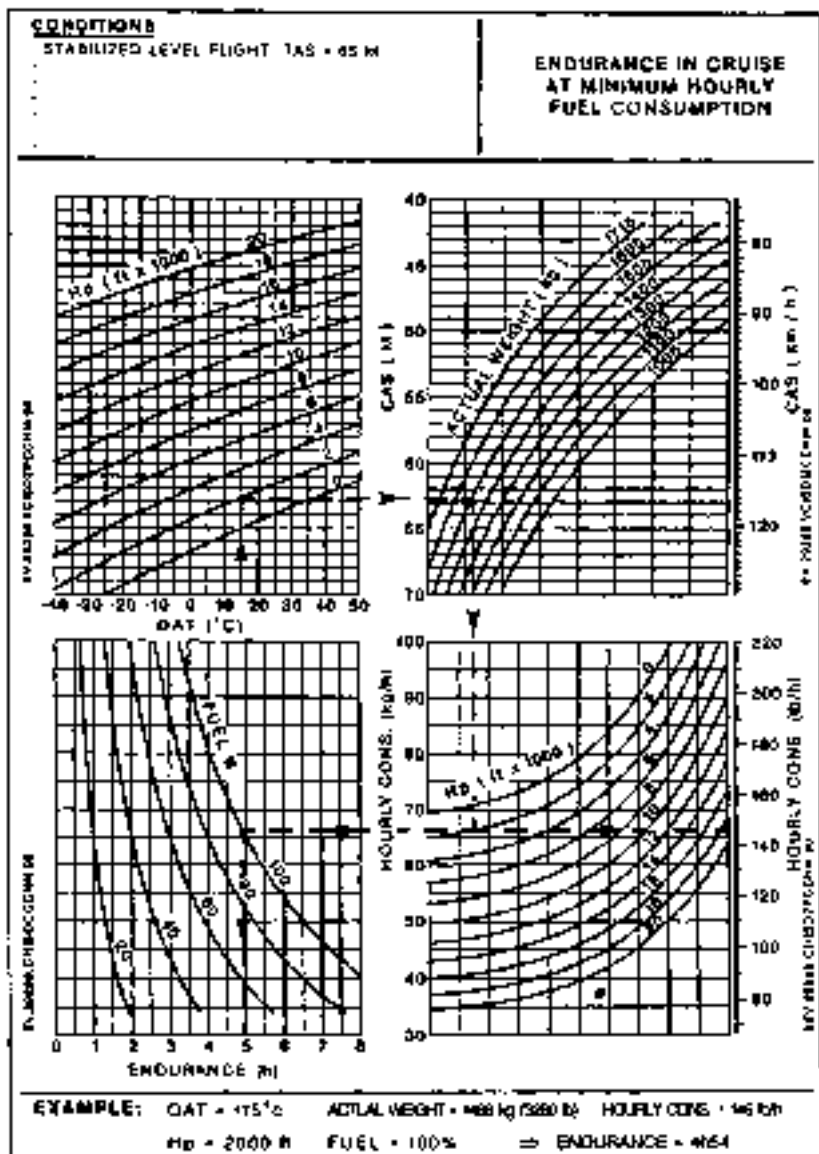


Figure 5-14

SECTION 6

WEIGHT AND BALANCE

	Page
6.1 GENERAL	6 - 1
6.2 WEIGHT AND BALANCE	6 - 1
6.2.1 WEIGHT - STANDARD DEFINITIONS	6 - 1
6.2.2 CENTER OF GRAVITY CONVENTIONAL TERMS	6 - 2
6.3 WEIGHING	6 - 3
6.4 LONGITUDINAL CG LOCATION	6 - 3
6.4.1 CALCULATING CG	6 - 3
6.4.2 LOADING DATA	6 - 5
6.4.3 CG CHARTS	6 - 9
6.5 LATERAL CG	6 - 12
6.5.1 CREW AND PASSENGERS	6 - 12
6.5.2 DETERMINATION OF LATERAL CG LOCATION	6 - 14
6.6 WEIGHT AND MOMENT OF EQUIPMENT ITEMS	6 - 15

LIST OF FIGURES

	Page
FIGURE 6 - 1 : BASIC DATUM PLANES	6 - 2
FIGURE 6 - 2 : LONGITUDINAL LOCATION OF SEATS	6 - 5
FIGURE 6 - 3 : LONGITUDINAL LOCATION OF LOADS	6 - 6
FIGURE 6 - 4 : LONGITUDINAL LOCATION OF FUEL	6 - 8
FIGURE 6 - 5 : CENTER OF GRAVITY	6 - 10 / 6 - 11
FIGURE 6 - 6 : LATERAL LOCATION OF SEATS AND LOADS	6 - 12

6.1 GENERAL

The purpose of this section is to provide data for use when evaluating a proposed loading configuration or calculating the weight and center of gravity of an aircraft in service.

6.2 WEIGHT AND BALANCE

6.2.1 Weight - Standard Definitions

- Empty Weight (EW)

This corresponds to the sum of the permanent assemblies and equipment:

- The vehicle and its power plant.
- Equipment common to all missions.
- Lubricants and hydraulic fluids.
- Unusable fuel

EW then, is constant for a given aircraft.

- Equipped Empty Weight (EEW)

This is the sum of :

- Empty weight (EW)
- Specific operational or mission equipment.

EEW varies according to the proposed mission.

- All-up Weight (AUW)

This is the sum of :

- Equipped empty weight (EEW)
- Crew
- Payload
- Usable fuel

- Maximum Weight

Weight is limited on takeoff and landing. See limitations (SECTION 2).

6.2.2 Center of Gravity Conventional Terms

- The center of gravity is defined by dimensions measured perpendicular to the three basic datum planes. These planes are as follows :
 - A horizontal plane parallel to the cabin floor datum, the Z datum plane, located 3.47 m (1136.6 in) above this datum.
 - A vertical plane perpendicular to the cabin floor datum. This Y datum plane is the aircraft plane of symmetry. Dimensions to the left (port) are negative, dimensions to the right (starboard) are positive.
 - A vertical plane perpendicular to the two mentioned above, situated 4.00 m (1312.5 in) forward of the center of the main rotor. This is the X datum plane, from which the longitudinal reference stations and CG positions are measured.

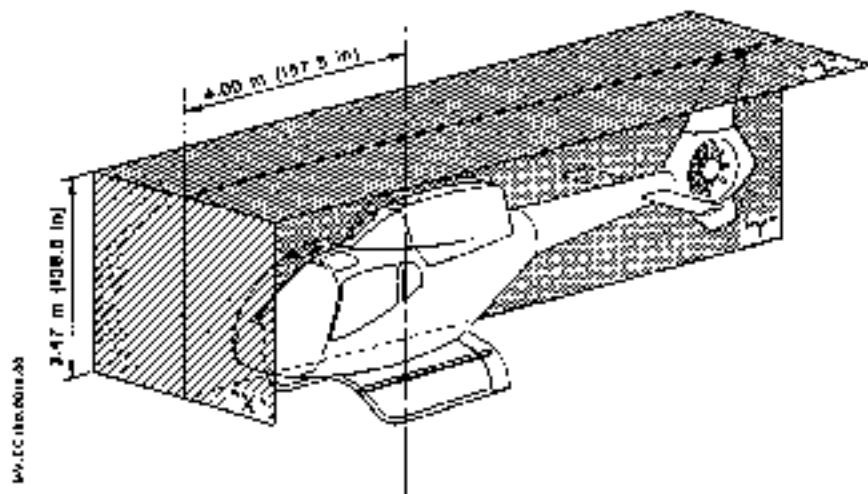


Figure 6 - 1 : Basic datum planes

- CG location limits are never to be exceeded. See Limitations (SECTION 2).

CAUTION

A CG location which is correct on takeoff may vary during the mission, due to the reduction in load and therefore exceed acceptable limits.

- Longitudinal CG must be monitored more closely.
- Lateral CG need be considered only in very asymmetrical loading configurations.

6.3 WEIGHING

Weighing is the only reliable way of obtaining :

- Equipped empty weight (EEW).
- Aircraft center of gravity (CG) location.

The aircraft must be weighed :

- On leaving the works.
- Following any major modification.

6.4 LONGITUDINAL CG LOCATION

6.4.1 Calculating CG

- Procedure

The distance from the aircraft center of gravity to the datum plane is obtained using the formula :

$$\frac{\text{Sum of moments}}{\text{Sum of weights}} = \text{CG in flight order.}$$

- Example : Analysis for a passenger transport mission
 - Before takeoff
 - 1) Determine the maximum permissible takeoff weight.
 - 2) Note the equipped empty weight and the moment
 - 3) Refer to the tables given below to determine loading conditions , totalize weights and moments.
 - 4) Calculate the CG location.
 - 5) Check that CG falls within permissible limits.

Example :

	Kg	m.Kg
EEW	970	4103.1
Crew	160	376.0
Passengers	-	-
Cargo	40	164
Fuel	300	1227.0
TOTAL	1470	5870.1

$$CG = \frac{5870.1}{1470} = 3.993 \text{ m}$$


Longitudinal CG is within the permissible limits.

In flight or on landing

The aircraft will normally keep within its weight and balance diagram regardless of fuel consumption.

6.4.2 Loading data

- Crew and passengers

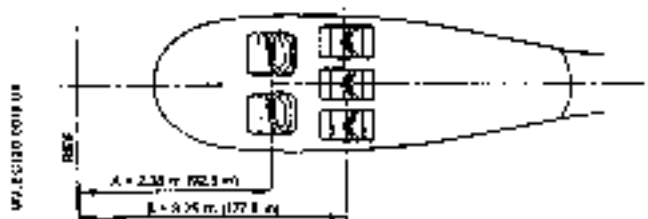
Figure 6 - 2 : Longitudinal location of seats

WEIGHT kg	METRIC UNITS	
	MOMENT : m.kg	
	(A)	(B)
60	141.00	195.00
80	188.00	260.00
100	235.00	325.00
120	282.00	390.00
140	329.00	455.00
160	376.00	520.00
180	423.00	585.00
200	470.00	650.00
220	517.00	715.00
240		780.00
260		845.00
280		910.00
300		975.00
320		1 040.00
330		1 072.50

WEIGHT	ANGLO-SAXON UNITS	
	MOMENT - in.lb	
	(A)	(B)
100	9 250	12 790
150	13 875	19 185
200	18 500	25 580
250	23 125	31 975
300	27 750	38 370
350	32 375	44 765
400	37 000	51 160
450	41 625	57 555
485	44 863	62 092
500		63 950
550		70 345
600		76 740
650		83 135
700		89 530
750		95 925

- Freight and baggage transport

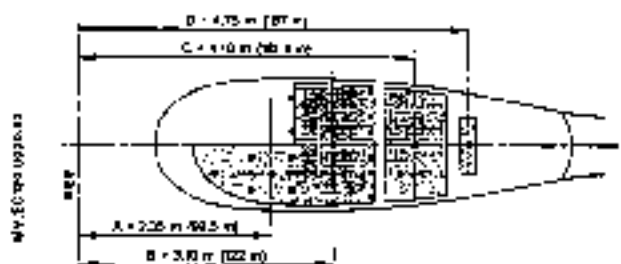


Figure 6 - 3 : Longitudinal location of loads

WEIGHT	METRIC UNITS			
	MOMENT : m.kg			
	(A)	(B)	(C)	(D)
kg				
10	23,50	31,00	41,00	47,50
20	47,00	62,00	82,00	95,00
50	117,50	155,00	205,00	237,50
70	164,50	217,00	287,00	
80	188,00	248,00	328,00	
100	235,00	310,00	410,00	
120	282,00	372,00	492,00	
150	352,50	465,00	615,00	
200		620,00	820,00	
250		775,00	1 025,00	
300		930,00	1 230,00	
320		992,00	1 312,00	

WEIGHT	ANGLO-SAXON UNITS			
	MOMENT : in.lb			
	(A)	(B)	(C)	(D)
lb				
50	4 625	6 100	8 070	9 350
100	9 250	12 200	16 140	18 700
110	10 175	13 420	17 754	20 570
150	13 875	18 300	24 210	
200	18 500	24 400	32 280	
250	23 125	30 500	40 350	
300	27 750	36 600	48 420	
330	30 525	40 260	53 262	
350		42 700	56 490	
400		48 800	64 560	
450		54 900	72 630	
500		61 000	80 700	
550		67 100	88 770	
600		73 200	96 840	
650		79 300	104 910	
700		85 400	112 980	

• Fuel

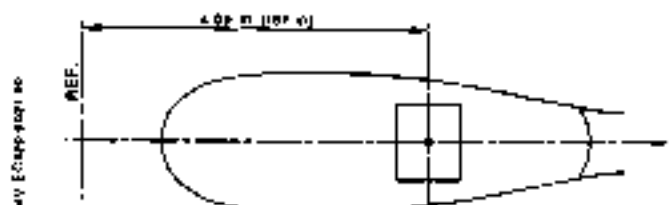


Figure 6 - 4 : Longitudinal location of fuel

NOTE

Fuel specific gravity : 0.795

METRIC UNITS					
Liter	kg	m.kg	Liter	kg	m.kg
25.16	20	81.60	226.42	180	736.20
50.31	40	163.60	251.57	200	818.00
75.47	60	245.40	276.71	220	899.00
100.63	80	327.20	301.89	240	981.60
125.79	100	409.00	327.04	260	1063.40
150.94	120	490.80	352.20	280	1145.20
176.10	140	572.60	377.36	300	1227.00
201.26	160	654.40	406.00	323	1321.07

ANGLO-SAXON UNITS							
US gal	UK gal	lb	in.lb	US gal	UK gal	lb	in.lb
7.54	6.23	50	8050	67.84	56.54	450	72450
15.08	12.56	100	16100	75.38	62.82	500	80500
22.61	18.85	150	24150	82.92	69.10	550	88550
30.15	25.13	200	32200	90.45	75.39	600	96600
37.69	31.41	250	40250	97.99	81.67	650	104650
45.23	37.69	300	48300	105.53	87.95	700	112700
52.76	44.98	350	56350	107.30	89.40	711.5	114551
60.30	50.26	400	64400				

6.4.1 CG Charts

The following charts (metric and anglo-saxon units) are used to easily determine the aircraft center-of-gravity. When the point obtained is close to the limits, it should be confirmed by calculations.

Example (SEE chart 6.5) :

Item on
chart

- The weighing operation locates the CG
at 4.23 m (166.5 in) for an EEW of : 970 kg (2138 lb) : ①
- 2 front seats used : 160 kg (353 lb) : ②
- 1 rear seat used : 80 kg (176 lb) : ③
- Freight in the rear seat : 100 kg (220 lb) : ④
- Freight in the hold with a rear CG : 90 kg (198 lb) : ⑤
- Fuel : 300 kg (661 lb) : ⑥

The longitudinal CG is within the permissible limits.

These charts are designed so that the variations in fuel weight and freight in the hold (SEE figure 6.3 ; item C at 4.10 m (161.4 in)) make the CG move along a vertical line :

- The total weight is 1700 kg (3748 lb) with a center of gravity at 3.925 m (154.5 in). During the flight, after consuming 200 kg (441 lb) of fuel (SEE item ②), the center of gravity will be 3.903 m (153.6 in).

The weight and CG limits are given in **LIMITATIONS** (SEE SECTION 2) and may be modified by the Supplements corresponding to the optional items fitted.

ABAQUE DE CENTRAGE LOADING CHART

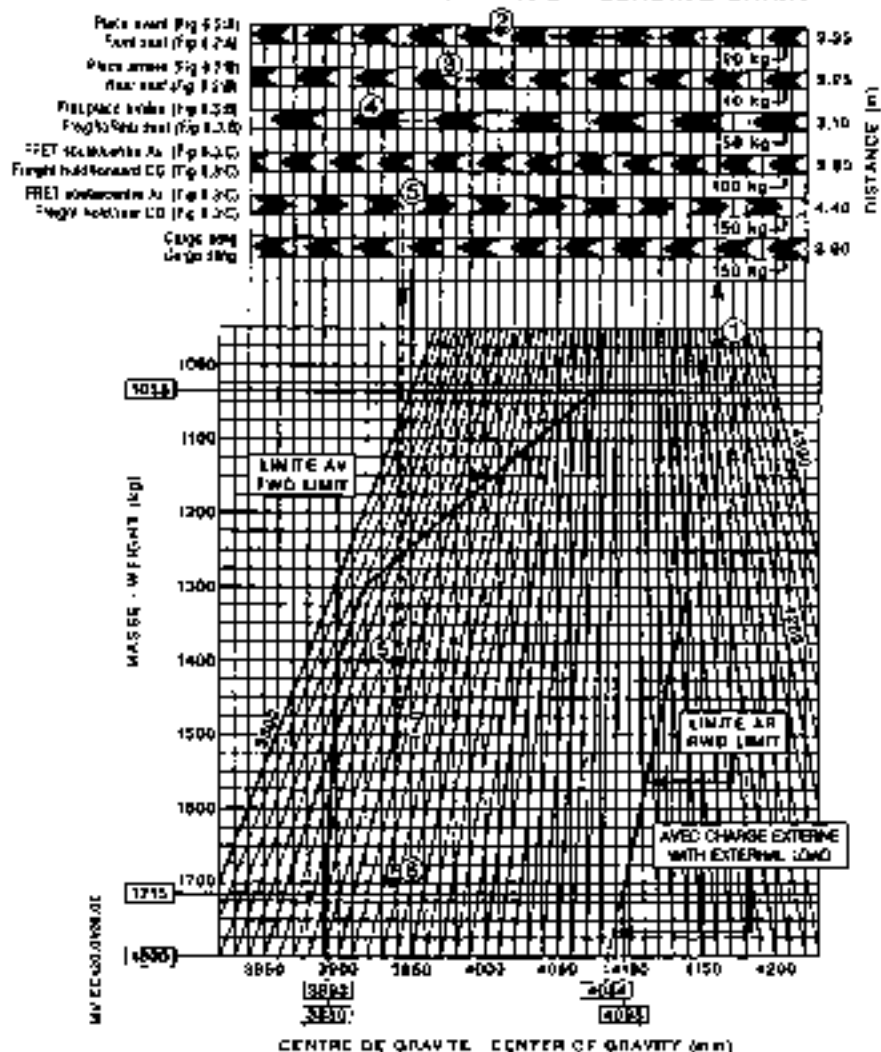
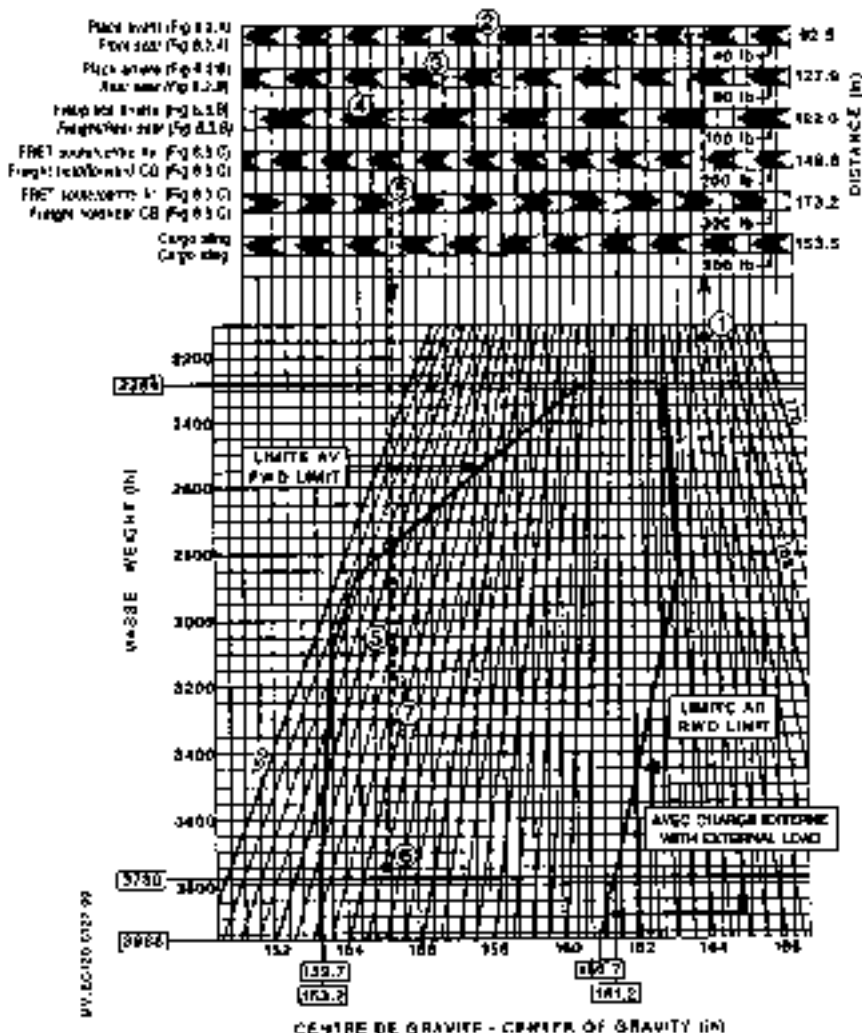


Figure 6-5 : Center of gravity

ABACUS DE CENTRAGE LOADING CHART

Figure 6 - 5 : Center of gravity (cont'd)

6.5 LATERAL CG

The tables below give the lateral CG positions for different weights and their moments with respect to the Y plane (positive dimensions on the right, negative dimensions on the left).

6.5.1 Crew and passengers

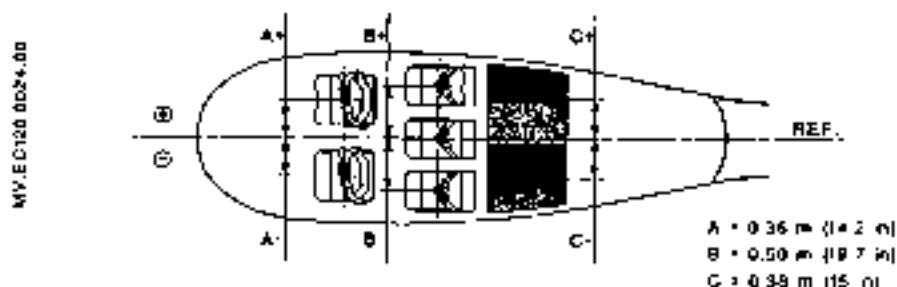


Figure 6 - 6 : Lateral location of seats and loads

METRIC UNITS						
WEIGHT kg	MOMENT : m.kg					
	A +	A -	B +	B -	C +	C -
50	18.00	- 18.00	25.00	- 25.00	19.00	- 19.00
60	21.60	- 21.60	30.00	- 30.00	22.80	- 22.80
70	25.20	- 25.20	35.00	- 35.00	26.60	- 26.60
80	28.80	- 28.80	40.00	- 40.00	30.40	- 30.40
90	32.40	- 32.40	45.00	- 45.00	34.20	- 34.20
100	36.00	- 36.00	50.00	- 50.00	38.00	- 38.00
110	39.60	- 39.60	55.00	- 55.00	41.80	- 41.80
120	43.20	- 43.20	60.00	- 60.00	45.60	- 45.60
130	46.80	- 46.80	65.00	- 65.00	49.40	- 49.40
140	50.40	- 50.40	70.00	- 70.00	53.20	- 53.20
150	54.00	- 54.00	75.00	- 75.00	57.00	- 57.00

ANGLO-SAXON UNITS						
WEIGHT lb	MOMENT in lb					
	A +	A -	B +	B -	C +	C -
50	71	- 71	99	- 99	75	- 75
100	142	- 142	197	- 197	150	- 150
150	213	- 213	296	- 296	225	- 225
200	284	- 284	394	- 394	300	- 300
250	355	- 355	493	- 493	375	- 375
300	426	- 426	591	- 591	450	- 450
330	469	- 469	650	- 650	495	- 495

6.5.2 Determination of lateral CG location

The computation method is the same as that used for determining the longitudinal CG location (§ CALCULATING CG - SECTION 6)

Add weights and moments to the aircraft empty weight and moment referring to preceding pages.

Lateral CG location values during the mission shall fall within the permissible limits.

Example during hoisting operation

	Kg	m.Kg
EEW	970	9.70
Pilot	80	28.80
Copilot	80	-28.80
Right passenger	80	40.00
Right cargo	150	57.00
Fuel	250	0.00
TOTAL	1610	106.7
Lateral C.G. location		

$$\text{Lateral CG} = \frac{106.7}{1610} = 0.0662 \text{ m}$$

This value falls within the permissible limits.

(Longitudinal CG = 3.993 m)

6.6 WEIGHT AND MOMENT OF EQUIPMENT ITEMS

The following list covers the equipment items. It gives the approximate weight and moment of the removable components.

DESCRIPTION	WEIGHT		MOMENT	
	kg	lb	m.kg	in.lb
Aircraft tool kit	TBD	TBD	TBD	TBD
Cabin fire extinguisher	2.01	4.43	4.82	418.59
RH front large door	11.10	24.47	27.75	2407.95
LH front door	8.90	19.62	20.47	1776.24
RH rear fixed panel	3.50	7.72	11.55	1002.23
LH rear sliding door	10.40	22.93	33.28	2887.81
Dual control	5.34	11.77	10.63	922.10
Front seat	12.10	26.68	30.25	2624.88
Three place seat rear (complete with armrests)	30.80	67.90	104.72	9086.87
First aid kit	TBD	TBD	TBD	TBD
LH side main flight controls	TBD	TBD	TBD	TBD

SECTION 7

SYSTEM DESCRIPTION

	Page
7.1 INSTRUMENT PANEL AND CONSOLE	7-1
7.2 FLIGHT INSTRUMENTS AND COMPUTERS	7-2
7.2.1 CENTRAL COMPUTERS.....	7-2
7.2.2 CENTRAL WARNING SYSTEM.....	7-4
7.2.3 VEHICLE AND ENGINE MANAGEMENT DISPLAY.....	7-5
7.3 ENGINE SYSTEM	7-15
7.3.1 GENERAL.....	7-15
7.3.2 ENGINE OIL SYSTEM.....	7-15
7.4 FUEL SYSTEM	7-16
7.4.1 GENERAL.....	7-16
7.4.2 FUEL TANKS.....	7-16
7.4.3 FUEL SUPPLY SYSTEM AND REGULATION.....	7-16
7.4.4 CONTROLS AND MONITORING.....	7-17
7.5 TRANSMISSION SYSTEM	7-18
7.5.1 ROTORS.....	7-18
7.5.2 TRANSMISSION.....	7-18
7.6 FLIGHT CONTROL GRIPS	7-21
7.6.1 COLLECTIVE LEVER GRIP.....	7-21
7.6.2 CYCLIC STICK GRIP.....	7-22
7.7 HYDRAULIC SYSTEM	7-24
7.7.1 GENERAL.....	7-24
7.7.2 HYDRAULIC COMPACT UNIT.....	7-26
7.8 ELECTRICAL SYSTEM	7-27
7.8.1 GENERAL.....	7-27
7.8.2 DESCRIPTION OF ELECTRICAL SYSTEM.....	7-28
7.8.3 ELECTRICAL DISTRIBUTION.....	7-28

7.9 LIGHTING SYSTEM.....	7-30
7.9.1 INTERIOR LIGHTING	7-30
7.9.2 EXTERIOR LIGHTING	7-31
7.10 CABIN VENTILATION / HEATING AND DEMISTING.....	7-32
7.10.1 AIR GENERATION	7-32
7.10.2 CONTROLS AND MONITORING	7-33
7.11 PITOT-STATIC SYSTEM	7-34

LIST OF FIGURES

FIGURE 7 - 1 : INSTRUMENT PANEL AND CONSOLE	7-1
FIGURE 7 - 2 : CENTRAL COMPUTERS	7-3
FIGURE 7 - 3 : CENTRAL WARNING SYSTEM.....	7-4
FIGURE 7 - 4 : VEMP CONTROL.....	7-4
FIGURE 7 - 5 : MANAGEMENT OF PAGES IN NORMAL DISPLAY MODE.....	7-5
FIGURE 7 - 6 : MANAGEMENT OF PAGES IN DEGRADED DISPLAY MODE.....	7-9
FIGURE 7 - 7 : FLI PAGE	7-10
FIGURE 7 - 8 : ENGINE PAGE	7-10
FIGURE 7 - 9 : VEHICLE PAGE	7-11
FIGURE 7 - 10 : FIRST PAGE OF THE EPC	7-11
FIGURE 7 - 11 : SECOND PAGE OF THE EPC.....	7-12
FIGURE 7 - 12 : PERFORMANCE PAGE.....	7-13
FIGURE 7 - 13 : FLIGHT REPORT PAGE	7-14
FIGURE 7 - 14 : ENGINE VIEW.....	7-15
FIGURE 7 - 15 : FUEL SYSTEM	7-17
FIGURE 7 - 16 : MAIN GEAR BOX	7-19
FIGURE 7 - 17 : TAIL GEAR BOX	7-20
FIGURE 7 - 18 : COLLECTIVE LEVER GRIP.....	7-21
FIGURE 7 - 19 : CYCLIC STICK GRIP.....	7-22

	Page
FIGURE 7 - 20 : HYDRAULIC SYSTEM	7-25
FIGURE 7 - 21 : HYDRAULIC COMPACT UNIT	7-26
FIGURE 7 - 22 : ELECTRICAL SYSTEM	7-27
FIGURE 7 - 23 : DC DISTRIBUTION	
GENERAL DESCRIPTION	7-28
FIGURE 7 - 24 : CARGO COMPARTMENT CIRCUIT	
BREAKER PANEL	7-29
FIGURE 7 - 25 : CCBP	7-29
FIGURE 7 - 26 : NR/NF INDICATOR AND LIGHTING	
POTENTIOMETER	7-31
FIGURE 7 - 27 : AIR GENERATION	7-32
FIGURE 7 - 28 : PITOT-STATIC SYSTEM	7-34

7.1 INSTRUMENT PANEL AND CONSOLE

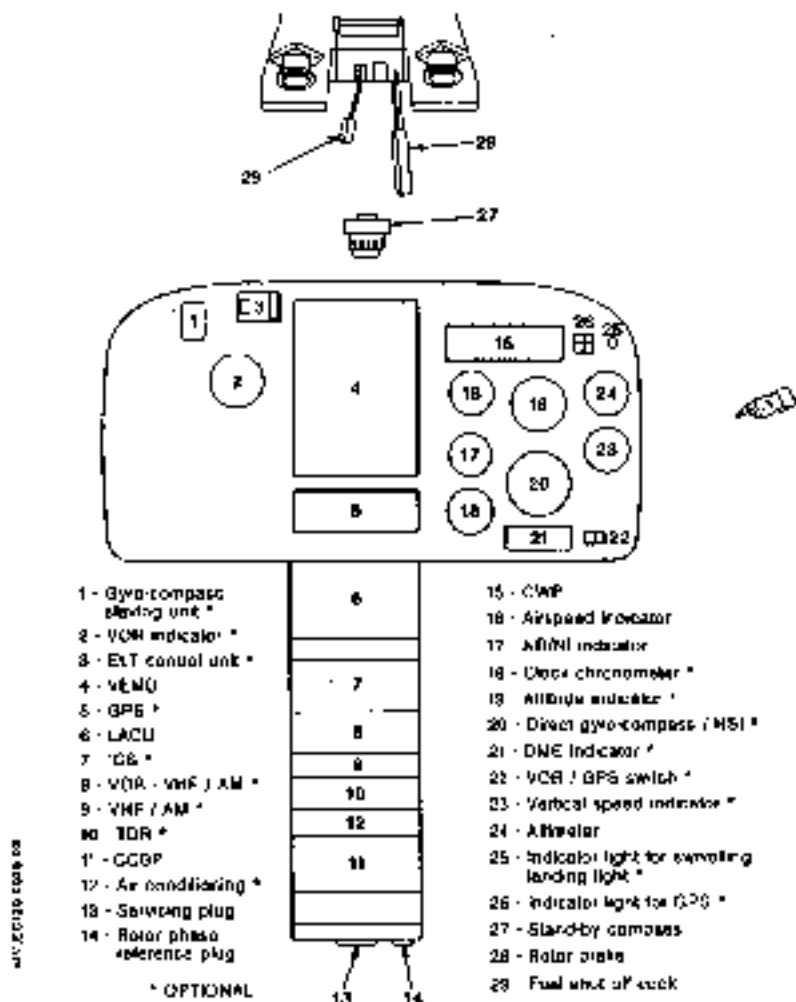


Figure 7 - 1 : Instrument panel and console

7.2 FLIGHT INSTRUMENTS AND COMPUTERS

7.2.1 CENTRAL COMPUTERS

• General

The central computers perform the ancillary service functions of the helicopter. They include two subassemblies -

- the ancillary systems unit (ASU) (1),
- the lighting and ancillary control unit (LACU) (2).

The ASU manages all the aural alarms, some visual warnings, and the processing of specific electrical signals.

The LACU includes all the electrical indicating and control components of the main systems and lighting systems.

• Characteristics

The ASU and the LACU are both supplied with a dual 28 V DC power supply, and are protected by circuit breakers.


• Description

The ASU (1) performs the following functions :

- management of the **ENG FIRE** warning light,
- generation of the aural max. and min. NR alarms,
- management of aural "gong" alarms, due to red alarms and maximum takeoff rating,
- generation of the FLIGHT/GROUND signal for the VEMD,
- time delay for maintaining the electro-magnetic pointer of the twist grip after releasing the starter button,
- management of the **ENG CRIP** caution light,

The front panel of the LACU (2) includes :

- A lighting selector : OFF/DAY/NIGHT. In the DAY position, lighting is at nominal brightness. In the NIGHT position, the VEMD lighting, NR/NP indicator lighting and warning lights are dimmed.
- Two potentiometers for adjusting the brightness of the instrument panel, console and standby compass lighting, which are active when the selector is in the DAY or NIGHT position.
- Control and monitoring pushbuttons.

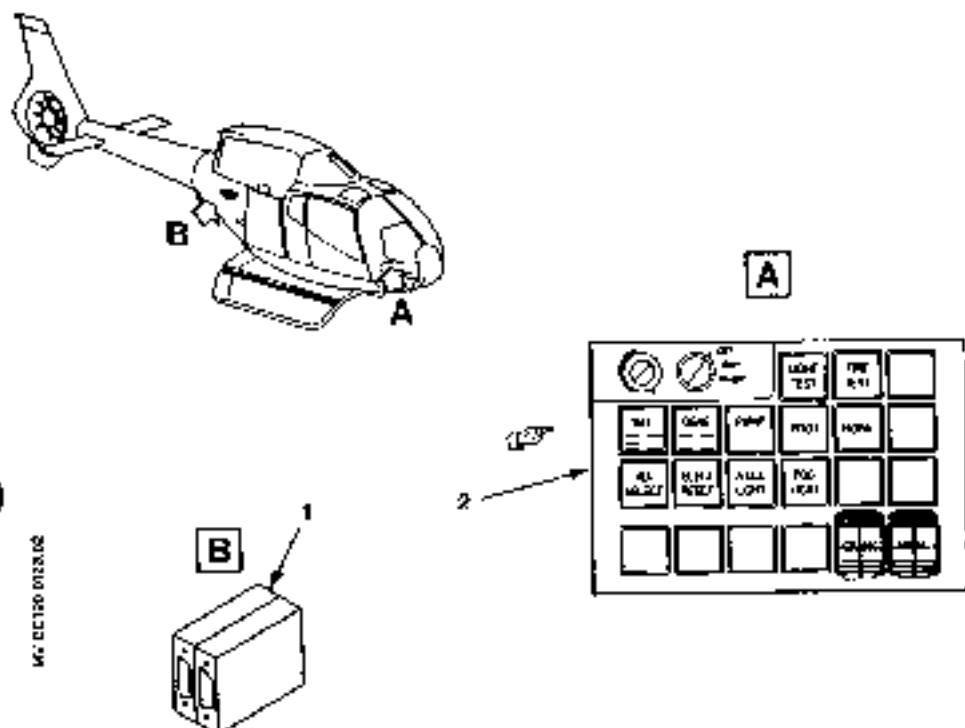

MP 01230 01230 02

Figure 7 - 2 : Central computers

7.2.2 CENTRAL WARNING SYSTEM

- Description

Visual indicators are provided by a caution and warning panel which comprises the following components :

- 6 red warning lights for alarms which require immediate action,
- 18 amber caution lights for alarms requiring action which can be deferred.

Aural alarms are generated via the intercommunications system. The aural warning is activated by pushing in the HORN pushbutton on the Lighting and Ancillary Control Unit (LACU). In this case, the HORN light extinguishes on the caution and warning panel.

44-10000-202-02

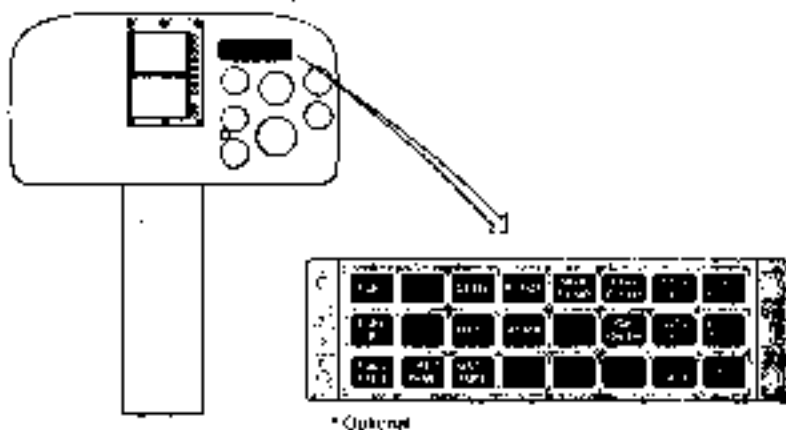


Figure 7 - 3 : Central warning system

- Characteristics

The central warning system is supplied by a dual 28 V DC power supply and is protected by circuit breakers.

7.2.3 VEHICLE AND ENGINE MANAGEMENT DISPLAY

- General

The system, which comprises the VEMD multi-function screen, provides a display of engine and vehicle parameters. The VEMD is located in the center of the instrument panel and comprises :

- two calculating modules : LINE 1 and LINE 2,
- one "screen" module which comprises two screens and control pushbuttons.

- Characteristics


The VEMD is supplied with a dual 28 V DC power supply and is protected by circuit breakers.

- Operating modes

Three operating modes are accessible :

- "FLIGHT" mode : by default, this constitutes the main operating mode of the equipment. It contains the ENGINE, VEHICLE, FLI, FLIGHT REPORT, ENGINE POWER CHECK and PERFORMANCE pages.
- Access to "CONFIG" mode :
 1. Switch Battery OFF.
 2. Maintain [SELECT] and [ENTER] depressed, while switching battery ON.
 3. Maintain until message "RELEASE KEY" appears on two screens.
- Access to "MAINT" mode : same procedure as "CONFIG" mode except item 2, replace by following :
 - . maintain [SCROLL] and [RESET] depressed, while switching battery ON.

• VEMD controls

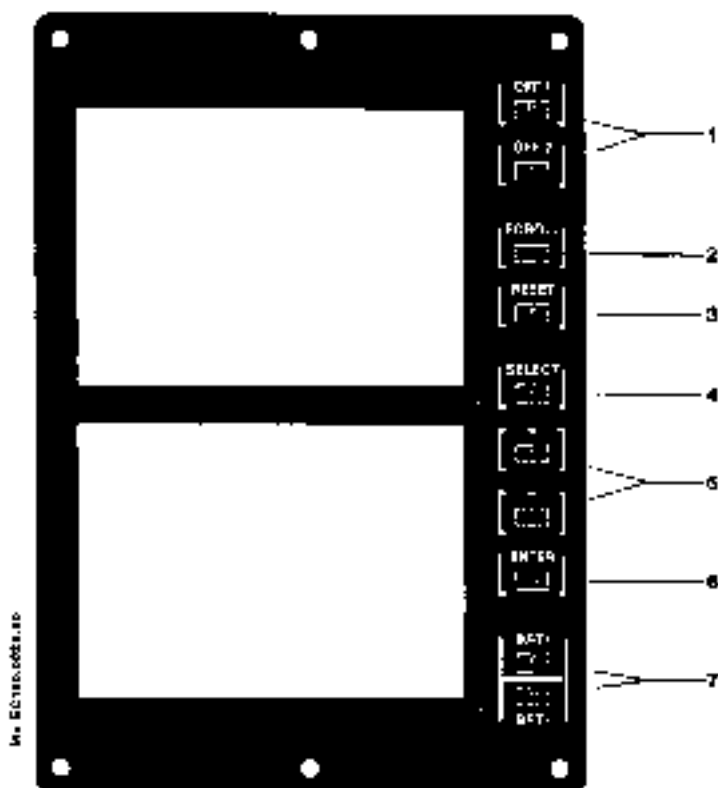

- | | |
|---|---|
| <p>1 - OFF1 (2) pushbuttons:
 . Energize or cut the processing module 1 (2) and the upper (lower) screen.</p> <p>2 - SCROLL pushbutton:
 . Commute the page</p> <p>3 - RESET pushbutton:
 . Return to nominal display configuration.</p> <p>4 - SELECT pushbutton:
 . Select the data field</p> | <p>5 - +/- pushbuttons:
 . Increase/decrease the numerical value of the selected data.</p> <p>6 - ENTER pushbutton:
 . Validate the selected data.</p> <p>7 - BRT +/- pushbuttons:
 . Screen brightness control</p> |
|---|---|

Figure 7 - 4 : VEMD control

- Operation

The VEMD is switched on when the "BAT" switch is set to "ON".

The equipment performs an initialization test which checks correct operation of each of the two lanes. During the test, the following message is displayed :

"TEST IN PROGRESS"

If the test is faulty, the following is displayed .

"LANE 1 FAILED" or "LANE 2 FAILED"
"PRESS OFF1" "PRESS OFF2"

The line concerned can be cut by pressing the associated pushbutton (OFF1 or OFF2). This validates the initialization tests and switches the remaining line to operating mode.

If the test is correct, the VEMD automatically goes to operating mode.

- FLIGHT mode

The flight mode is displayed by default, when no other mode is selected. The "SCROLL" pushbutton is used to scroll the pages as shown on the following diagrams (Fig. 7.5 and Fig. 7.6).

- Management of pages in normal mode

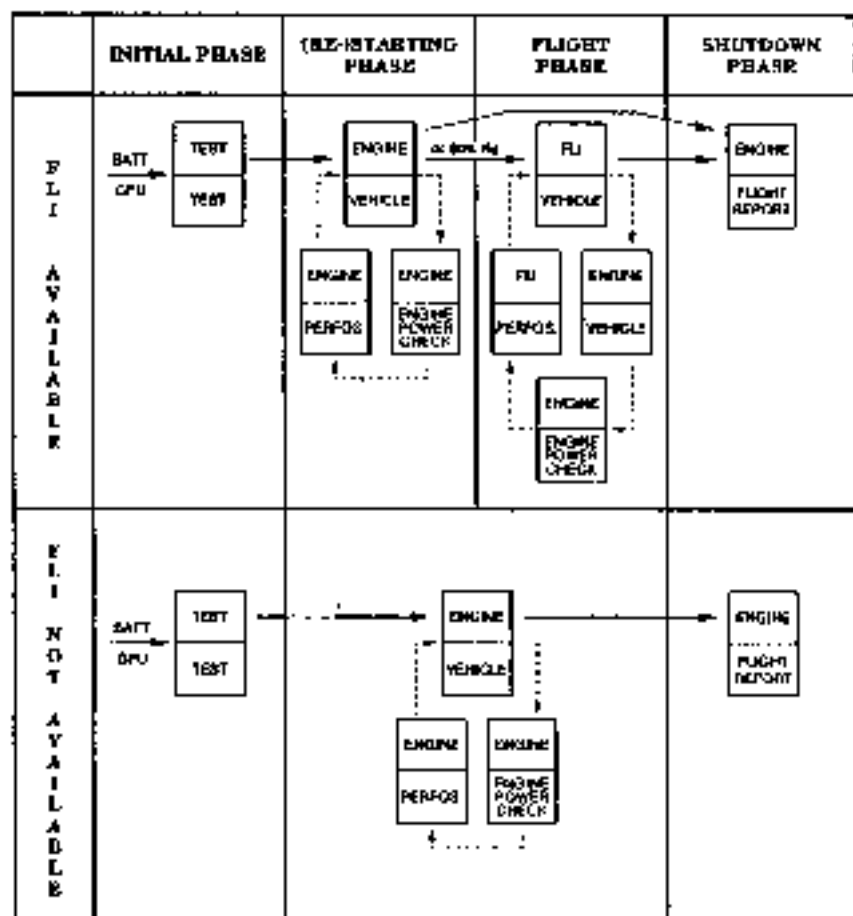
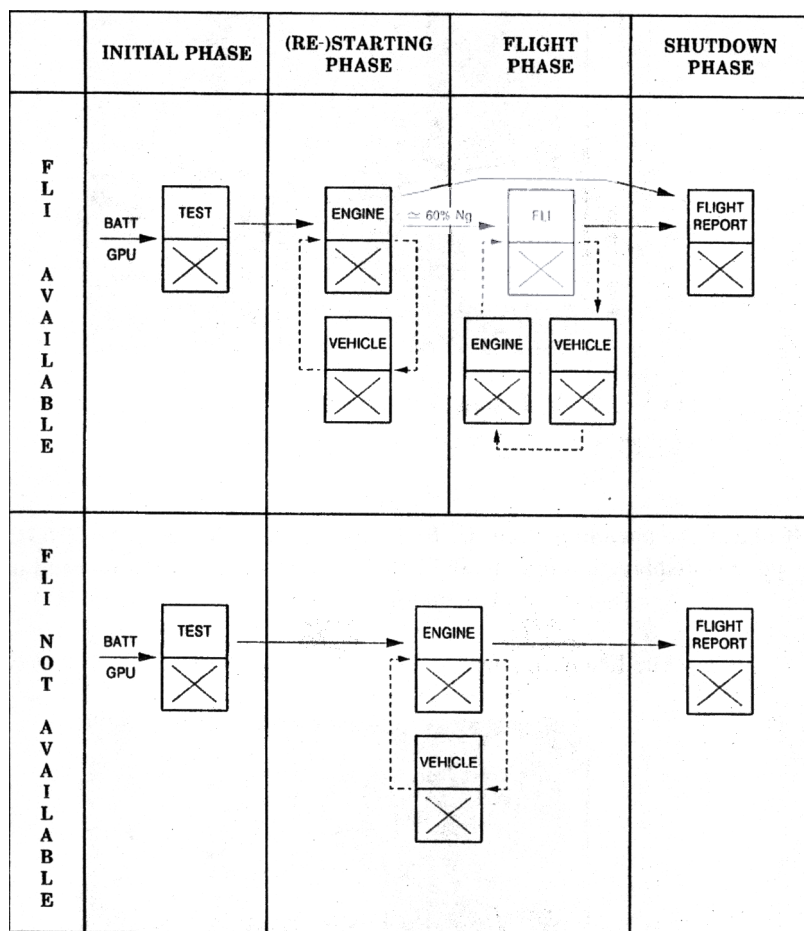


Figure 7 - 5 : Management of pages in normal display mode

- Automatic change-over at end of phase.
- > Page selected manually by pressing "SCROLL".

Management of pages in degraded mode.


INT 4C 150 0031 00

Figure 7 - 6 : Management of pages in degraded display mode

- > Automatic change over at end of phase
- > Page selected manually by pressing "SCROLL".

- The **FIRST LIMITATION INDICATOR (FLI)** page



Figure 7 - 7 : **FLI** page (Values given as an example)
fuel gauge with auxiliary tank installed (optional)

NOTE

If one of the parameters on the **FLI** page becomes invalid, the **ENGINE** page is displayed automatically ; the parameters can then be read on independent indicators.

The **ENGINE** page



Figure 7 - 8 : **ENGINE** page

- The **VEHICLE** page



Figure 7 - 9 : VEHICLE page

The fuel flowmeter (Optional) delivers an instantaneous fuel consumption and the VEMD computes the remaining endurance as a function of the remaining fuel quantity

- The **ENGINE POWER CHECK (EPC)** page

The first page displays the conditions of compliance, where applicable, when the EPC is requested, in order to obtain a correct engine power check. The check is broken down into three phases :

- ✦ a value stabilization phase,
- ✦ a more restrictive stabilization phase,
- ✦ a margin stabilization phase.

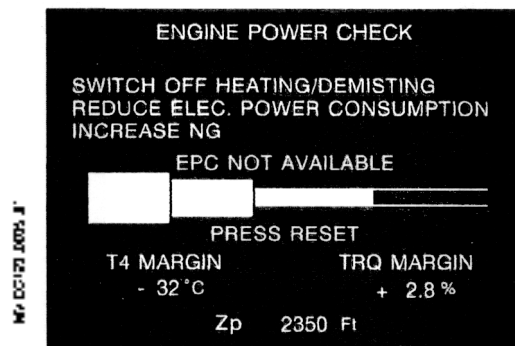



Figure 7 - 10 : First page of the EPC

The second page displays the result of the EPC according to 6 parameters (Ng, Nf, T4, Zp, OAT) and the positive or negative differences in T4 and torque.



ENGINE POWER CHECK RESULT			
NG	99,4 %	Nf	412 RPM
T4	795 °C	Zp	2300 Ft
TRQ	98,9 %	OAT	+ 25,1 °C
T4 MARGIN		TRQ MARGIN	
- 34 °C		+ 2,9 %	
GOOD		BAD	
EXIT → PRESS RESET			

M1 23171 008-31

Figure 7 - 11 : Second page of the EPC

- The **PERFORMANCE** page


This page is used to calculate aircraft weight and performance in the form of takeoff weights, in and out of ground effect.

The following parameters must be set :

- the equipped empty weight of the aircraft
- the weight of the crew
- the weight of the payload
- the sling load if installed (optional)


Fuel and external parameters Zp and OAT are taken into account automatically.

For mission planning purposes, Zp and OAT can be modified. When Zp is modified, the OAT decreases in accordance with the standard atmosphere law. When the page is changed or another parameter is selected, the VEMD takes into account the actual Zp and OAT values. To set or modify the parameters, apply the following procedure :

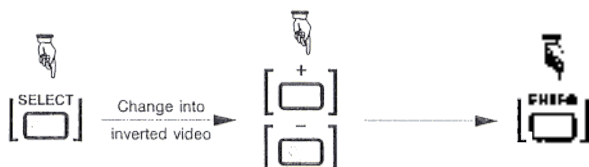

Use of +/- Keys

	Weight	Zp	OAT
Press > 5s	± 100 kg (200 lb)	± 500 ft (150 m)	± 5°C (10°F)
Press < 5s	± 2 kg (4 lb)	± 100 ft (30 m)	± 1°C (2°F)



PERFORMANCE			
E.E.W	970 Kg		
CREW	160 Kg		
PAY LOAD	130 Kg	Zp	8500 Ft
USABLE FUEL	300 Kg	OAT	+10 °C
		IGE	1610 Kg
A.U.W	1560 Kg	OGE	1540 Kg

Figure 7 - 12 : PERFORMANCE page

NOTE

When the IGE and OGE values are less than the aircraft all-up weight, they are displayed in yellow.

- The FLIGHT REPORT page

The purpose of this page is to provide the crew with a synthetic report of the last flight performed. The end of flight report automatically replaces the "VEHICLE" page when the VEMD detects the engine "shutdown" state.

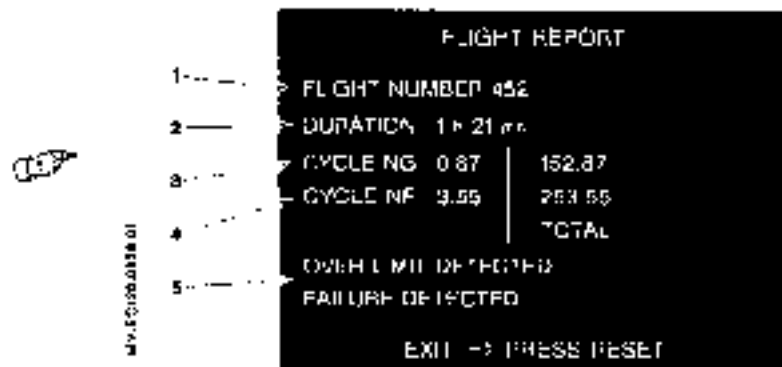


Figure 7 - 13 : FLIGHT REPORT page

- 1 - Flight number, which is incremented automatically.
- 2 - Flight time
- 3 - Compressor cycles / Total cycles
- 4 - Free turbine cycles / Total cycles
- 5 - Message area (in yellow) if a discrepancy is detected during the flight.

If a message appears, refer to the "MAINTENANCE" mode in the systems description manual.

To exit this page, press the "RESET" key.

7.3 ENGINE SYSTEM

7.3.1 GENERAL

The engine is located in a separate fireproof compartment after the MGB and above the LH rear cargo compartment. The TURBOMECA ARRIUS 2F engine is a free-wheel turbo shaft type engine with a single stage centrifugal compressor, an annular reverse flow combustion chamber and a single gas generator turbine.

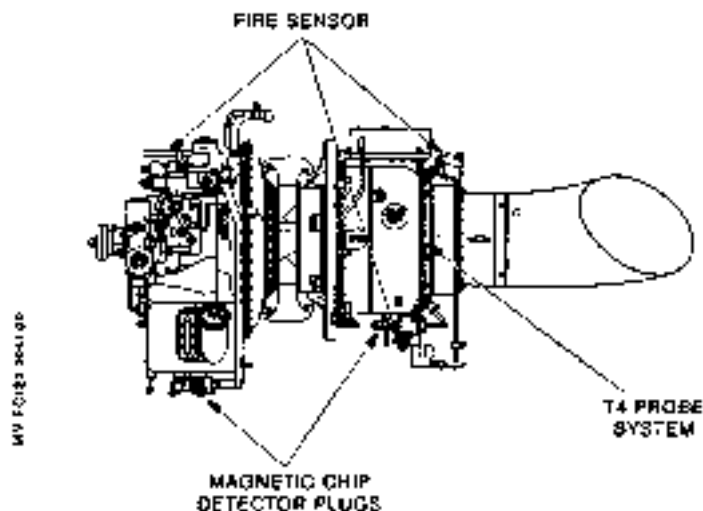


Figure 7 - 14 : Engine view

7.3.2 ENGINE OIL SYSTEM

The engine oil system is divided into two systems :

- an external system installed in both the MGB and engine compartments. It includes two coolers crossed in parallel by the oil and a thermostatic valve which bypasses the coolers for low temperature starting. The hoses installed in the engine compartment are fireproof.
- an internal system integrated into the engine. It includes a tank, pressure and scavenge pumps, a filter and electrical magnetic chip detector plugs.

7.4 FUEL SYSTEM

7.4.1 GENERAL

The fuel system comprises two tanks with crashworthy elastomer bladders, a supply system, refueling equipment and a monitoring system. The connections are anti-crash treated.

7.4.2 FUEL TANKS

The upper tank is located above the cargo compartment and feeds the lower tank by gravity. The lower tank is located below the cargo compartment floor. The engine is supplied from this tank.

Both tanks are equipped with a mounting plate and a fuel level transmitter.

As soon as the upper tank is dried, the indicated fuel quantity is approximately 145 kg (180 l - 48 US gal). According to the fuel flow, this value reaches 120 kg (150 l - 40 US gal) due to the fuel lines between the two tanks after about 15 minutes flight.

The lower tank also includes a starting pump, a quick fuel drain valve and a decanting sump with a sediment drain valve. A venting device on the RH side and a filler on the LH side are fitted to the upper tank.

7.4.3 FUEL SUPPLY SYSTEM AND REGULATION

The fuel is sucked up through the filter by the high pressure pump.

The fuel flow is regulated in the metering valve according to the power required in normal flight mode. The principle is to govern a constant N_f regardless of the power required from the engine, by controlling N_g . For starting, the twist grip opens the metering valve, regulators supply the fuel necessary for lighting up $N_g @ 15 \%$ under starter generator effect. The twist grip is then moved forward to its flight position.

The fuel is then distributed to the injectors.

7.5 TRANSMISSION SYSTEM

7.5.1 ROTORS

• MAIN ROTOR

The main rotor is fully articulated and includes three blades. It rotates clockwise when viewed from above at a nominal speed of 406 rpm. Flapping, lead-lag and pitch hinges are provided by a spherical elastomeric bearing. An elastomeric lead-lag damper links each blade to the hub.

• TAIL ROTOR

The tail rotor is shrouded (FENESTRON), and is housed in the vertical fin; it comprises eight blades.

The blades rotate clockwise when viewed from the LH side of the aircraft.

7.5.2 TRANSMISSION

The transmission system consists of:

- Engine / MGB coupling,
- Main gear box (MGB),
- Tail rotor drive shaft,
- Tail gear box (TGB).

• ENGINE / MGB COUPLING

The engine / MGB coupling transmits the engine power to the MGB.

It consists of:

- A coupling shaft with a triangular flange at each end.
- Two flexible couplings at each end of the shaft.
- An anti-tilt system in case of flexible couplings failure.
- A fixed housing bolted to the engine on one side and attached to the input casing on the other side.

• MGB

- It transmits the power from the engine to the main rotor with a speed reduction.
- It drives the tail rotor drive.
- It drives and supports the hydraulic compact unit, the MGB lubricating pump, the rotor brake and the oil cooler fan.
- It supports the servocontrols and suspension bar attachment fittings.

It includes its own lubricating system, monitoring systems and access for maintenance.

The lubricating pump sucks the oil up from the MGB sump through a strainer and delivers it through a filter. The oil returns to the sump by gravity.

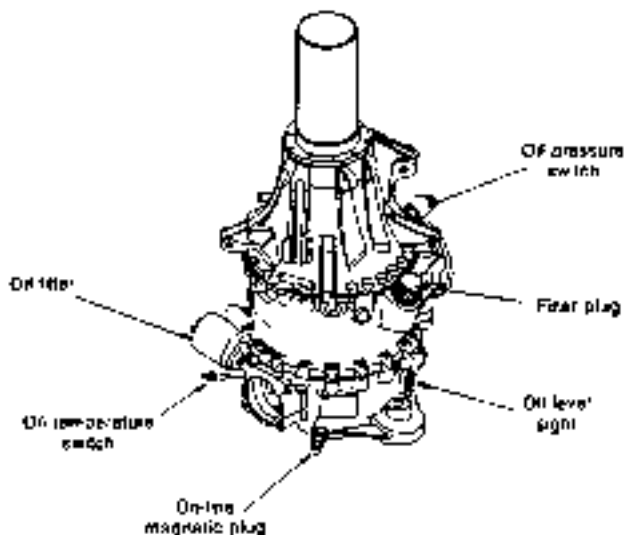



Figure 7 - 16 : Main gear box

• TAIL ROTOR DRIVE SHAFT AND TGB

The tail rotor drive shaft is composed of two shafts, a front shaft which is shorter, and a rear shaft.

The TGB is fitted to the rear end of the tail boom and it comprises power and control modules contained in one housing.


The TGB is splash-lubricated and comprises a visual oil level indicator and a chip detection device (another «GB CHIP» caution light).

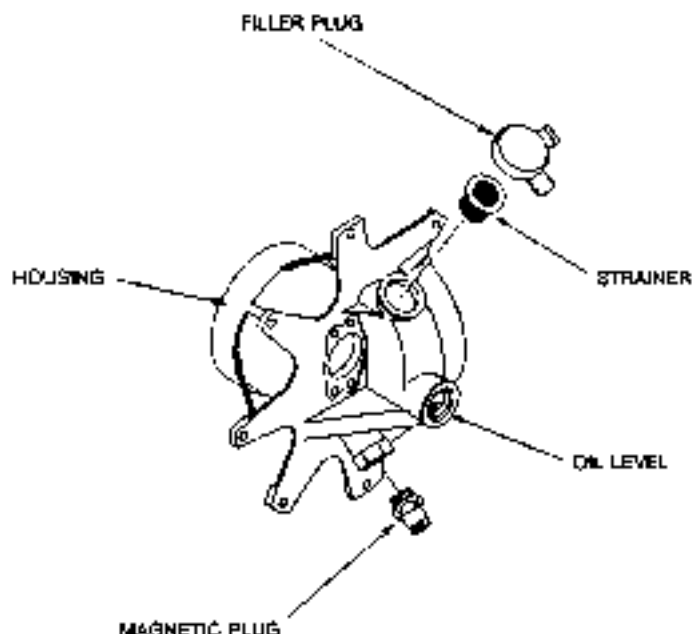

MV-EC120-REV4.02E

Figure 7 - 17 : Tail gear box

7.6.2 CYCLIC STICK GRIP

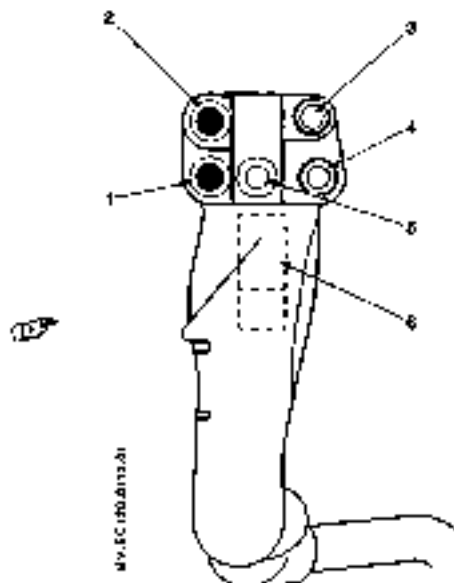

- | | |
|--------------------------------------|-------------------------------|
| 1 - Radio frequency selection switch | 4 - AFCS release pushbutton * |
| 2 - Four-way mirror switch * | 5 - Camera pushbutton * |
| 3 - Cargo release pushbutton * | 6 - LCS switch |

* OPTIONAL

Figure 7- 19 : Cyclic stick grip

7.7 HYDRAULIC SYSTEM

7.7.1 GENERAL

The hydraulic system reduces the pilot's workload by providing hydraulic assistance to actuate the main rotor controls. It comprises two separate assemblies :

- a hydraulic compact unit, supported and driven by the MGB, which generates the hydraulic power, pressure and flowrate
 - a distribution system which comprises flexible pressure and return hoses, supplying the three servo-controls.
- Normal operation

At start-up, hydraulic pressure is nil and the red "HYDR" warning light (9) is lit on the caution and warning panel. When the pressure in the system is between 20 and 30 bar (290 psi and 435 psi) the warning light (9) must go out.

When the pushbutton (6) is released, and the switches (7) are in the off position, the electro-valves (4) and (8) are not energized and are open.

The hydraulic pump (2) operates when the rotor is spinning.

The regulating valve (1) regulates the pressure to between 37 and 40 bar. The hydraulic warning light (9) is out.

The servo-controls are supplied normally.

The nitrogen in the accumulators (3) is compressed by the hydraulic fluid. The pressure of the nitrogen P1 equalizes with the pressure of the hydraulic fluid P2 (Detail A). The accumulator (3) is ready to release its energy (expansion of gas) in case of a pressure drop.

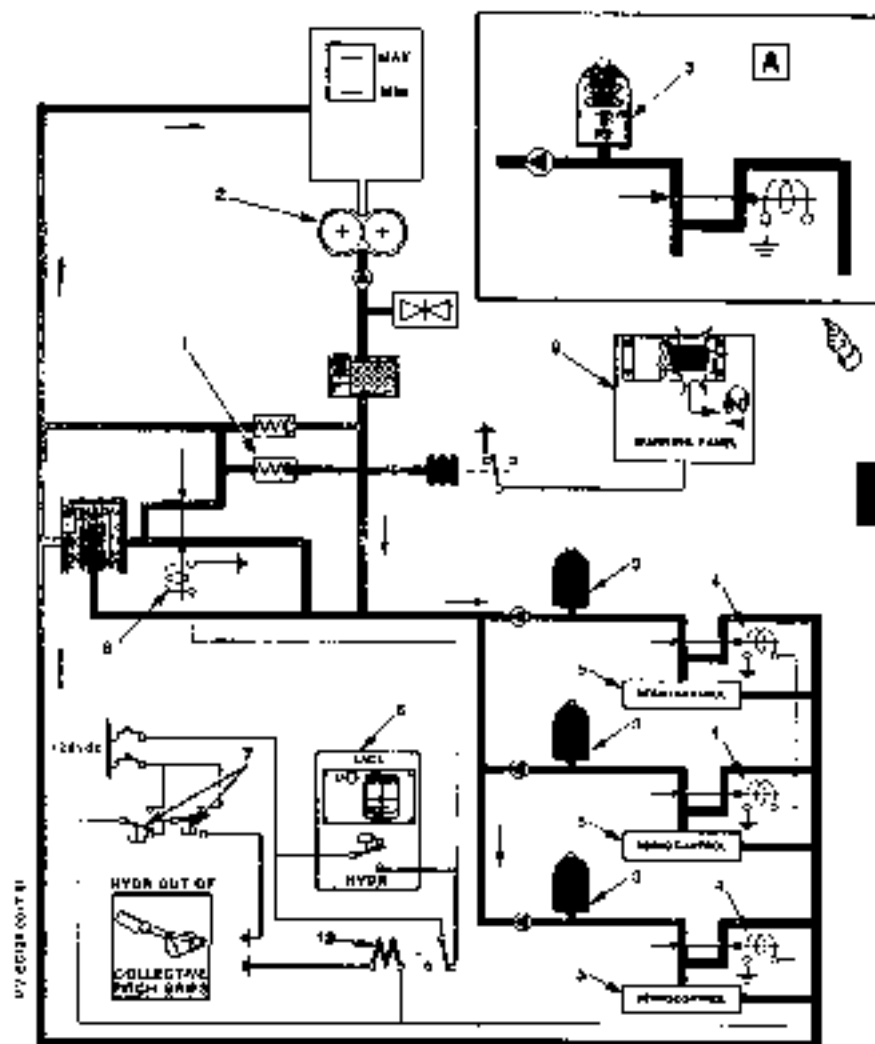


Figure 7 - 20 : Hydraulic system

7.7.2 HYDRAULIC COMPACT UNIT


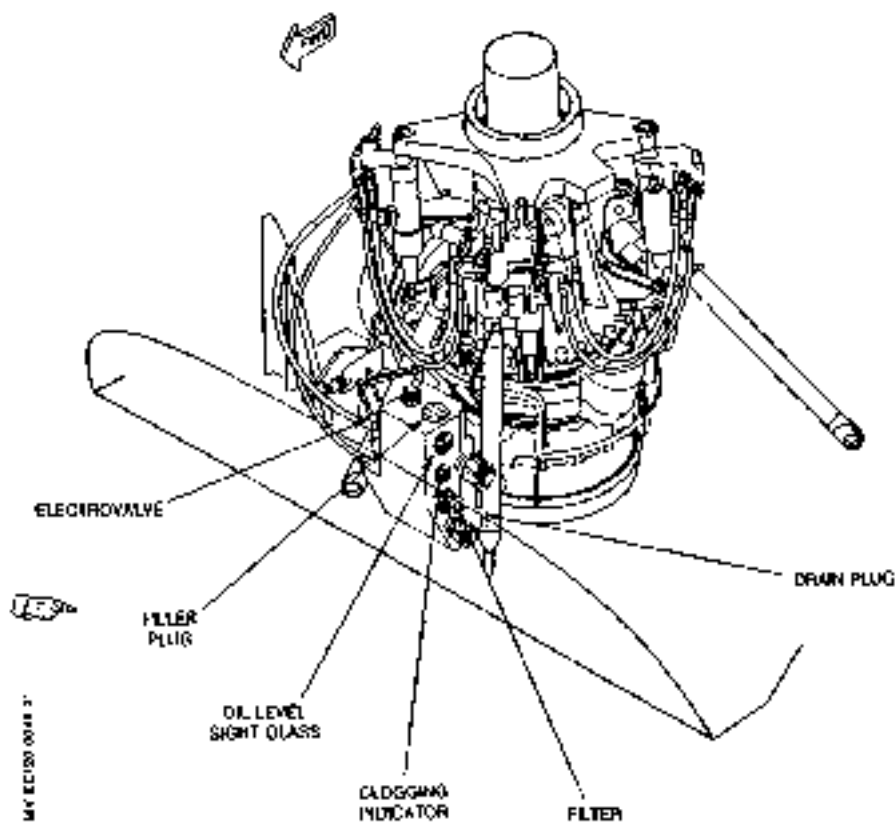


Figure 7 - 21 : Hydraulic compact unit

7.6 FLIGHT CONTROL GRIPS

7.6.1 COLLECTIVE LEVER GRIP

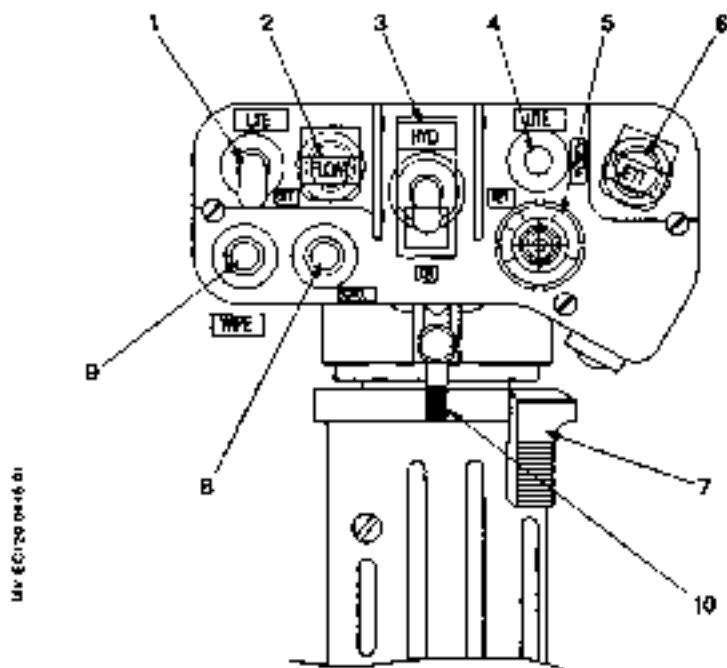

- | | |
|--|--|
| 1 - Fixed landing light switch | 6 - Hoist cable cutter * |
| 2 - Emergency flotation switch * | 7 - Engine starting pushbutton |
| 3 - Hydraulic cut-off switch | 8 - VEMD scroll pushbutton |
| 4 - Retractable landing light switch * | 9 - Windshield wiper pushbutton * |
| 5 - Retractable landing light position control * | 10 - Start position (22° on governor twist grip input) |
- * OPTIONAL

Figure 7 - 18 : Collective lever grip

7.8 ELECTRICAL SYSTEM

7.8.1 GENERAL

The generation and distribution system supplies the electrical network with 28 V DC regulated voltage. The network may be supplied by:

- A starter generator located on the engine accessory gear box.
A battery located in the cargo bay at the tail boom to-fuselage junction frame.
- An external power unit (EPU) plug (if fitted) on the right side (400A max).

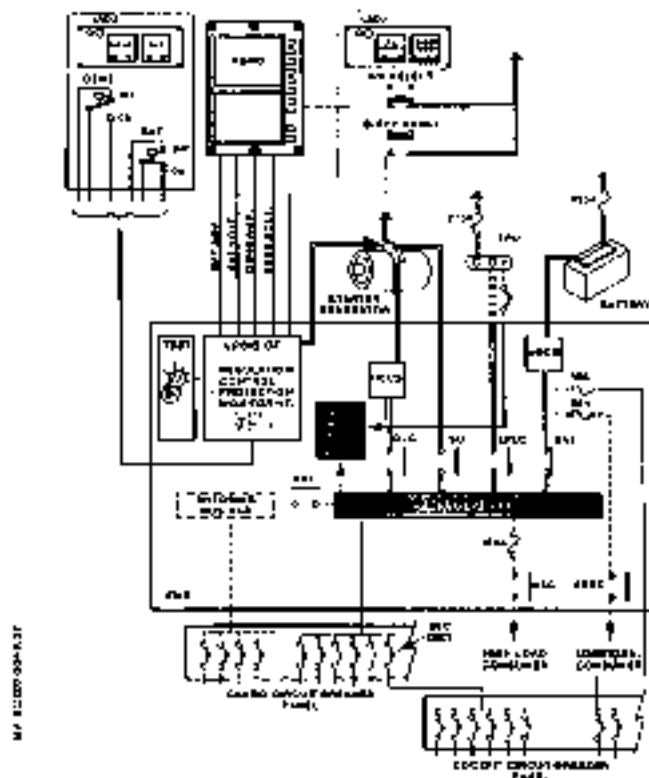


Figure 7 - 22 : Electrical system

7.8.2 DESCRIPTION OF ELECTRICAL SYSTEM

Power sources are connected to the electrical master box (EMB) which ensures the following functions :

- regulation of the starter generator.
- electrical network protection against failure of power sources and distribution.
- connection of power sources to the electrical network
- operating logic (network reconfiguration).
- interface between generation, distribution system and indicating, control and monitoring system.
- its own testability.

Power distribution is ensured by :

- a cargo compartment circuit breaker panel ,
- a cockpit circuit breaker panel (CCBP).

7.8.3 ELECTRICAL DISTRIBUTION

The DC distribution system includes :

- an electrical master box (EMB) (2),
- a cargo compartment circuit breaker panel (3),
- a cockpit circuit breaker panel (CCBP) (1).

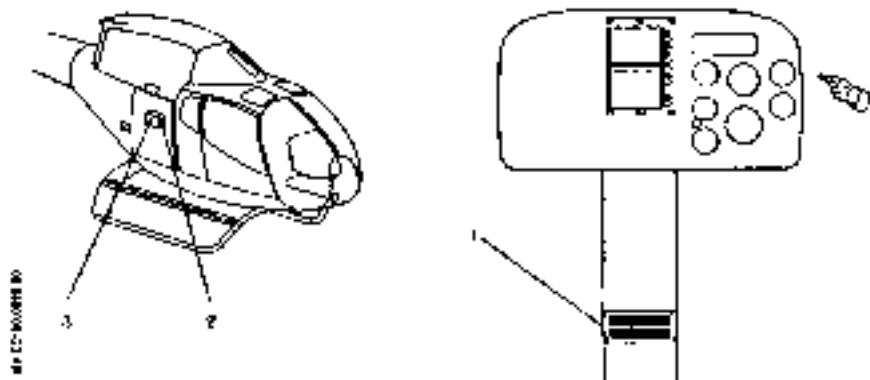



Figure 7 - 23 : DC distribution - General description

*** CARGO COMPARTMENT CIRCUIT BREAKER PANEL**

The cargo compartment circuit breaker panel is installed in front of the EMB.



MV-EC130-0101-02

REFL LT PWR	REFL LT CTRL	SLING CTRL	SLING PWR	CRPT SRV	FANS DOME LT
SEC DEST	FLOAT	VENT FAN CTRL	VENT FAN PWR	LAND LT PWR	LAND LT CTRL
	CLIM	ELECT RETRD	ADI	WARN L	STRKE LT
		ALTI COD	TWR	ASU 1	VENID
				LACU 1	LACU 2
		WS WPNDR		GRSVO CUT OFF	HYD CUT OFF
YOR	DIREC GYRO	ELY	EDGE	FUEL GAUG 1	FUEL GAUG 2
	VEP AK	DCS	GPS	ENG ACC	FUEL PUMP

* Optional equipments

Figure 7 - 24 : Cargo compartment circuit breaker panel
*** COCKPIT CIRCUIT BREAKER PANEL**

The CCBP is installed on the console.

MV-EC130-0102-01

FLOAT		MAP LIGHT				
ICE	PITOT HEAT	POSITION LT	WARNING PANEL 2	ASU 2	VENID	NR NTL

* Optional equipments

Figure 7 - 25 : CCBP

7.9 LIGHTING SYSTEM

7.9.1 INTERIOR LIGHTING

• GENERAL

Interior lighting is provided by :

- a spot light located on the overhead panel, for normal instrument panel lighting.
- two map lights on the overhead panel, which are supplied directly by the battery, for instrument panel and console emergency lighting.
- integral lighting of console instruments (including standby compass).
- LCD displays on VEMD and NR/NF indicator.
- CWP integral lighting.
- a dome light for the passengers.
- an internal light for the stand-by compass.

• CONTROLS

Except for the map lights, the interior lighting is controlled by the OFF/DAY/NIGHT switch, the general lighting potentiometers on the LACU, and the NR/NF lighting potentiometer :

- OFF : the spot light and console instrument lighting are off; the LCD displays and CWP lights are at nominal brightness.
- DAY : the spot light and console instrument lighting are on ; the LCD displays and CWP lights are at nominal brightness.
- NIGHT : the spot light and console instrument lighting are on ; the LCD displays and CWP lights are dimmed.

The brightness of the spot light and console instrument lighting can be adjusted using the general lighting potentiometers

- Each map light is switched on by rotating the head of the light. Brightness is adjusted using a potentiometer located near the light.
- The passenger dome light is controlled by a switch located in front of the light.
- The stand-by compass light is controlled by a switch located on the compass.
- The brightness of LCD displays on NR/NF indicator (1) can be adjusted using the NR/NF lighting potentiometer (2) when the LACU switch is on NIGHT position.

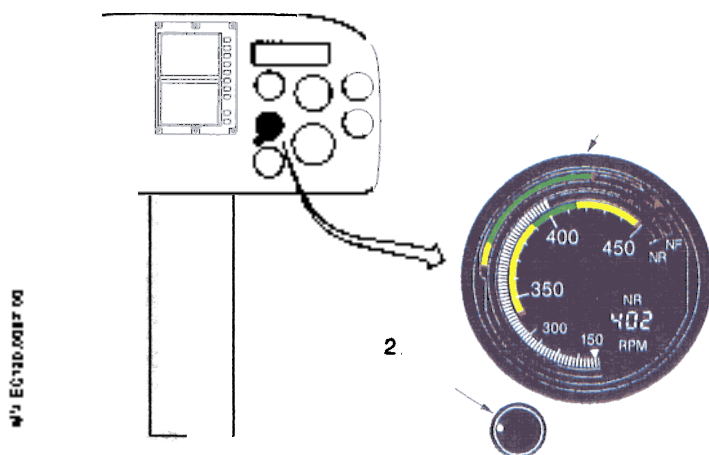


Figure 7 - 26 : NR/NF indicator and lighting potentiometer

7.9.2 EXTERIOR LIGHTING

The exterior lighting comprises position lights, anticollision light and a fixed landing light

The position lights and anticollision light are switched ON/OFF by POS.LIGHT and A COL LIGHT LACU pushbuttons. The landing light is switched ON/OFF by a switch on the collective lever grip

7.10 CABIN VENTILATION / HEATING AND DEMISTING

7.10.1 AIR GENERATION

In flight, some outside air taken in through the front air intake, is diverted into the RH forward cowling compartment by the ventilation scoop. This air crosses the P2 venturi nozzle where it is mixed with P2 air. This air then supplies the distribution system via a hole in the cabin ceiling.

The cabin air distribution system comprises a duct fitted underneath the cabin ceiling and positioned on the aircraft center line. This duct is divided into two arms.

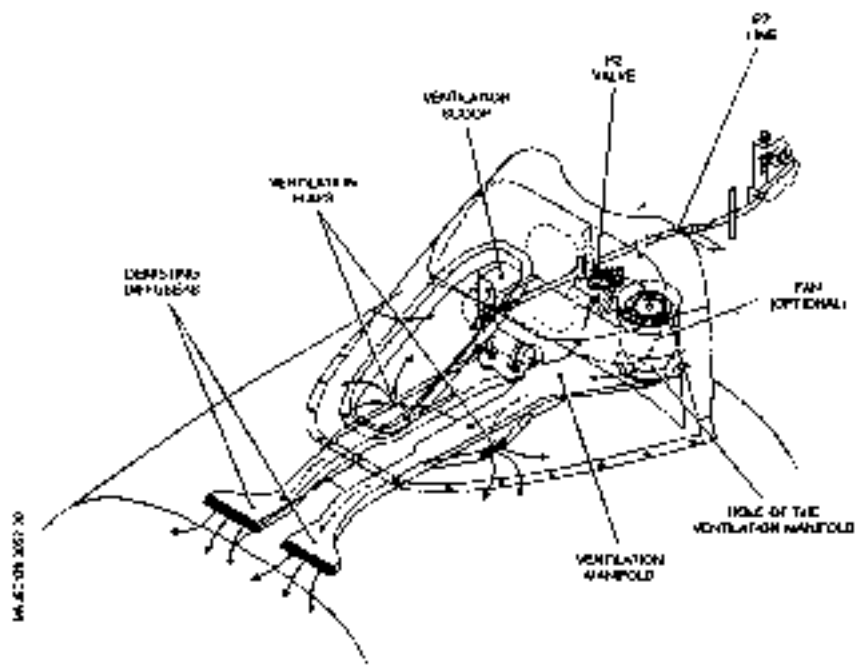


Figure 7 - 27 : Air generation

7.10.2 CONTROLS AND MONITORING

• VENTILATION CONTROL

The ventilation is controlled by adjusting louvres:

- Open/closed.
- Air flow adjustment.

• HEATING AND DEMISTING CONTROL

The warm air temperature setting is performed by the P2 gate valve control knob located on the cabin ceiling.

The louvres have to be closed for demisting operation.

• MONITORING

The crew is informed that the P2 gate valve is in the open position by a P2 flag on the VEMD upper screen

7.11 PITOT-STATIC SYSTEM

• GENERAL

The Pitot tube picks up the total pressure (Pt) which is transmitted to the airspeed indicator. The tube incorporates a resistor for heating. An amber "PITOT" caution light on the caution and warning panel indicates that the heating system is not operating or has failed.

The two static pressure ports pick up the static pressure (Ps) which is transmitted to the pilot's conventional instruments (airspeed indicator, rate-of-climb indicator, altimeter) and to the VEMD for performance calculation.

The bleed valve is used to drain any condensation water which may accumulate within the system.

The air data system comprises a Pitot tube (7), two static pressure ports (1), a bleed valve (8), an altimeter (3), a rate-of-climb indicator (4), an airspeed indicator (2), and a temperature probe (6) connected to the VEMD (5).

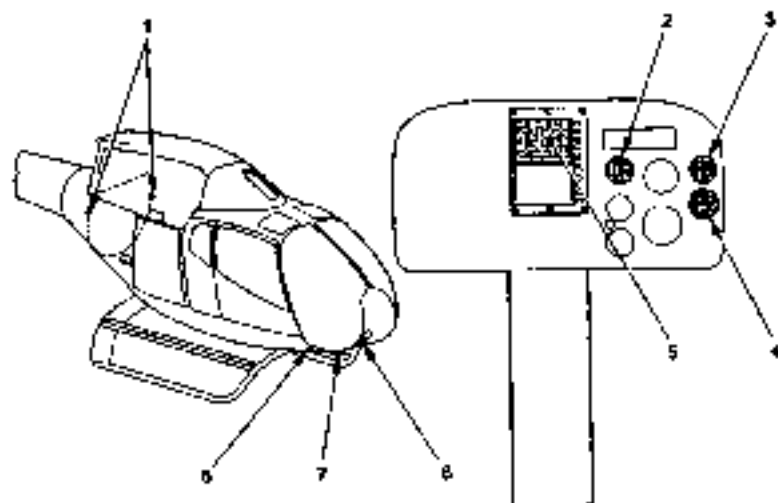


Figure 7 - 28 : Pitot-static system

SECTION 8**HANDLING - SERVICING - MAINTENANCE**

	Page
8.1 GROUND HANDLING	8-1
8.1.1 EQUIPMENT REQUIRED	8-1
8.1.2 HANDLING	8-1
8.2 SERVICING INSTRUCTIONS	8-3
8.2.1 FUELS	8-3
8.2.2 FUEL ADDITIVES	8-3
8.2.3 LUBRICANTS	8-4
8.2.4 HYDRAULIC FLUIDS	8-5
8.2.5 REFUELLING	8-5
8.3 TEST SCHEDULE	8-8
8.3.1 GENERAL	8-8
8.3.2 TEST SHEETS	8-9
8.4 DAILY OPERATING CHECKS	8-25
8.4.1 INSPECTION ASSOCIATED WITH THE FLIGHTS OF THE DAY	8-25
8.4.2 OPERATION OF OPTIONAL INSTALLATIONS	8-32
8.4.3 COMMISSIONING IN COLD WEATHER CONDITIONS	8-33

LIST OF FIGURES

	Page
FIGURE 8-1 : TOWING AND MANUAL POSITIONING DEVICE	8-2
FIGURE 8-2 : FILLER PLUG AND ELECTRO-STATIC CONNECTOR LOCATION	8-5
FIGURE 8-3 : SEQUENCE OF CHECKS.....	8-27

8.1 GROUND HANDLING

8.1.1 EQUIPMENT REQUIRED

- For moving the aircraft by hand :
 - single or twin handling (optional) wheels.
 - jacking lever.
- For towing the aircraft with a tractor :
the above-mentioned equipment, plus :
 - a towing bar installation.

8.1.2 HANDLING

- Moving the helicopter by hand
On prepared ground
 - Position the ground handling wheels on the mounting studs according to aircraft balance.
 - Install ground handling wheels (wheels outside skids).
 - Check that wheels are correctly locked (see Detail A).
Lift the aircraft onto the wheels using a jacking lever.
Lock in this position with retaining pins.

ATTENTION

Do not use the single handling wheels if the weight of the aircraft exceeds 1400 kg (3086 lb).

On rough ground

- Use twin ground handling wheels (optional)
 - Install as described above.
 - Lift the aircraft with the hydraulic towing and manual positioning device (Fig. 8-1).
- Towing the helicopter with a tractor
Prepare the aircraft as above and attach the towing bar.

NOTE

The fenestron handle should always be used to guide the aircraft when towed.

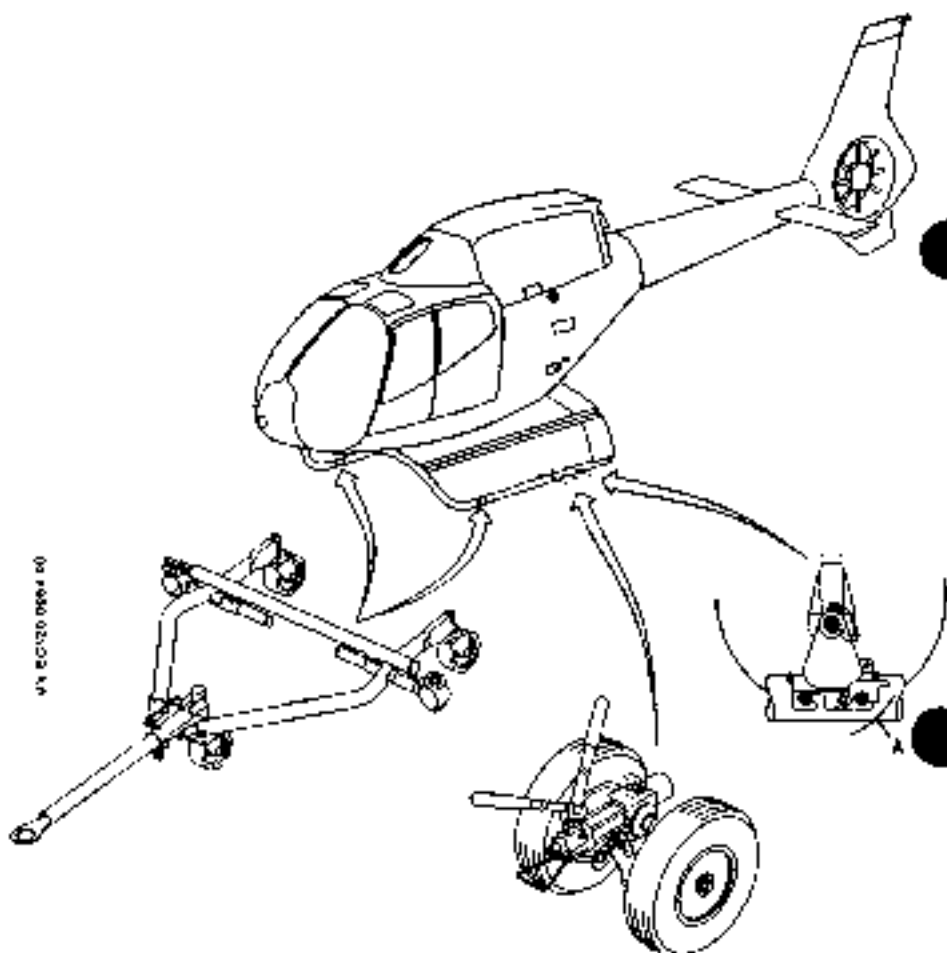


Fig. 3-1 : Towing and manual positioning device

8.2 SERVICING INSTRUCTIONS

8.2.1 FUELS

The authorized fuels are given in the LIMITATIONS sections.

- Capacity

	Litres	U.S. gal	U.K. gal	Kg	lb
TOTAL FUEL					
TANK CAPACITY	410.5	108.5	90.4	326.3	719.4
NON-CONSUMABLE FUEL	4.5	1.19	0.99	3.6	7.89
CONSUMABLE FUEL REMAINING WHEN LIGHT COMES ON	38	10.04	8.37	30.2	66.6

8.2.2 FUEL ADDITIVES

The anti-ice additive when used shall meet the requirements of French Specification AIR 3652 or the equivalent non-French specifications :

MIL1 27686 - D.Eng. RD 2451 - PHILIPS PFA/55 MB - NATO S.748.

The additive is to be mixed with the fuel in the following proportions :

- Minimum concentration, by volume :
 - 0.035 % in a tank already filled.
 - 0.06 % in fuel to be used for refuelling.
- Maximum concentration, by volume : 0.15 %.

If there exists any doubt as to the concentration of additive in the contents of a fuel tank, the fuel is to be drained from the tank and replaced by fuel containing a known proportion of additive within the afore-mentioned limits unless it is possible to measure the concentration using a differential refractometer.

Instructions permitting the correct concentration of additive to be obtained are given by the vendor.

8.2.3 LUBRICANTS

• Engine Oil System

Lubricants and Commercial Descriptions

- Authorized lubricants : Refer to the LIMITATIONS section.
- Commercial descriptions : Refer to the TURBOMECA publications.

Capacity

Engine oil tank and system capacity : 4.6 litres (1.21 U.S. gal)

• Transmission Components

Lubricants

The authorized lubricants are given in the LIMITATIONS section.

Capacity

Main gearbox (system included) : 4 litres (1.05 U.S. gal)

Tail gearbox (system included) : 0.22 litre (0.05 U.S. gal)

8.2.4 HYDRAULIC FLUIDS

- Hydraulic Fluids

The authorized hydraulic fluids are given in the LIMITATIONS section.

- System

- Total capacity of system : 2.2 litres (0.58 U.S. gal)
- Operating pressure : 37 bars (536 psi).

The warning light situated on the warning-caution-advisory panel illuminates when the pressure is lower than 20 bars (290 psi).

8.2.5 REFUELLING

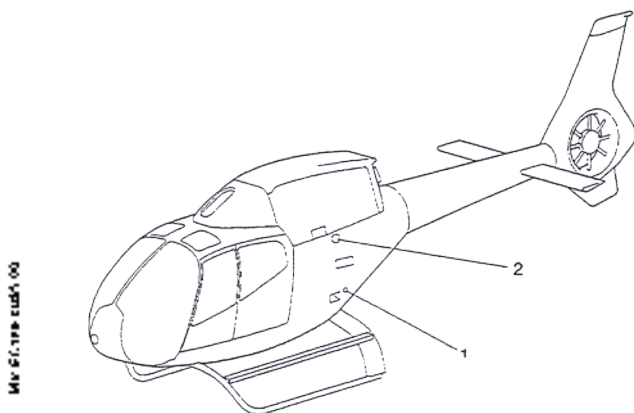


Fig. 8-2 : Filler plug and electro-static connector location.

- **Normal refuelling**
 - Place the helicopter on a level surface.
 - Connect the bowser earthing cable to the electro-static balance connector (1) on the helicopter.
 - Check the quantity of fuel remaining in the tanks on VEMD fuel indicator.
 - Observe the following safety precautions :
 - Ensure that the aircraft electrical power supply is switched off.
 - Place a fire extinguisher near the work area.
 - Strictly prohibit smoking in the security area
 - Prohibit the use of any means of lighting not conforming to the rules of safety.
 - Ensure, during refuelling (or defuelling), that the bowser (or the defuelling unit) is connected to the aircraft by the electro-static balance connectors (1).
 - Strictly prohibit draining of fuel tanks, whether partial or total, inside a hangar or shop.
 - Fill the tanks, monitoring the quantity of fuel delivered on the bowser flowmeter.
 - Position and lock the filler plug (2).
 - Disconnect the bowser earthing connector from the aircraft electro-static balance connector.
 - Check that the difference in the aircraft fuel gauge readings corresponds to the quantity of fuel delivered and determine the corresponding weight.

- Refuelling with rotors spinning.

WARNING

REFUELLING WITH ROTORS SPINNING SHALL BE PERFORMED ONLY AFTER PRIOR AGREEMENT IS GIVEN BY THE COMPETENT AUTHORITY IN COMPLIANCE WITH OPERATIONAL REGULATIONS.

- Strictly comply with the instructions defined below.
- Head aircraft into forward wind sector + 45° if wind above 10 kL.
- Lock the collective pitch lever in full low pitch position.
- Check main rotor is at nominal speed with twist grip in flight position (**TWT GRIP** light "off").
Limit refuelling at 95% in order to prevent any fuel spillage.
- The pilot must always have someone in view who can signal to the mechanic to stop refuelling.

8.3 TEST SCHEDULE

8.3.1 GENERAL

The test sheets are intended to sum up the checks to be carried out in flight or on the ground, with rotors turning either after replacement of main components, or after an extensive operation, or further to periodic inspections.

The test sheets are in the form of reproducible sheets which can directly be filled in by the crew.



Since these checks do not form part of normal helicopter operation, they shall be carried out only by qualified personnel under the operator's responsibility.

8.3.2 LIST OF TEST SHEETS

- No 0 FLIGHT REPORT
- No 1 VEMD CONFIGURATION
- No 2 GROUND RUN
- No 3 HOVER FLIGHT
- No 4 AUTOROTATION 65 kt
- No 5 MAXIMUM CONTINUOUS POWER LEVEL FLIGHT
- No 6 MAX TAKEOFF POWER
- No 7 PREFERENCE INJECTOR VALVE TESTING
(AS SCHEDULED BY THE ENGINE MANUFACTURER)

TEST SHEETS TO BE CONDUCTED ACCORDING TO THE COMPONENT REPLACED :

TEST SHEETS No →	0	1		2				3		4	5			6
		A	B	A	B	C	D	A	B		A	B	C	
COMPONENTS REPLACED ↓														
ENGINE OR MODULE REPLACEMENT	●	/	●	●	●	/	●	●	●	●	●	/	●	●
MGB OR MODULE REPLACEMENT	●	/	/	●	●	●	●	●	●	●	/	●	/	/
MAIN ROTOR HUB	●	/	/	●	●	/	●	●	●	●	/	●	/	
TAIL ROTOR	●	/	/	●	●	/	●	●	/	/	/	/	/	●
HYDRAULIC SYSTEM	●	/	/	/	/	●	/	/	/	/	/	●	/	/
VEMD REPLACEMENT	●	●	●	/	/	/	/	/	/	/	●	/	/	/

8.1.2 LIST OF TEST SHEETS

- No 0 FLIGHT REPORT
- No 1 VEMD CONFIGURATION
- No 2 GROUND RUN
- No 3 HOVER FLIGHT
- No 4 AUTOROTATION 63 kt
- No 5 MAXIMUM CONTINUOUS POWER LEVEL FLIGHT
- No 6 MAX TAKEOFF POWER

**TEST SHEETS TO BE CONDUCTED ACCORDING TO THE
COMPONENT REPLACED**

TEST SHEETS No → COMPONENTS REPLACED ↓	0	1		2			3		4	5			6	
		A	B	A	B	C	D	A	B		A	B	C	
ENGINE OR MODULE REPLACEM.	●	/	●	●	●	/	●	●	●	●	●	/	●	●
MGB OR MODULE REPLACEMENT	●	/	/	●	●	●	●	●	●	●	/	●	/	/
MAIN ROTOR HUB	●	/	/	●	●	/	●	●	●	●	●	/	●	/
TAIL ROTOR	●	/	/	●	●	/	●	●	/	/	/	/	/	●
HYDRAULIC SYSTEM	●	/	/	/	/	●	/	/	/	/	/	●	/	/
VEMD REPLACEMENT	●	●	●	/	/	/	/	/	/	/	●	/	/	/